

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Remax](#) /

› Remax RB-T32 Wireless Bluetooth Earphone User Manual

Remax RB-T32

Remax RB-T32 Wireless Bluetooth Earphone User Manual

Model: RB-T32

INTRODUCTION

Thank you for choosing the Remax RB-T32 Wireless Bluetooth Earphone. This manual provides detailed instructions on how to set up, operate, and maintain your new earphone. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Please check the package for the following items:

- Remax RB-T32 Wireless Bluetooth Earphone
- Charging Cable
- Ear Cushions (various sizes)
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Remax RB-T32 earphone.



Image: The Remax RB-T32 Wireless Bluetooth Earphone, showcasing its compact design and in-ear form factor. This image provides a general view of the product.

The earphone features a compact in-ear design with integrated touch controls for easy operation. It includes a charging port, an LED indicator, and a built-in microphone for calls.

SETUP

1. Charging the Earphone

1. Connect the charging cable to the earphone's charging port.
2. Connect the other end of the cable to a USB power source (e.g., computer, wall adapter).
3. The LED indicator will show the charging status. A full charge typically takes approximately 1-2 hours.
4. Once fully charged, the LED indicator will change or turn off. Disconnect the earphone from the charger.

2. Pairing with a Bluetooth Device

1. Ensure the earphone is charged and turned off.
2. Press and hold the multi-function button (or touch area) on the earphone until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "RB-T32" from the list of found devices.
5. Once successfully paired, the LED indicator will flash blue slowly or turn off, and you will hear a confirmation tone.
6. The earphone will automatically connect to the last paired device when turned on, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the touch area for approximately 3 seconds until the LED indicator flashes blue and you hear a power-on prompt.
- **Power Off:** Press and hold the touch area for approximately 5 seconds until the LED indicator flashes red and you hear a power-off prompt.

Music Playback

- **Play/Pause:** Tap the touch area once.
- **Next Track:** Double-tap the touch area on the right earphone.
- **Previous Track:** Double-tap the touch area on the left earphone.

Call Management

- **Answer/End Call:** Tap the touch area once during an incoming call or an active call.
- **Reject Call:** Press and hold the touch area for 2 seconds during an incoming call.

Volume Control

- **Increase Volume:** Triple-tap the touch area on the right earphone.
- **Decrease Volume:** Triple-tap the touch area on the left earphone.

Voice Assistant

- **Activate Voice Assistant:** Press and hold the touch area for 2 seconds (when not on a call) to activate your device's voice assistant (e.g., Siri, Google Assistant).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earphone. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the earphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the earphone regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.
- **Water Resistance:** This earphone is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Solution
Earphone does not power on.	Ensure the earphone is fully charged.

Problem	Solution
Cannot pair with a device.	<p>Ensure the earphone is in pairing mode (LED flashing red/blue).</p> <p>Make sure Bluetooth is enabled on your device.</p> <p>Move the earphone closer to your device.</p> <p>Forget "RB-T32" from your device's Bluetooth list and try pairing again.</p>
No sound or low volume.	<p>Adjust the volume on both the earphone and your connected device.</p> <p>Ensure the earphone is properly connected to your device.</p> <p>Check if the earphone is charged.</p>
Intermittent connection.	<p>Ensure there are no obstructions between the earphone and your device.</p> <p>Avoid strong electromagnetic interference.</p> <p>Keep the earphone within the effective Bluetooth range (typically 10 meters).</p>

SPECIFICATIONS

Feature	Detail
Brand	Remax
Model Name	RB-T32
Connectivity Technology	Wireless (Bluetooth)
Headphones Form Factor	In Ear
Control Type	Volume Control (Touch)
Compatible Devices	Multi-device compatible
Included Components	Ear Cushions
Age Range Description	Adult
Color	Black

WARRANTY AND SUPPORT

The Remax RB-T32 Wireless Bluetooth Earphone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact your local Remax distributor or the retailer where you purchased the product. Keep your proof of purchase for warranty validation.

