

DIGITNOW B700-UK

DIGITNOW Bluetooth Record Player Instruction Manual

Model: B700-UK

1. PRODUCT OVERVIEW

The DIGITNOW B700-UK Bluetooth Record Player is a versatile audio system designed for vinyl enthusiasts and modern music listeners. It features a 3-speed turntable, built-in stereo speakers, Bluetooth connectivity for wireless streaming, USB encoding to convert LPs to MP3s, FM radio, and multiple input/output options including Aux-in, earphone socket, and RCA out. A remote control is also included for convenient operation.



Figure 1.1: Front view of the DIGITNOW Bluetooth Record Player.



Figure 1.2: The DIGITNOW record player with its dust cover open, revealing the turntable and control panel.

2. SAFETY PRECAUTIONS

To ensure safe operation and prolong the life of your device, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- DIGITNOW Bluetooth Record Player (Model B700-UK)
- Remote Control
- Dust Cover

- 45 RPM Adapter
- Auxiliary Input Cable
- Headphone Jack Cable
- Power Adapter
- Instruction Manual (this document)

4. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your record player:



Figure 4.1: Top view diagram of the turntable components.

1. **Lifting Arm:** Used to raise and lower the tone arm.
2. **Auto Stop Control Switch:** Toggles the auto-stop function for records.
3. **Turntable Speed Selector:** Allows selection of 33, 45, or 78 RPM.
4. **Cartridge with Stylus:** Reads the grooves of the record.
5. **45 RPM Adapter:** Used for playing 7-inch records with a large center hole.
6. **Platter:** The rotating surface where the record is placed.



Figure 4.2: Front control panel of the record player.

USB Interface: For connecting USB drives for MP3 playback or recording.

AUX IN: 3.5mm input for connecting external audio devices.

Headphone Socket: 3.5mm output for private listening.

REC Button: Initiates recording to USB.

TS (One-Click Split) Button: Splits audio tracks during recording.

MODE Button: Switches between LP, Bluetooth, FM Radio, and AUX modes.

Volume Control Knob: Adjusts the master volume.

Power Switch Button: Turns the unit on/off.

Playback Control Buttons: Play/Pause, Previous, Next, Fast Forward, Rewind for recorded audio.

Love for Friends or Families CHRISTMAS & BIRTHDAYGIFT



Figure 4.3: Rear connection panel of the record player.

FM Antenna: For improved FM radio reception.

DC IN 5V: Power input port.

RCA Output (Line Out): For connecting to external amplifiers or powered speakers.

5. SETUP

Follow these steps to set up your record player:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Power Connection:** Connect the provided power adapter to the "DC IN 5V" port on the back of the unit and plug the other end into a wall outlet. The unit will automatically power on and display "LP" mode.
3. **Optional External Speakers:** If you wish to use external powered speakers, connect one end of an RCA cable (not included) to the "Line Out" ports on the back of the record player and the other end to the input of your active speakers.
4. **FM Antenna:** Extend the FM antenna on the back of the unit for optimal radio reception.

Your browser does not support the video tag.

Video 5.1: An unboxing and setup guide for the DIGITNOW Bluetooth Record Player, demonstrating initial connections and features.

Your browser does not support the video tag.

Video 5.2: A brief overview of the DIGITNOW Bluetooth Record Player's setup and key functionalities.

6. OPERATING INSTRUCTIONS

6.1 Playing Vinyl Records

1. Ensure the unit is powered on and in "LP" mode (default).
2. Place a vinyl record on the turntable platter. If playing a 7-inch record with a large center hole, use the included 45 RPM adapter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the Turntable Speed Selector.
4. Gently push the Lifting Arm lever to raise the tone arm.
5. Carefully move the tone arm over the desired starting track of the record.
6. Gently push the Lifting Arm lever back to lower the tone arm onto the record. Playback will begin.
7. To stop playback, raise the tone arm using the lever, return it to its rest, and then lower the lever. The turntable will stop spinning when the tone arm is rested.
8. The Auto Stop Control Switch can be set to ON to automatically stop the turntable when the record ends, or OFF for continuous play.

3 Speed:33,45,78 RMP

3 Size of Records: 7",10",12"



Figure 6.1.1: The record player supports 3 speeds (33, 45, 78 RPM) and three record sizes (7", 10", 12").

6.2 Bluetooth Connection

1. Press the "MODE" button on the front panel until "BLUE" appears on the LED display. The unit is now in Bluetooth pairing mode.
2. On your smartphone or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "B700" from the list of devices to pair. Once connected, you can stream audio wirelessly to the record player's speakers.



Enjoy Wireless Music Freely

Pair Your Phone Instantly



Figure 6.2.1: Easily pair your smartphone via Bluetooth to stream music wirelessly.

6.3 USB Playback and MP3 Encoding

- 1. USB Playback:** Insert a USB flash drive into the USB port on the front panel. The unit will automatically switch to USB mode and begin playing compatible audio files. Use the playback control buttons (Play/Pause, Previous, Next, Fast Forward, Rewind) to navigate tracks.
- 2. MP3 Encoding (Recording Vinyl to USB):**
 - Ensure a USB flash drive is inserted.
 - Start playing a vinyl record as described in Section 6.1.
 - Press the "REC" button on the front panel. The unit will begin recording the audio from the vinyl to the USB drive in MP3 format.
 - To split tracks during recording, press the "TS" (One-Click Split) button. This will create a new MP3 file for the next track.
 - Press "REC" again to stop recording.

Vinyl-to-MP3 Encoding

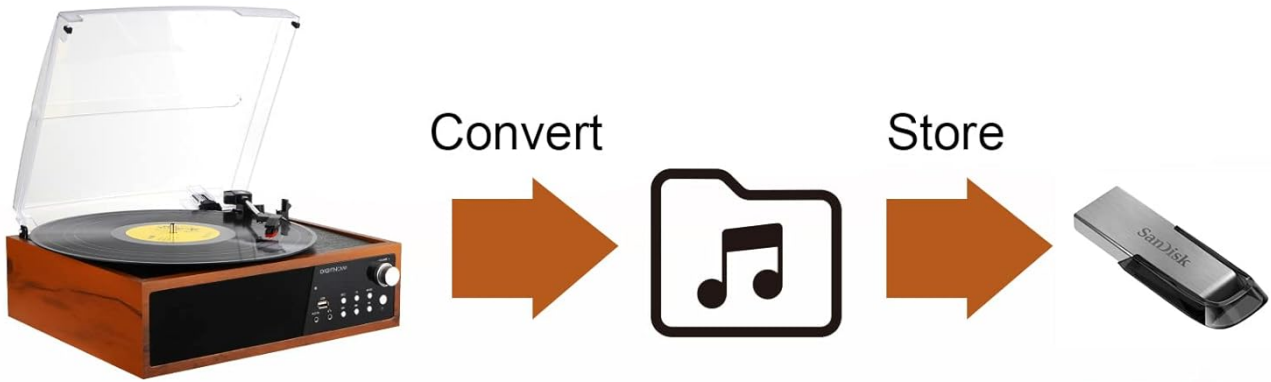


Figure 6.3.1: Convert your vinyl collection to MP3 digital files and store them on a USB drive.

6.4 FM Radio

1. Press the "MODE" button until "FM" appears on the LED display.
2. Use the Previous/Next buttons to manually tune to desired radio stations.
3. To automatically scan and save stations, press and hold the Play/Pause button. The unit will scan and store up to 20 FM stations.
4. Use the Previous/Next buttons to cycle through saved stations.

6.5 AUX Input

Connect external audio devices (e.g., MP3 players, smartphones) to the record player using a 3.5mm audio cable (Auxiliary Input Cable included).

1. Connect one end of the 3.5mm audio cable to the "AUX IN" port on the front panel of the record player.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the "MODE" button until "AUX" appears on the LED display.
4. Play audio from your external device. The sound will be output through the record player's speakers.



Figure 6.5.1: The front panel offers convenient Aux In, Headphone, and USB connectivity options.

6.6 Headphone Output

For private listening, connect headphones to the 3.5mm Headphone Socket on the front panel. The internal speakers will automatically mute when headphones are connected.

6.7 Remote Control

The included remote control allows for convenient operation from a distance. It can control power, mode selection, volume, and playback functions for USB and recorded audio.



Figure 6.7.1: The record player comes with a remote control for ease of use.

7. MAINTENANCE

Proper care and maintenance will ensure the longevity of your record player:

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Cleaning the Stylus:** Use a soft brush, specifically designed for stylus cleaning, to gently brush the stylus from back to front. Do not use excessive force.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust and debris.
- **Record Care:** Handle records by their edges. Store them vertically in their sleeves to prevent warping and dust accumulation.

8. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure the power adapter is securely connected to the unit and a working power outlet.
No sound from speakers	Volume too low; incorrect mode selected; headphones connected; external speakers not connected properly.	Increase volume. Press MODE button to select correct source. Disconnect headphones. Check RCA cable connections to external speakers.
Turntable not spinning	Tone arm not lifted; auto-stop engaged prematurely.	Ensure the tone arm is lifted from its rest. Check the Auto Stop Control Switch.
Bluetooth not connecting	Unit not in Bluetooth mode; device not discoverable; incorrect device selected.	Press MODE until "BLUE" is displayed. Ensure Bluetooth is enabled on your device and search for "B700".
Poor radio reception	FM antenna not extended or poor signal area.	Fully extend the FM antenna. Try repositioning the unit for better reception.

9. SPECIFICATIONS

- **Brand:** DIGITNOW
- **Model Number:** B700-UK
- **Connectivity Technology:** Bluetooth, USB
- **Maximum Rotational Speed:** 78 RPM (Supports 33/45/78 RPM)
- **Included Components:** Remote Control, Dust Cover, 45 RPM Adapter, Auxiliary Input Cable, Headphone Jack Cable
- **Special Feature:** Portable
- **Material:** Plastic
- **Style:** Modern
- **Colour:** Multicolor
- **Compatible Devices:** Personal Computer, Tablet, Headphone, Smartphone
- **Motor Type:** DC Motor
- **Package Dimensions:** 37.1 x 33.9 x 18.7 cm
- **Item Weight:** 380 g
- **Batteries:** 2 AAA batteries required (for remote control)
- **Date First Available:** 12 July 2021

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the DIGITNOW official website or your purchase documentation. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the [product page on Amazon.co.uk](#).