

[Manuals.plus](#) /

> [uehba](#) /

> uehba Universal Replacement Remote Control for Mitsubishi Electric Mr Slim Air Conditioners (Models MSZ-GL06NA, MSZ-GL09NA, MSZ-GL12NA, MSZ-GL15NA)

uehba 730637325299

uehba Universal Replacement Remote Control Instruction Manual

Brand: uehba | **Model:** 730637325299

INTRODUCTION

This manual provides instructions for the uehba Universal Replacement Remote Control, designed for use with various Mitsubishi Electric Mr Slim Air Conditioner models. This remote control is pre-programmed and does not require additional setup for compatible units. It offers essential functions for controlling your air conditioning system.

Compatible Mitsubishi Electric Mr Slim Air Conditioner Models:

- MSZ-GL06NA
- MSZ-GL09NA
- MSZ-GL12NA
- MSZ-GL15NA

SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly. Incorrect polarity can prevent the remote from functioning.

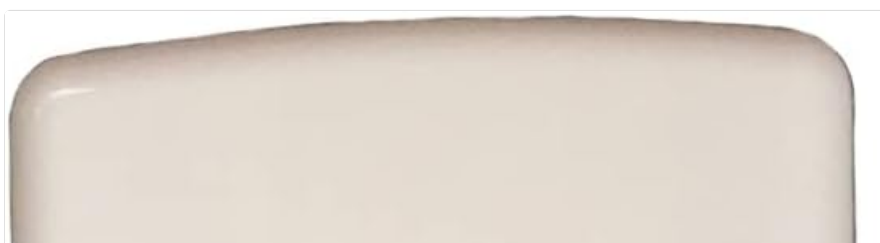






Image: Back of the remote control, illustrating the battery compartment location for installation.

OPERATING INSTRUCTIONS

This remote control is designed to be used directly with compatible Mitsubishi Electric Mr Slim Air Conditioners without programming. Point the remote control directly at the air conditioner unit when operating.

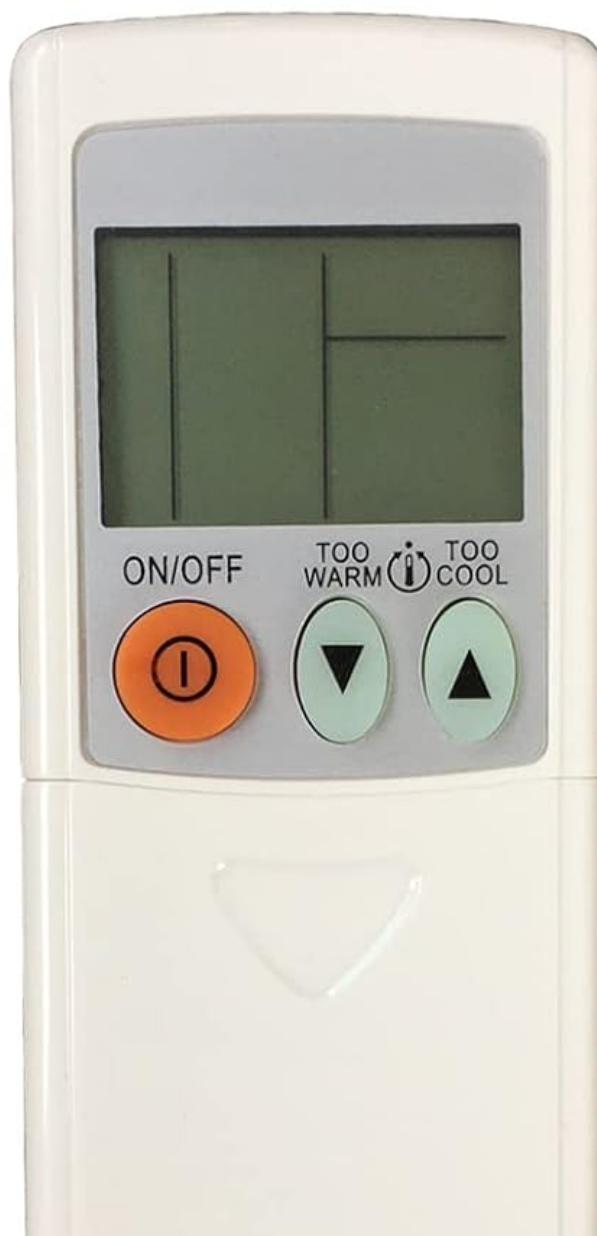




Image: Overview of the remote control, showing both the compact view with the sliding cover closed and the full button layout with the cover open.

Button Functions

- **ON/OFF Button (Orange):** Press to turn the air conditioner unit on or off.
- **Temperature Adjustment Buttons (Green Up/Down Arrows):** Press the up arrow to increase the temperature and the down arrow to decrease it. The display supports both Fahrenheit and Celsius.
- **MODE Button:** Cycles through operating modes such as Cool, Heat, Dry, Fan, and Auto.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **VANE Button:** Controls the direction of the airflow vanes.
- **ECONO COOL Button:** Activates the Econo Cool function for energy-saving operation.
- **SLEEP Button:** Engages the Sleep mode, which adjusts temperature gradually for comfortable sleep.
- **POWERFUL COOL Button:** Activates a powerful cooling mode for rapid temperature reduction.
- **TIME Buttons (START/STOP):** Used to set the ON/OFF timer for the unit. Refer to your air conditioner's main manual for specific timer programming details.
- **CLOCK Button:** Used to set the current time on the remote's display.
- **RESET Button:** Resets the remote control settings.

Note: The remote control displays temperature in both Fahrenheit and Celsius. The specific method to switch between these units is typically integrated into the remote's internal logic or the air conditioner's settings. If the display does not show your preferred unit, consult your air conditioner's original manual or try pressing the temperature adjustment buttons simultaneously for a few seconds, as this can sometimes toggle the display unit.



Image: The remote control in use, displaying current settings and highlighting the primary control buttons.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's display becomes dim or the remote becomes unresponsive. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical

solvents, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner unit.
 - Confirm the remote is pointed directly at the air conditioner's receiver.
- Display is dim or blank:**
 - This usually indicates low battery power. Replace the batteries.
- Air conditioner not responding to specific functions:**
 - Ensure your air conditioner model supports the specific function you are trying to use.
 - Some advanced features may require the original remote or specific settings on the AC unit itself.

SPECIFICATIONS

Brand	uehba
Model Number	730637325299
Compatible Devices	Mitsubishi Electric Mr Slim Air Conditioners (MSZ-GL06NA, MSZ-GL09NA, MSZ-GL12NA, MSZ-GL15NA)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6.3 x 2.17 x 0.59 inches
Item Weight	2.93 ounces
Special Feature	No Programming Required

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly through your purchase platform. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0995N7YYZ>

More documents and user manuals: <https://manuals.plus/>