

[Manuals.plus](#) /

› [uehba](#) /

› uehba Replacement Air Conditioner Remote Control User Manual for Mitsubishi MSZ Series

uehba 0730637325275

uehba Replacement Air Conditioner Remote Control User Manual

COMPATIBLE WITH MITSUBISHI MSZ-A12NA, MSZ-GE09NA, MSZ-A15NA, MSZ-D30NA, MSZ-A24NA-1, KM07M, KM15E

Model: 0730637325275

INTRODUCTION

This document provides instructions for the uehba replacement remote control designed for various Mitsubishi air conditioner models. This remote is a functional replacement and is not an original Mitsubishi product. It is pre-programmed for immediate use with compatible units.

Important Note: The temperature display on this remote control is exclusively in Celsius.

SETUP

1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment. The compartment is a rectangular indentation on the lower half of the remote's back.

2. Initial Use

This remote control is pre-programmed and does not require any setup or code entry. Once batteries are installed, it is ready for use with compatible Mitsubishi air conditioner models.

OPERATING INSTRUCTIONS

The remote control features a sliding cover that conceals additional function buttons. Slide the cover down to access all controls.





Image: Two remote controls are shown side-by-side. The left remote is in its extended state, revealing all function buttons. The right remote is in its compact state, with a sliding cover concealing the lower buttons.

Button Functions



Image: A detailed, angled view of the remote control with its sliding cover fully extended, displaying all buttons and the LCD screen. Buttons are clearly labeled.

- **ON/OFF (Orange Button):** Powers the air conditioner on or off.
- **TOO WARM / TOO COOL (Green Arrows):** Adjusts the temperature setting. The 'TOO WARM' (down arrow) decreases the temperature, and 'TOO COOL' (up arrow) increases it.
- **MODE:** Cycles through operating modes such as Cool, Dry, Fan, Heat (if applicable to your AC unit).
- **FAN:** Adjusts the fan speed (e.g., Auto, Low, Medium, High).
- **ECONO COOL:** Activates or deactivates the Econo Cool energy-saving function.
- **SLEEP:** Engages or disengages the Sleep mode for comfortable nighttime operation.
- **WIDE VANE:** Controls the horizontal airflow direction.
- **POWERFUL COOL:** Activates a powerful cooling mode for rapid temperature reduction.
- **TIME (Up/Down Arrows):** Used to set the timer functions.
- **STOP / START:** Used for setting and activating timer operations.
- **RESET:** Resets certain settings or the remote itself.
- **CLOCK:** Used to set the current time on the remote's display.



Image: A hand is shown holding the remote control, with a finger pressing one of the temperature adjustment buttons. This illustrates typical user interaction.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's display becomes dim or the remote becomes unresponsive. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner unit.
- **Display is dim or blank:**
 - Batteries may be low. Replace them.
- **Air conditioner not responding to specific functions:**
 - Ensure your specific Mitsubishi air conditioner model supports the function you are trying to use. Not all functions may be available on all compatible AC units.

SPECIFICATIONS

Feature	Detail
Model Number	0730637325275
Dimensions (L x W x H)	6.3 x 2.17 x 0.59 inches
Item Weight	2.93 ounces
Batteries Required	2 x 1.5V AAA Alkaline Batteries
Connectivity Technology	Infrared
Special Feature	Ergonomic Design
Max Supported Devices	1 (Air Conditioner)

WARRANTY AND SUPPORT

For any questions, issues, or support regarding this replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase details for specific warranty information, as it may vary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0995NBVM9>

More documents and user manuals: <https://manuals.plus/>