

- Manuals.plus /
- › Lexibook /
 - › Lexibook Frozen Educational Bilingual Laptop JC798FZi1 User Manual

Lexibook JC798FZi1

Lexibook Frozen Educational Bilingual Laptop JC798FZi1 User Manual

Model: JC798FZi1

1. PRODUCT OVERVIEW

The Lexibook Frozen Educational Bilingual Laptop JC798FZi1 is designed to provide an engaging learning experience for children aged 5 and above. This interactive laptop offers a variety of educational activities in both French and English, making it a versatile tool for language development and cognitive skills.



Image 1.1: The Lexibook Frozen Educational Bilingual Laptop with its screen open, featuring characters from Disney's Frozen.

Key Features:

- **Educational Activities:** Includes French and English language learning, mathematics, typing, general knowledge, logic, music, and clock reading.
- **Knowledge Testing:** Fun activities across various levels to learn, test, and optimize knowledge.
- **Games:** Entertaining games designed to test logic, memory, and speed.
- **Optimal Design:** Features a realistic mouse and keyboard, a slim and elegant construction, practical size, and comfortable grip.
- **Music and Melodies:** Musical exercises for an introduction to music, including learning notes, composing, and playing melodies.

2. SETUP

2.1 Unboxing

Carefully remove all components from the packaging. The package should contain one laptop, one computer mouse, and one instruction manual.



Image 2.1: The Lexibook Frozen Educational Bilingual Laptop presented in its original box.

2.2 Battery Installation

1. Locate the battery compartment on the underside of the laptop.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: Batteries are not included and must be purchased separately.

2.3 Connecting the Mouse

1. Locate the mouse port on the side of the laptop.
2. Plug the mouse connector firmly into the port.



Image 2.2: The laptop shown with its wired mouse, ready for use.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

Press the Power button (usually located on the top right of the keyboard) to turn the laptop on. Press and hold the Power button for a few seconds to turn it off.

3.2 Language Selection

The laptop supports both French and English. To switch between languages, locate the language selection button or menu option (refer to the on-screen prompts or the specific button labeled 'Language' or 'Langue').

3.3 Activity Categories

Navigate through the main menu using the arrow keys or the mouse to select from various educational categories:

- **Language:** Activities for French and English vocabulary, grammar, and pronunciation.
- **Mathematics:** Exercises covering basic arithmetic, problem-solving, and number recognition.
- **Typing:** Lessons and games to improve keyboard skills.
- **General Knowledge:** Quizzes and facts on various subjects.
- **Logic:** Puzzles and brain teasers to develop critical thinking.
- **Music:** Learn notes, compose simple melodies, and play pre-programmed tunes.
- **Games:** A selection of fun games to enhance memory, speed, and logical reasoning.



Image 3.1: A child actively using the educational laptop.



Image 3.2: The laptop being used in a relaxed setting.

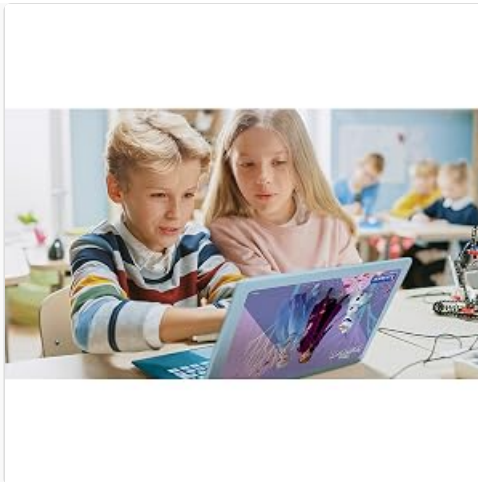


Image 3.3: Two children engaging with the laptop together.

3.4 Using the Keyboard and Mouse

The laptop features a functional keyboard for typing activities and game input. The included mouse allows for easy navigation through menus and interactive elements on the screen.

4. MAINTENANCE

4.1 Cleaning

To clean the laptop, use a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the surface. Avoid getting moisture into any openings.

4.2 Battery Care

- Remove batteries if the laptop will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your Lexibook Frozen Educational Bilingual Laptop, please refer to the following table:

Problem	Possible Cause	Solution
Device does not turn on.	Low or depleted batteries; incorrect battery installation.	Replace with fresh AA batteries, ensuring correct polarity.
Mouse is not responding.	Mouse not properly connected; damaged mouse cable/port.	Ensure the mouse cable is securely plugged into the port. If the issue persists, contact customer support.
Screen is blank or flickering.	Low batteries; internal connection issue.	Replace batteries. If the problem continues, contact customer support.
Sound is not working.	Volume too low; internal speaker issue.	Adjust the volume settings. If there is still no sound, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Lexibook
Model Number	JC798FZi1
Educational Purpose	Counting, Reading, and Writing Skills
Theme	Music, Disney Frozen
Color	Blue / Purple
Age Range (Description)	5+ Years
Item Dimensions (L x W x H)	24 x 18 x 3.6 cm
Item Weight	713 Grams
Power Source	Battery (4 AA batteries required, not included)
Language	English, French
Included Components	1 Laptop, 1 Computer Mouse, 1 Instruction Manual
Material	Plastic
Country of Origin	China

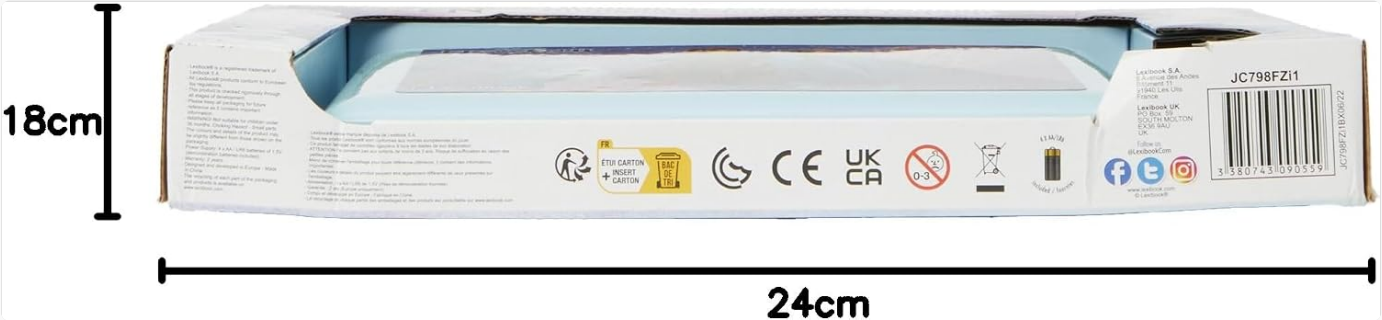


Image 6.1: Product dimensions for the laptop.

7. WARRANTY INFORMATION

This Lexibook product comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Lexibook website or contact their customer service department. You can find more information and contact details on the [Lexibook Brand Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0995NY97F>

More documents and user manuals: <https://manuals.plus/>