

[Manuals.plus](#) /

› [Lexibook](#) /

› Lexibook Frozen II Educational Bilingual Learning Tablet JCPAD002FZi1 User Manual

Lexibook JCPAD002FZi1

Lexibook Frozen II Educational Bilingual Learning Tablet JCPAD002FZi1 User Manual

Model: JCPAD002FZi1

1. INTRODUCTION

Thank you for choosing the Lexibook Frozen II Educational Bilingual Learning Tablet. This interactive device is designed to help young children aged 3 and above learn letters, numbers, words, spelling, and music in both English and French. Its touch-sensitive interface and engaging activities make learning fun and accessible. Please read this manual carefully to ensure proper use and maintenance of your tablet.



Image: A child engaging with the Lexibook Frozen II Learning Tablet.

2. SETUP

2.1 Battery Installation

The Lexibook Frozen II Learning Tablet requires batteries for operation. Please follow these steps to install them:

1. Locate the battery compartment on the back of the tablet.
2. Using a small screwdriver, carefully open the battery compartment cover.
3. Insert the required alkaline batteries (type not specified, typically AAA or AA) according to the polarity indicators (+/-) inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Warning: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Always remove exhausted batteries from the product.

2.2 First Power On

After installing the batteries, press the power button (usually indicated by a power symbol) to turn on the tablet. The device will typically start in a default language or prompt you to select one.

3. OPERATING THE TABLET

The tablet features a touch-sensitive screen with various interactive buttons for different learning activities.



Image: Detailed view of the Lexibook Frozen II Learning Tablet's interactive interface.

3.1 Power On/Off

- To turn on: Press the power button () located at the bottom of the tablet.
- To turn off: Press and hold the power button for a few seconds until the tablet shuts down. The tablet may also have an automatic shut-off feature to conserve battery life.

3.2 Language Selection

The tablet supports both English and French. To switch between languages, locate the 'English/French' or 'Anglais/Français' button on the interface and press it. The tablet will announce the current language.

3.3 Activity Modes

The tablet offers several educational modes:

- **Letters (Lettres):** Press any letter button to hear its name and a corresponding word.
- **Words (Mots):** Press a word button to hear the word and see its associated image.
- **Spelling (Orthographe):** Press a word button, and the tablet will spell out the word.
- **Numbers (Chiffres):** Press a number button to hear the number.
- **Music (Musique):** Engage with musical notes or instrument sounds.
- **Quiz (Où est? / Where Is?):** The tablet will ask a question (e.g., "Where is the letter A?"). Press the correct button to answer.
- **Repeat (Répéter):** Press this button to repeat the last spoken word or instruction.

3.4 Volume Control

Use the volume buttons (typically marked with '+' and '-' symbols) to adjust the sound level to a comfortable setting.

4. MAINTENANCE

4.1 Cleaning

To clean the tablet, gently wipe the surface with a soft, slightly damp cloth. Do not use abrasive cleaners or immerse the tablet in water.

4.2 Battery Care

- Remove batteries if the tablet will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

4.3 Storage

Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on.	Low or depleted batteries; incorrectly installed batteries.	Replace with fresh alkaline batteries, ensuring correct polarity.
No sound or low volume.	Volume set too low; low batteries.	Increase volume using the '+' button. Replace batteries if necessary.
Tablet is unresponsive.	Temporary software glitch; low batteries.	Turn the tablet off and on again. Replace batteries.
Incorrect language is spoken.	Wrong language selected.	Press the 'English/French' button to switch to the desired language.

6. SPECIFICATIONS

- **Brand:** Lexibook
- **Model Number:** JCPAD002FZi1
- **Theme:** Frozen II
- **Educational Objectives:** Number recognition, Musical skills, Letters, Words, Spelling
- **Languages:** English, French
- **Recommended Age:** 3+ years
- **Dimensions (W x L x H):** Approximately 19 cm x 19 cm x 0.1 cm
- **Power Source:** Batteries (Alkaline)
- **Material:** Plastic
- **Country of Origin:** China

7. WARRANTY INFORMATION

This Lexibook product is covered by a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided on the product packaging or visit the official Lexibook website. When contacting support, please have your product model number (JCPAD002FZi1) and proof of purchase readily available.

You can visit the Lexibook store on Amazon for more information: [Lexibook Store](#)

© 2023 Lexibook. All rights reserved. Disney Frozen II © Disney.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0995SV3JS>

More documents and user manuals: <https://manuals.plus/>