

[Manuals.plus](#) /

› [BEPER](#) /

› BEPER P102FRU003 Hand Blender Instruction Manual

BEPER P102FRU003

BEPER P102FRU003 Hand Blender Instruction Manual

Model: P102FRU003

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BEPER P102FRU003 Hand Blender. Please read these instructions carefully before first use and retain them for future reference. The hand blender is designed for blending various food items, including fruits, vegetables, soups, sauces, and baby food.

2. SAFETY INSTRUCTIONS

- Always ensure the power supply voltage matches the rating on the appliance.
- Unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid using attachments not recommended or sold by the manufacturer, as this may cause fire, electric shock, or injury.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not use the appliance outdoors.

3. PRODUCT OVERVIEW

The BEPER P102FRU003 Hand Blender consists of a main motor unit and a detachable blending shaft with stainless steel blades.

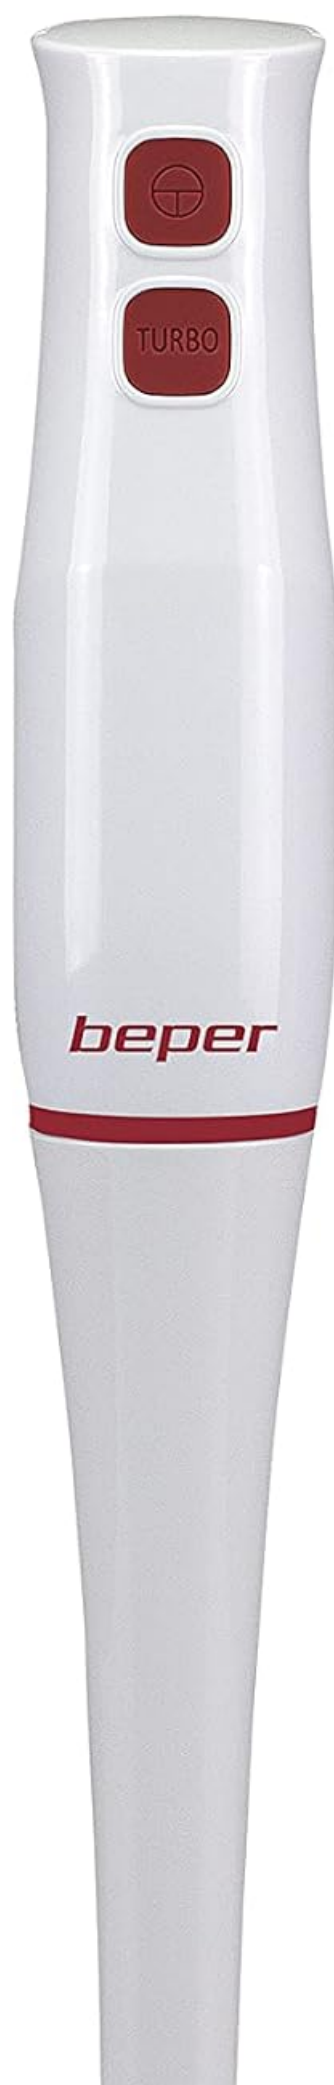




Figure 3.1: The complete BEPER P102FRU003 Hand Blender. This image shows the full assembly of the hand blender, highlighting its compact design and white/red color scheme.



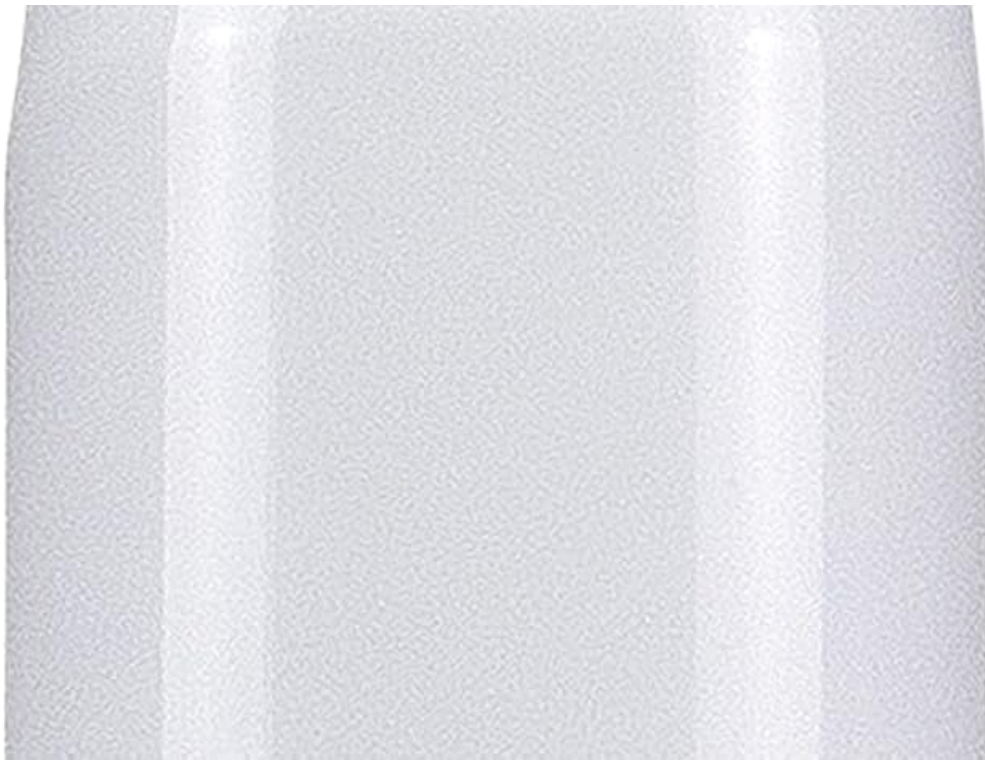


Figure 3.2: Close-up of the control buttons. This image details the two red control buttons on the handle: the standard speed button (I) and the Turbo button.



Figure 3.3: View of the stainless steel blades. This image provides a close-up of the sharp, durable stainless steel blades located at the bottom of the blending shaft.





Figure 3.4: Detachable blending shaft. This image illustrates how the blending shaft can be separated from the motor unit for easy cleaning and storage.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and check the appliance for any damage.
2. **Assembly:** Align the blending shaft with the motor unit and twist until it locks securely into place. Ensure it is firmly attached before use.
3. **Initial Cleaning:** Before first use, clean the detachable blending shaft and blades as described in the 'Maintenance and Cleaning' section. Wipe the motor unit with a damp cloth.

5. OPERATING INSTRUCTIONS

The BEPER P102FRU003 Hand Blender features two speed settings for versatile blending.

1. **Preparation:** Cut food into small pieces for easier blending. Place ingredients in a suitable container, such as a tall beaker or pot.
2. **Immersion:** Immerse the blending shaft into the ingredients before plugging in the appliance. Ensure the blades are fully submerged to prevent splashing.
3. **Power On:** Plug the hand blender into a suitable power outlet.
4. **Speed Selection:**
 - Press the **'I' button** for standard blending speed, suitable for most tasks like making baby food, smoothies, or milkshakes.
 - Press the **'TURBO' button** for maximum power, ideal for tougher ingredients or achieving a finer, more homogeneous consistency quickly.
5. **Blending:** Move the hand blender gently up and down and in circular motions to ensure all ingredients are blended evenly.
6. **Completion:** Release the button to stop the appliance. Unplug the hand blender from the power outlet before removing it from the food.



Figure 5.1: Demonstrating the hand blender in use. A person is shown using the BEPER hand blender to blend ingredients in a tall container, illustrating proper immersion and handling.



Figure 5.2: Hand blender blending soup. This image shows the hand blender effectively processing a bowl of soup, demonstrating its capability for pureeing hot liquids.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your hand blender.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Detachment:** Twist and pull the blending shaft to detach it from the motor unit.
3. **Cleaning the Blending Shaft:** The detachable blending shaft and blades can be washed under running water with a mild detergent or placed in a dishwasher. Handle blades with extreme caution due to their sharpness.
4. **Cleaning the Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
5. **Drying and Storage:** Ensure all parts are thoroughly dry before reassembling or storing the appliance. Store in a dry place.



Figure 6.1: Detachable shaft being placed in a dishwasher. This image shows the ease of cleaning the blending shaft by placing it in a dishwasher.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached to shaft.	Check power cord connection; test outlet with another appliance; ensure shaft is securely locked.
Blades are not rotating.	Food pieces are too large or too hard; blending shaft is clogged.	Unplug, clear any obstructions, cut food into smaller pieces.
Excessive vibration or noise.	Shaft not properly attached; damaged blades.	Re-attach shaft securely; inspect blades for damage and contact support if necessary.

8. SPECIFICATIONS

- **Brand:** BEPER
- **Model:** P102FRU003
- **Power:** 400W
- **Voltage:** 220 Volt
- **Number of Speeds:** 2 (Standard, Turbo)
- **Blade Material:** Stainless Steel
- **Special Features:** Two stainless steel blades, Detachable shaft, Ergonomic handle
- **Product Dimensions:** 5 x 6 x 35 cm
- **Item Weight:** 330 grams

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact BEPER customer service directly. Keep your proof of purchase for any warranty claims.

© 2025 BEPER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question