



[Manuals.plus](#) /

> [Kalorik](#) /

> Kalorik MAXX Plus AFO 47271 SS Digital Air Fryer Oven User Manual

## Kalorik AFO 47271 SS

# Kalorik MAXX Plus AFO 47271 SS Digital Air Fryer Oven User Manual

Model: AFO 47271 SS

## 1. INTRODUCTION

---

Welcome to the Kalorik MAXX Plus Digital Air Fryer Oven. This versatile 10-in-1 appliance combines the functions of an air fryer, oven, grill, roaster, toaster, rotisserie, dehydrator, warmer, broiler, and pizza oven. Featuring 1750W Turbo MAXX technology, it ensures optimized hot airflow for faster cooking. With a generous 26-quart capacity, it can accommodate a 12-pound turkey, a 12-inch pizza, or 9 slices of toast, making it ideal for family meals. The unit also offers 22 smart presets and can sear up to 500°F for perfect caramelization.



Image 1.1: The Kalorik MAXX Plus Digital Air Fryer Oven, a versatile 10-in-1 kitchen appliance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Before operating the appliance, please read all instructions carefully to ensure safe and efficient use. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the power cord, plug, or appliance in water or other liquids.
- Ensure proper ventilation around the appliance during operation.
- Do not touch hot surfaces. Use oven mitts or handles.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Close supervision is necessary when any appliance is used by or near children.

### 3. PARTS AND ACCESSORIES

Your Kalorik MAXX Plus Digital Air Fryer Oven comes with 14 accessories to enhance your cooking experience:

- Air Frying Basket
- Air Rack
- 2-in-1 Steak and Dehydrator Tray
- 2 Dehydration Racks
- Bacon Tray
- Baking Tray
- Rotisserie Spit and Forks
- Rotisserie Handle
- Rack Handle
- Crumb Tray
- 2 Oven Mitts
- 60-Recipe Hardcover Cookbook

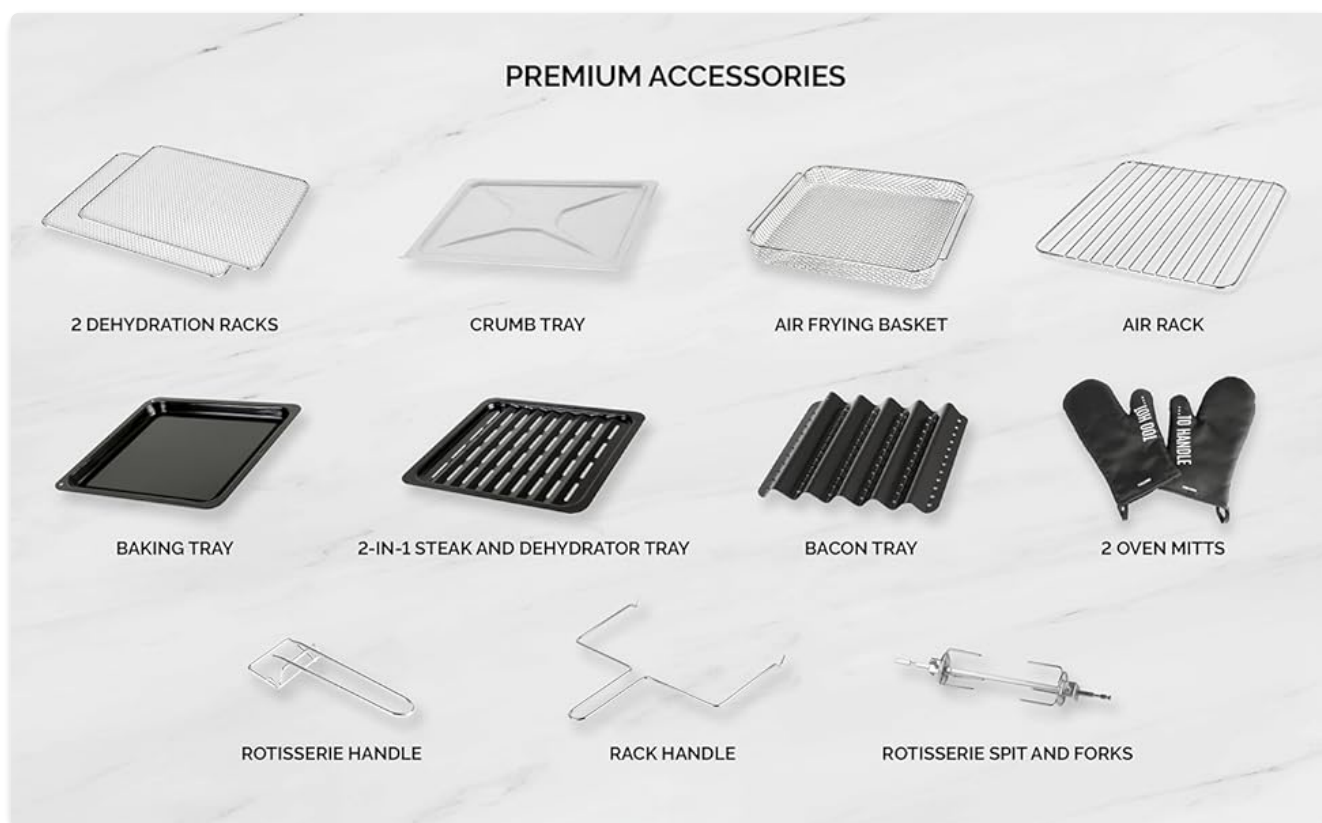


Image 3.1: All 14 accessories included with the Kalorik MAXX Plus Digital Air Fryer Oven.

### 4. SETUP

Follow these steps to set up your new air fryer oven:

1. **Unpack:** Carefully remove all components and accessories from the packaging.
2. **Clean:** Wash all removable parts (baskets, racks, trays) with warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the oven on a flat, stable, heat-resistant surface, ensuring at least 6 inches of clearance from walls and other appliances for proper ventilation.
4. **Initial Burn-in:** Before first use, operate the oven empty for 20 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.

## 5. OPERATING INSTRUCTIONS

### 5.1 Control Panel Overview

The digital control panel allows for precise temperature and time adjustments, as well as selection from 22 smart presets.



Image 5.1: Close-up of the digital control panel with time, temperature, and preset options.

### 5.2 Basic Operation

1. **Power On:** Plug the appliance into a grounded electrical outlet. The display will illuminate.
2. **Select Function:** Use the dedicated buttons for 'AIR FRY' or 'OVEN' to select the primary cooking mode.
3. **Adjust Settings:** Use the rotary dial to adjust the cooking time and temperature. The display will show the selected settings.
4. **Use Presets:** Alternatively, select one of the 22 smart presets (e.g., Chicken, Fish, Fries, Pizza, Roast) for optimized cooking parameters. The selected preset will illuminate on the display.
5. **Start/Stop:** Press the 'START/STOP' button to begin or pause the cooking cycle.

### 5.3 Cooking Functions

The MAXX Plus offers a wide range of cooking capabilities:

- **Air Fry:** Achieve crispy results with little to no oil. Ideal for fries, chicken wings, and other fried foods.
- **Roast:** Perfect for roasting meats, vegetables, and poultry. The rotisserie function allows for even cooking of whole chickens.
- **Bake:** Use for cakes, cookies, and other baked goods.
- **Dehydrate:** Prepare dried fruits, vegetables, and jerky using the dehydration racks.
- **Pizza Oven:** Cook pizzas to perfection with a crispy crust.

- **Searing:** The oven can reach up to 500°F for effective searing of meats and vegetables, locking in flavors.

# GOLDEN CARAMELIZATION

UP TO 500°F FOR PERFECT SEARING AND BROWNING  
ON MEAT, FISH, AND VEGGIES



Image 5.2: Air frying French fries and a pizza simultaneously using the included accessories.

# RESTAURANT-QUALITY MEALS AT THE TOUCH OF A BUTTON

22 PRESET COOKING PROGRAMS



Image 5.3: Roasting various foods, including meat, baked potatoes, and broccoli, on different racks.

Your browser does not support the video tag.

Video 5.1: An overview of the Kalorik MAXX Air Fryer Oven, demonstrating its various cooking functions and features, including air frying and rotisserie.

## 6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

- **Always unplug** the oven and allow it to cool completely before cleaning.
- **Interior:** The full stainless steel interior is designed for easy maintenance. Wipe down the interior walls with a damp cloth and mild detergent. For stubborn food residue, use a non-abrasive sponge.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Accessories:** Most accessories are dishwasher safe, but hand washing with warm, soapy water is recommended for

longevity, especially for items like the rotisserie spit and forks to prevent rust.

- **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards.



Image 6.1: A hand wiping the exterior of the Kalorik MAXX Plus, demonstrating ease of cleaning.

## 7. TROUBLESHOOTING

If you encounter issues with your Kalorik MAXX Plus Digital Air Fryer Oven, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker.
- **Food is not cooking evenly:** Ensure food is arranged in a single layer and not overcrowded. Rotate racks or food halfway through cooking.
- **White smoke coming from the appliance:** This may be due to grease buildup. Clean the interior and crumb tray thoroughly. If smoke persists, discontinue use and contact customer support.
- **Rotisserie spit not rotating:** Ensure the spit is correctly inserted into the motor drive and the food is balanced. Do not overload the rotisserie.
- **Display flickering or unresponsive:** Unplug the appliance for a few minutes, then plug it back in to reset. If the issue continues, contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Model Number	AFO 47271 SS
Brand Name	Kalorik
Capacity	26 Quarts
Output Wattage	1750 Watts

Max Temperature Setting	500 Degrees Fahrenheit
Product Dimensions (D x W x H)	12"D x 15.91"W x 13.58"H
Material	Stainless Steel
Control Method	Touch
Special Features	Temperature Control
Dishwasher Safe (Item)	No

## 9. WARRANTY AND SUPPORT

---

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Kalorik website. Keep your proof of purchase for any warranty claims.

### **Kalorik LLC**

Established in Belgium as a trusted Innovator Since 1930, Kalorik is renowned for superior engineering and groundbreaking technologies in home appliances. Our mission is to make life and cooking faster, easier, and healthier.