Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Fantech /
- > FANTECH GP12 Revolver USB Gaming Controller User Manual

Fantech GP12

FANTECH GP12 Revolver USB Gaming Controller User Manual

Model: GP12 | Brand: Fantech

INTRODUCTION

This manual provides comprehensive instructions for the FANTECH GP12 Revolver USB Gaming Controller. Please read this manual carefully before using the product to ensure proper operation and to maximize your gaming experience.

PRODUCT OVERVIEW

The FANTECH GP12 Revolver is a wired gaming controller designed for an immersive gaming experience on PC and PS3. It features a familiar console-like layout and dual vibration feedback motors.



Image: Front view of the FANTECH GP12 Revolver USB Gaming Controller, showcasing its ergonomic design and button layout.

Key Features:

• Familiar Console-Like Layout: Designed for intuitive control, allowing users to pick up and play without a steep learning curve. The controller's shape and button placement mimic traditional console gamepads.



Image: A user's hands comfortably gripping the FANTECH GP12 Revolver controller, demonstrating its ergonomic design for extended gameplay.

• **Dual Vibration Feedback Motors:** Provides tactile feedback for in-game actions, enhancing immersion with every hit, crash, and explosion. The motors are strategically placed to deliver realistic sensations.



Image: The FANTECH GP12 Revolver controller with visual representations of vibration waves emanating from its sides, illustrating the dual vibration feedback feature.

• Wide Game Compatibility: Compatible with thousands of games on PC and PS3, offering full control across various genres. Simply plug and play to enjoy your favorite titles.



Image: A person using the FANTECH GP12 Revolver controller while gaming on a PC setup, highlighting its compatibility with various gaming platforms.

- Ergonomic Grip: Crafted for comfortable long-term gaming sessions, reducing hand fatigue.
- 17 Buttons: Comprehensive button layout for versatile control, including action buttons, directional pad, analog sticks, and shoulder buttons.
- Wired Connectivity: Reliable USB connection with a 1.8-meter cable, ensuring stable and lag-free gameplay.

SETUP

Connecting the Controller:

- 1. Locate an available USB port on your PC or PlayStation 3 console.
- 2. Insert the USB connector of the FANTECH GP12 Revolver controller firmly into the USB port.
- 3. The system will automatically detect and install the necessary drivers. This process may take a few moments.
- 4. Once installed, the controller's indicator lights will illuminate, signifying it is ready for use.

OPERATING INSTRUCTIONS

Basic Controls:

The GP12 Revolver features a standard gamepad layout. Familiarize yourself with the button assignments for your specific game.

- Directional Pad (D-Pad): Used for precise directional input, typically for movement or menu navigation.
- Analog Sticks: Provide 360-degree movement and camera control. Pressing them down often activates additional functions (L3/R3).
- Action Buttons (A, B, X, Y): Primary interaction buttons for in-game actions such as jumping, attacking, or confirming selections.
- Shoulder Buttons (L1, R1) and Triggers (L2, R2):Located on the top of the controller, used for various actions like aiming, firing, or special abilities.
- START Button: Typically used to pause games or access in-game menus.
- SELECT Button: Often used for map access, inventory, or other secondary functions.

Vibration Feedback:

The dual vibration motors provide immersive feedback during gameplay. This feature is automatically activated in games that support vibration. You will feel vibrations during impacts, explosions, and other significant in-game events.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not use abrasive cleaners or solvents on the controller.
- Store the controller in a safe place when not in use to prevent damage to the cable or buttons.

TROUBLESHOOTING

Controller Not Responding:

- Ensure the USB cable is securely connected to both the controller and the device (PC/PS3).
- Try connecting the controller to a different USB port.
- Restart your PC or PS3.
- Verify that the game you are playing supports gamepad input.

Vibration Not Working:

- Confirm that the game you are playing supports vibration feedback.
- · Check in-game settings to ensure vibration is enabled.
- Ensure the controller is properly connected.

Buttons Not Functioning Correctly:

- Ensure no debris is lodged under the buttons.
- Test the controller with another game or on a different device to isolate the issue.

SPECIFICATIONS

Detailed technical specifications for the FANTECH GP12 Revolver USB Gaming Controller:

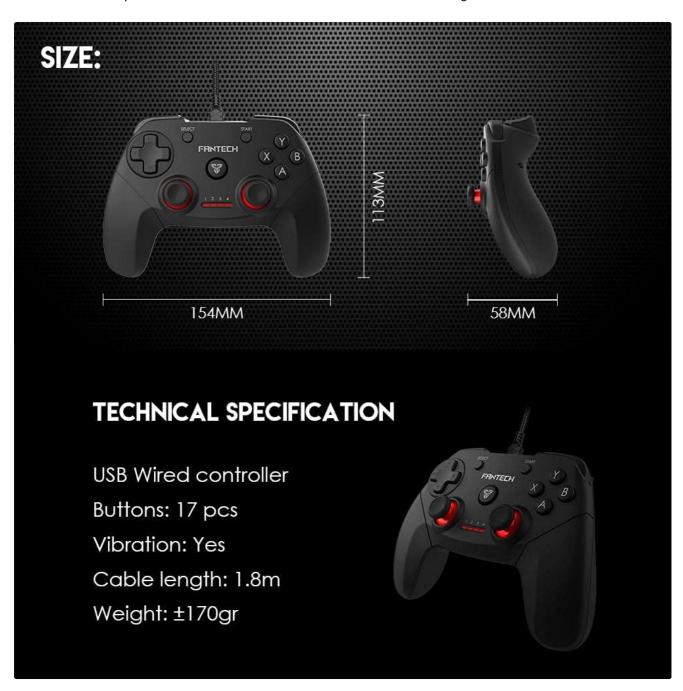


Image: Diagram showing the dimensions (154mm x 113mm x 58mm) and key technical specifications of the FANTECH GP12 Revolver controller.

Feature	Detail
Brand	Fantech
Model	GP12 Revolver

Туре	Wired Gamepad
Connectivity	USB
Buttons	17 pcs
Vibration Feedback	Yes (Dual Motors)
Cable Length	1.8 meters
Dimensions (L x W x H)	154 x 113 x 58 mm (approx.)
Weight	170 grams (approx.)
Color	Black / Grey
Compatible Platforms	PC, PlayStation 3 (PS3)
Operating Systems	Windows 7, Windows 10, PS3

WARRANTY & SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Fantech website. Keep your proof of purchase for warranty claims.

If you encounter any issues not covered in this manual, please contact Fantech customer support for assistance.

Related Documents - GP12



Fantech Revolver GP12 Gaming Controller User Manual

User manual for the Fantech Revolver GP12 gaming controller, covering setup, features, troubleshooting, and specifications for PC and PS3 gaming.



Fantech Revolver GP12 Gaming Controller User Manual

Comprehensive user manual for the Fantech Revolver GP12 gaming controller, detailing features, setup, and operation for PC and PS3.



Fantech Revolver II WGP12 Gaming Controller User Manual

User manual for the Fantech Revolver II WGP12 gaming controller, detailing its features, specifications, and connection instructions.



Fantech Revolver III WGP12S Multi-Platform Gamepad Quick Start Guide

A quick start guide for the Fantech Revolver III WGP12S gamepad, covering specifications, product tour, connection methods, LED indicators, and button functions like thumbstick circularity, calibration, XYAB/YXBA swap, D-pad swap, smart gyros, factory reset, combo swap, turbo, rumble, and macro functions.



Fantech W193D Dual Mode Wireless Mouse Quick Start Guide

A quick start guide for the Fantech W193D dual mode wireless mouse, covering technical specifications, connection instructions for 2.4GHz and Bluetooth, LED indicator status, and warranty information.



Fantech Groove GS304 Dual Mode Gaming Speaker: Quick Start Guide

Get started with your Fantech Groove GS304 gaming speaker. This guide covers specifications, connection instructions, button functions, and important precautions for wired and Bluetooth use.