
Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the vacuum cleaner.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PACKAGE CONTENTS

Your Kirby Ultimate Diamond Edition vacuum cleaner package includes the following components:

- Kirby Ultimate Diamond Edition Upright Vacuum Cleaner Unit
- Upholstery Tool
- Crack and Crevice Tool
- Duster Brush
- Wall Tool
- Floor Tool
- Two Wands
- Pet Tool
- Inflation Tool
- Handheld Tool
- Handheld Shampooer
- Blower
- Corner Wand
- Hose
- Tool Caddy
- 2 GV Bags
- 3 GV Belts
- Turbo Brush Mini Head with geared belt and spinning brush roll



Image: A detailed view of the main power nozzle of the Kirby Ultimate Diamond Edition vacuum cleaner.

SETUP INSTRUCTIONS

Follow these steps to prepare your vacuum cleaner for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Handle Assembly:** Attach the handle to the main vacuum body. Ensure it clicks securely into place.
3. **Bag Installation:** Open the outer cloth bag compartment. Insert a new GV bag, ensuring it is properly seated and sealed around the intake port. Close the compartment securely.
4. **Power Cord:** Unwind the power cord completely before plugging into an electrical outlet.
5. **Attachment Caddy:** Organize your tools in the provided tool caddy for easy access.



Image: The Kirby Ultimate Diamond Edition vacuum cleaner in its upright position, ready for use.

OPERATING INSTRUCTIONS

Your Kirby vacuum is designed for versatile cleaning.

Using the Upright Vacuum

1. **Power On:** Plug the vacuum into a suitable electrical outlet. Press the power button to turn the unit on.
2. **Tech Drive System:** The self-propelled Tech Drive system assists in moving the vacuum forward and backward with minimal effort. Engage this feature for easier maneuverability on carpets.
3. **Height Adjustment:** Adjust the nozzle height to suit different carpet pile heights or hard floors. Refer to the markings on the power nozzle for appropriate settings.
4. **Vacuuming:** Push the vacuum slowly over the area to be cleaned, allowing the brush roll to agitate and lift dirt effectively.

Using Attachments

The Kirby system is highly adaptable with its range of tools.

- **Hose Connection:** To use attachments, detach the main power nozzle and connect the hose to the vacuum's intake port.
- **Tool Selection:** Select the appropriate tool for the task:
 - **Upholstery Tool:** For cleaning furniture and drapes.
 - **Crack and Crevice Tool:** For tight spaces and corners.
 - **Duster Brush:** For delicate surfaces and dusting.
 - **Floor Tool:** For bare floors and large flat surfaces.
 - **Pet Tool:** Specifically designed for removing pet hair from various surfaces.
 - **Turbo Brush Mini Head:** Excellent for upholstery, stairs, and car seats, especially effective for pet hair removal.

- **Handheld Shampooer:** For spot cleaning carpets and upholstery.
- **Blower Function:** The blower can be used for clearing debris from hard-to-reach areas. Consult the full manual for specific instructions on converting to blower mode.



Image: Illustration showing the Kirby vacuum cleaner adapting to various cleaning tasks, from upright vacuuming to using attachments for specialized cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Kirby vacuum. Always unplug the vacuum before performing any maintenance.

Dust Bag Replacement

1. **Check Bag Fullness:** Monitor the dust bag indicator. Replace the bag when it is full or when suction power decreases.
2. **Remove Old Bag:** Open the outer cloth bag compartment. Carefully detach the full disposable bag and dispose of it properly.
3. **Install New Bag:** Insert a new genuine Kirby GV bag, ensuring a tight seal around the intake. Close the compartment securely.

Outer Cloth Bag Cleaning

The outer cloth bag is part of the filtration system and requires periodic cleaning.

- The outer cloth bag has been thoroughly cleaned and sanitized prior to your purchase.
- For future cleaning, detach the outer cloth bag from the vacuum unit.
- Follow the washing instructions provided with the bag or consult the full Kirby manual for proper cleaning methods to maintain filtration efficiency.

Belt Replacement

The drive belts for the brush roll and turbo brush mini head may wear over time. Replace them when you notice a decrease in brush roll rotation or cleaning effectiveness.

- Refer to the detailed instructions in the full Kirby manual for specific steps on accessing and replacing the drive belts.
- Use only genuine Kirby replacement belts to ensure proper fit and performance.



Image: Diagram illustrating the Kirby Micron Magic HEPA filtration system with MicroAllergen Technology, showing airflow and particle capture.

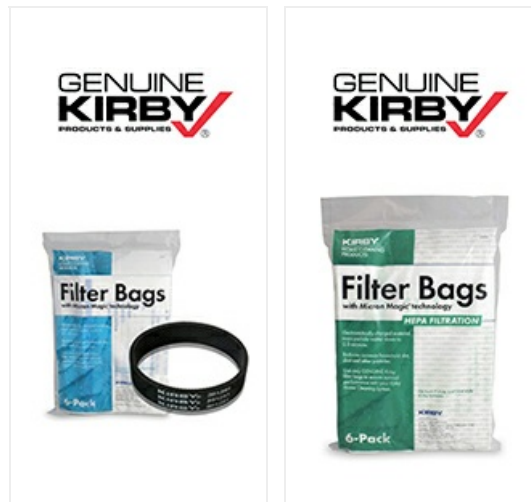


Image: Examples of genuine Kirby filter bags and drive belts, essential for maintaining vacuum performance and filtration.

TROUBLESHOOTING

Before contacting support, review these common issues and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; power outlet fault; damaged cord/plug	Ensure plug is fully inserted. Test outlet with another device. Inspect cord for damage; if damaged, contact service.
Loss of suction	Dust bag full; clogged hose/nozzle; worn belt; filter obstruction	Replace dust bag. Check hose and nozzle for blockages. Inspect and replace drive belt if worn. Clean or replace filters.
Brush roll not spinning	Worn or broken belt; brush roll jammed with debris	Replace drive belt. Remove any hair or debris wrapped around the brush roll.
Unusual noise	Object caught in brush roll or fan; motor issue	Turn off and unplug. Inspect brush roll and fan for obstructions. If noise persists, contact service.

SPECIFICATIONS

- **Brand:** Kirby
- **Model:** Ultimate Diamond Edition
- **Special Feature:** Bagged system

- **Filter Type:** Cloth (with Micron Magic HEPA filtration)
- **Cordless:** No
- **Noise Level:** 70 Decibels
- **Number of Items:** 1 (main unit)
- **Controller Type:** Push Button
- **Control Method:** Touch
- **Style:** Upright, convertible to handheld with attachments
- **Portable:** No (main unit)
- **Number of Handles:** 1
- **Number of Power Levels:** 2
- **Number of Wheels:** 4
- **Indoor/Outdoor Usage:** Indoor
- **UPC:** 689466897296
- **ASIN:** B0999R8P64

WARRANTY AND SUPPORT

This Kirby Ultimate Diamond Edition vacuum cleaner, being a renewed product, is covered by a **5-Year Warranty** provided by GreatVacs.

- The warranty covers the fan, motors, bearings, and transmission.
- The reconditioning process by GreatVacs includes cleaning, sanitizing every part, and replacing any worn components to ensure optimal working order.
- For warranty claims or technical support, please contact GreatVacs directly.
- This warranty is provided by GreatVacs and is not associated with the original Kirby company.

For genuine Kirby parts and accessories, please ensure you purchase from authorized retailers.

