

[manuals.plus](#) /› [Kalorik](#) /› [Kalorik MAXX Plus 6 Quart Digital Air Fryer Instruction Manual FT 47824 SS](#)

Kalorik FT 47824 SS

Kalorik MAXX Plus 6 Quart Digital Air Fryer Instruction Manual

Model: FT 47824 SS

Brand: Kalorik

1. INTRODUCTION

Thank you for choosing the Kalorik MAXX Plus 6 Quart Digital Air Fryer. This versatile 8-in-1 appliance is designed to simplify your cooking experience, offering functions such as frying, baking, roasting, broiling, defrosting, reheating, poaching, and warming meals. Featuring advanced Turbo MAXX Technology and 1750 watts of power, it cooks food efficiently without preheating. This manual provides essential information for safe and effective use of your new air fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The Kalorik MAXX Plus 6 Quart Digital Air Fryer features a sleek stainless steel design with a user-friendly digital control panel. It includes a spacious 6-quart non-stick basket and a trivet for optimal air circulation.

Components:

- Main Unit (Stainless Steel housing)
- Digital Control Panel with LCD Display
- Control Knob
- 6-Quart Removable Basket with Handle
- Non-stick Trivet
- Egg Tray Accessory (for poaching eggs)

Digital Control Panel:

The intuitive LCD display shows time, temperature, and 22 smart presets for various foods. The control knob allows for easy adjustment of settings.



Image: Digital control panel with presets for Air Fry, Fries, Chicken, Wings, Nuggets, Pizza, Burger, Bacon, Ribs, Lamb, Steak, Fish, Salmon, Shrimp, Eggs, Bake, Veggies, Potato, Tofu, Defrost, Reheat, Warm.



Image: Removable 6-quart basket and non-stick trivet.



Image: Air fryer with egg tray accessory for poaching eggs.

4. SETUP

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the unit with a damp cloth.
3. Wash the removable basket and trivet with warm, soapy water. Rinse thoroughly and dry completely.

First Use:

Before first use, it is recommended to run the air fryer empty to eliminate any manufacturing odors. This may produce a slight smell or minimal smoke, which is normal.

1. Place the clean basket and trivet back into the air fryer.
2. Plug the appliance into a grounded electrical outlet.
3. Set the air fryer to 400°F (200°C) for 20 minutes.

4. Allow the cycle to complete. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

The Kalorik MAXX Plus Air Fryer offers both preset cooking options and manual control for customized results.

Basic Operation:

1. Place food in the air fryer basket. Do not overfill.
2. Slide the basket back into the main unit until it clicks into place.
3. Turn the control knob to select a preset or manually adjust time and temperature.
4. Press the Start/Pause button to begin cooking.

Smart Presets:

The air fryer features 22 smart presets for common foods, including Air Fry, Fries, Chicken, Wings, Nuggets, Pizza, Burger, Bacon, Ribs, Lamb, Steak, Fish, Salmon, Shrimp, Eggs, Bake, Veggies, Potato, Tofu, Defrost, Reheat, and Warm. Simply select the desired preset, and the appliance will automatically set the optimal time and temperature.

Manual Settings:

For custom cooking, you can manually adjust the time and temperature:

- **Temperature:** Adjustable from 120°F to 450°F (49°C to 232°C).
- **Time:** Adjustable up to 60 minutes.

Turbo MAXX Technology:

This technology ensures rapid cooking and even results, often eliminating the need for preheating. The 1750 watts of power deliver crispy, golden finishes with little to no oil.

Your browser does not support the video tag.

Video: A demonstration of the Kalorik MAXX Plus Air Fryer's features, including its digital controls, removable basket, and overall design. The video highlights its ease of use and sleek appearance.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

Cleaning the Basket and Trivet:

- The removable 6-quart basket and trivet feature a double-nonstick coating and are dishwasher safe for easy cleanup.
- Alternatively, wash with warm, soapy water using a non-abrasive sponge.
- Ensure all food residue is removed.

Cleaning the Exterior:

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit in water or any other liquid.

Storage:

Ensure the appliance is clean and completely dry before storing. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Kalorik MAXX Plus Air Fryer, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly into the unit until it clicks.
Food is not cooked evenly	Basket is overcrowded; food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
White smoke from appliance	Grease residue from previous use; fatty food cooking.	Clean the basket and trivet thoroughly after each use. For fatty foods, drain excess grease from the bottom of the basket.
Initial 'new appliance' smell/smoke	Manufacturing residue.	This is normal for first use. Run the appliance empty for 20 minutes at 400°F as described in the 'First Use' section.
Electronic display issues (e.g., cycling presets)	Potential electronic malfunction.	Unplug the appliance when not in use. If the issue persists, contact Kalorik Customer Support.

8. SPECIFICATIONS

Feature	Detail
Model Number	FT 47824 SS
Capacity	6 Quarts (5.6 Liters)
Output Wattage	1750 Watts
Voltage	120 Volts
Min Temperature Setting	120°F (49°C)
Max Temperature Setting	450°F (232°C)
Control Method	Touch (Digital) with Control Knob
Special Feature	Programmable, 22 Smart Presets
Material	Stainless Steel
Nonstick Coating	Yes (Double-nonstick coating on basket/trivet)
Dishwasher Safe Parts	Basket and Trivet
Product Dimensions	11.42 x 13.78 x 11.34 inches
Item Weight	11.37 pounds (5.17 Kilograms)
UPC	848052011397

9. WARRANTY AND SUPPORT

Kalorik products are manufactured to high-quality standards. For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Kalorik website. Our customer service team is available to assist with any questions or concerns regarding your appliance.

