

[Manuals.plus](#) /

› [SRJTEK](#) /

› Instruction Manual for SRJTEK 10.1" Logic T10L Tablet Touch Screen Digitizer

SRJTEK T10L

Instruction Manual for SRJTEK 10.1" Logic T10L Tablet Touch Screen Digitizer

Model: Logic T10L

1. PRODUCT OVERVIEW

This manual provides essential information for the SRJTEK 10.1" Touch Screen Digitizer Panel, designed as a replacement part for the Logic T10L Tablet. This component is the outer glass layer responsible for touch functionality and does **not** include the LCD display. It is intended to replace cracked, broken, or non-responsive touch screens.



Image 1.1: The SRJTEK 10.1" Logic T10L Tablet Touch Screen Digitizer, shown alongside the included repair tool kit, adhesive strips, and cleaning wipes. This image displays the complete package contents.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are present and in good condition:

- 1x Touch Screen Replacement for Logic T10L (10.1 inches)
- 1x Repair Tool Kits (may include screwdrivers, prying tools, suction cup, etc.)
- 1x Adhesive (pre-applied or separate strips)



Image 2.1: A clear front view of the 10.1-inch touch screen digitizer panel, showing its rectangular shape and the cutout for the front camera. This is the primary component for touch input.

3. COMPATIBILITY

This touch screen digitizer is specifically designed for the **Logic T10L** tablet model. Please ensure your device is indeed a Logic T10L before attempting installation. Using this part with an incompatible model may result in damage to your tablet or the replacement part itself.

4. INSTALLATION GUIDELINES

Important Notice: This product is a delicate electronic component. Professional technician installation is strongly recommended. No detailed installation manual is included with this product. Attempting installation without prior experience or proper tools may lead to damage to the product or your device, voiding any potential warranty.

If you choose to proceed with installation, please consider the following general advice:

1. **Power Off Device:** Before beginning any repair, ensure your Logic T10L tablet is completely powered off and disconnected from any power source.
2. **Static Discharge:** Take precautions against static electricity, which can damage electronic components. Use an anti-static wrist strap if available.
3. **Disassembly:** Carefully disassemble your tablet, following a reliable repair guide specific to the Logic T10L model (available from third-party repair resources).
4. **Handle with Care:** The digitizer and its ribbon cables are fragile. Handle them gently to avoid bending or tearing.
5. **Adhesive Application:** Ensure the surface where the new digitizer will be placed is clean and free of old adhesive residue. Apply the new adhesive evenly.

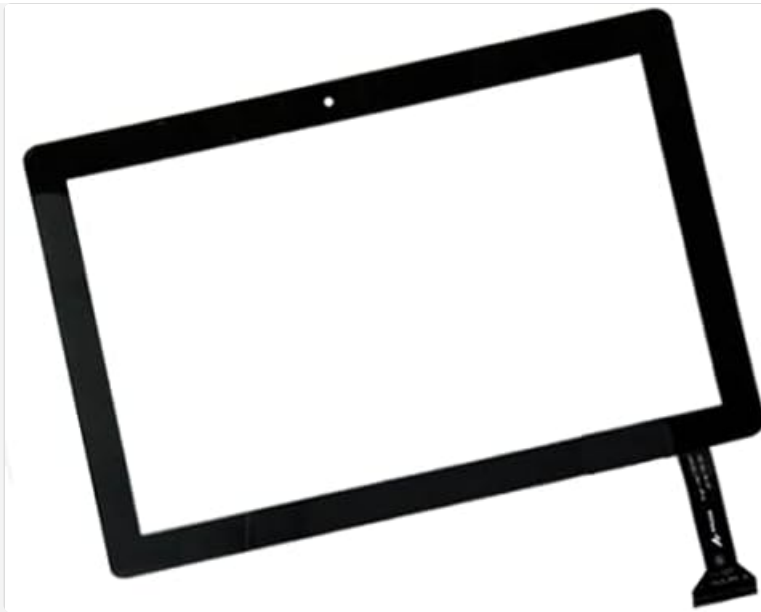


Image 4.1: An angled view of the digitizer, highlighting the flexible ribbon cable that connects the touch screen to the tablet's mainboard. This cable must be handled with extreme care during installation.



Image 4.2: A detailed close-up showing the pre-applied adhesive strips along the edges of the digitizer frame. Proper adhesion is crucial for securing the new screen in place and preventing dust ingress.

5. TESTING AND OPERATION

After installation, it is crucial to test the new touch screen digitizer thoroughly before fully reassembling your tablet.

This ensures proper functionality and allows for adjustments if needed.

- **Initial Power On:** Carefully power on the tablet.
- **Touch Functionality:** Test all areas of the screen for touch response. Drag an icon across the entire screen to check for dead spots or unresponsive areas.
- **Multi-touch:** If supported by your tablet, test multi-touch gestures like pinch-to-zoom.
- **Calibration:** If touch response is erratic, check your tablet's settings for a screen calibration option.

6. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your new touch screen digitizer, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth, preferably microfiber, to clean the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid harsh chemicals, abrasive materials, or excessive moisture.
- **Protection:** Consider using a screen protector to guard against scratches and minor impacts.
- **Avoid Pressure:** Do not apply excessive pressure to the screen, as this can damage the digitizer or the underlying LCD.
- **Temperature:** Avoid exposing the tablet to extreme temperatures, which can affect the adhesive and electronic components.

7. TROUBLESHOOTING

If you encounter issues after installing the touch screen digitizer, consider the following:

- **No Touch Response:**
 - Ensure the ribbon cable is securely and correctly seated in its connector.
 - Check for any visible damage to the ribbon cable or connector.
 - Verify that the digitizer is the correct model for your tablet.
- **Partial Touch Response / Dead Spots:**
 - This may indicate a faulty digitizer or an issue with the connection.
 - Re-seat the ribbon cable.
- **Screen Flickering / Display Issues:**
 - Note that this product is a digitizer only, not an LCD. Display issues are typically related to the LCD or its connection, not the digitizer.
 - Ensure the LCD cable is also securely connected.

If troubleshooting steps do not resolve the issue, or if you require further assistance, please contact SRJTEK customer support via Amazon message. Provide your order details and a clear description of the problem for prompt assistance.

8. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Product Type	Touch Screen Digitizer Panel (Glass only, does NOT include LCD)
Compatibility	Logic T10L Tablet
Screen Size	10.1 inches
Manufacturer	SRJTEK
ASIN	B099DDG8ZC
First Available Date	July 14, 2021

9. WARRANTY AND SUPPORT

SRJTEK aims to provide high-quality replacement parts. All products undergo strict QC testing before shipment to ensure no scratches or dead areas on the screen.

For any issues, questions, or concerns regarding your SRJTEK touch screen digitizer, please contact us directly through Amazon's messaging system. Our customer service team will reply as soon as possible to assist you with troubleshooting or other support needs.

Please note that damage incurred during improper installation is not covered. We reiterate the recommendation for professional installation.

© 2024 SRJTEK. All rights reserved.

This manual is for informational purposes only. SRJTEK is not responsible for any damage or injury caused by improper installation or misuse of the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099DDG8ZC>

More documents and user manuals: <https://manuals.plus/>