

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COACH](#) /

› [COACH FC3721 C3721 Signature Daisy Print Slim Envelope Wallet User Manual](#)

COACH FC3721

COACH FC3721 C3721 Signature Daisy Print Slim Envelope Wallet User Manual

Comprehensive guide for your COACH wallet.

1. INTRODUCTION

This user manual provides essential information for the proper use, care, and maintenance of your COACH FC3721 C3721 Signature Daisy Print Slim Envelope Wallet. Please read this manual thoroughly to ensure optimal performance and longevity of your product. This wallet features a stylish design with a floral print on signature pattern PVC and leather accents, offering practical storage for your essentials.

2. PRODUCT OVERVIEW

The COACH FC3721 C3721 Slim Envelope Wallet is designed for everyday elegance and functionality. Its slim profile allows it to fit comfortably in most bags without adding bulk, while providing ample space for cards, cash, and coins.



Image 2.1: Front view of the COACH FC3721 C3721 Slim Envelope Wallet in Light Khaki x Chalk Multi, showcasing the signature pattern and daisy print with the COACH logo.

This image displays the wallet from the front, in its closed position. The light khaki signature canvas is visible, adorned with a vibrant daisy floral print. The top flap, in chalk white leather, features the gold-toned COACH New York logo. The envelope-style closure is

clearly visible.



Image 2.2: Composite image showing various external views of the wallet.

This composite image provides four different perspectives. The top-left panel shows the wallet closed from the front. The top-right panel shows the wallet partially open, revealing the zippered coin pocket on the back. The bottom-left panel displays a side profile of the closed wallet, highlighting its slim design. The bottom-right panel offers a close-up of the gold COACH New York emblem on the chalk leather flap.



Image 2.3: Composite image detailing the internal structure and material of the wallet.

This composite image focuses on the wallet's interior and material details. The top-left panel shows the wallet fully open, revealing the main bill compartment and card slots. The top-right panel provides a closer look into the bill compartment. The bottom-left panel shows a detailed view of the zippered coin pocket. The bottom-right panel features a close-up of the internal leather lining and a product tag, indicating the model number C3721 and No. A2181.

3. FEATURES AND COMPONENTS

Your COACH Slim Envelope Wallet is equipped with several compartments designed for organization:

- **Snap Button Closure:** Securely fastens the main flap.
- **Card Slots:** Eight dedicated slots for credit cards, ID cards, or business cards.
- **Open Pockets:** Two open pockets (one on the front under the flap, one inside) for receipts, notes, or additional cards.
- **Bill Compartment:** One full-length compartment for banknotes.
- **Zippered Coin Purse:** One gusseted zippered pocket on the back exterior for coins, ensuring easy access and security.
- **Material:** Crafted from durable PVC coated canvas with a signature pattern and floral print, complemented by smooth leather accents.
- **Hardware:** Light gold-toned hardware, including the COACH logo and zipper pull.

4. FIRST USE

Upon receiving your new wallet, please follow these steps:

1. **Unpack:** Carefully remove the wallet from its packaging.
2. **Inspect:** Check for any protective films or inserts and remove them. Ensure all zippers and snaps operate smoothly.
3. **Airing:** If there is a new product scent, allow the wallet to air out in a well-ventilated area for a short period.

5. USAGE GUIDELINES

To maximize the functionality and maintain the shape of your wallet:

- **Card Organization:** Distribute cards evenly across the card slots to prevent bulging. Avoid overstuffing.
- **Cash and Receipts:** Utilize the bill compartment for unfolded banknotes. Use the open pockets for receipts or less frequently accessed items.
- **Coin Storage:** The exterior zippered coin purse is ideal for loose change. Do not overfill to prevent strain on the zipper.
- **Avoid Overloading:** While spacious, excessive contents can distort the wallet's shape and put stress on seams and closures.

6. CARE AND MAINTENANCE

Proper care will help preserve the beauty and integrity of your COACH wallet:

- **Cleaning:**
 - For PVC coated canvas: Wipe gently with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
 - For leather trim: Use a specialized leather cleaner or conditioner sparingly, following the product instructions. Test on an inconspicuous area first.
 - For hardware: Polish with a soft, dry cloth.
- **Storage:** When not in use, store the wallet in a cool, dry place, away from direct sunlight and humidity. If possible, use the original dust bag or a breathable cloth bag to protect it.
- **Avoid Contact:** Keep the wallet away from oil, grease, ink, and excessive moisture.
- **Protect from Scratches:** Avoid placing the wallet near sharp objects or rough surfaces that could scratch the material or hardware.

7. TROUBLESHOOTING

Minor issues can often be resolved with simple steps:

- **Stains on Canvas:** For light stains, try wiping with a soft cloth dampened with mild soap and water. Blot dry immediately.
- **Stiff Zipper:** If the zipper feels stiff, gently rub a small amount of zipper lubricant (e.g., beeswax or a graphite pencil) along the teeth.
- **Discoloration:** Prolonged exposure to direct sunlight or certain chemicals can cause discoloration. Store properly to prevent this.

8. SPECIFICATIONS

Model Number	FC3721 / C3721 (SIG DAISY ENV WLT)
Brand	COACH
Color	Light Khaki x Chalk Multi 2
Material	PVC Coated Canvas x Leather
Hardware Color	Light Gold
Dimensions (Approx.)	Width: 19.5 cm (7.68 in) Height: 9 cm (3.54 in) Depth: 1.5 cm (0.59 in)
Weight (Approx.)	150 g (0.33 lbs)
Closure	Snap Button
Internal Pockets	8 Card Slots, 1 Bill Compartment, 1 Open Pocket
External Pockets	1 Zippered Coin Purse (back), 1 Open Pocket (front)

9. WARRANTY AND SUPPORT

This product is a genuine COACH item. For specific warranty information or support regarding your COACH wallet, please refer to the official COACH website or contact their customer service directly. As an imported product, warranty terms may vary by region. Always retain your proof of purchase for any inquiries.

For general product care tips and authenticity verification, visit the official COACH website: www.coach.com