

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LELO](#) /

› [LELO INA Wave 2 Rabbit Vibrator Instruction Manual](#)

## LELO INA Wave 2

# LELO INA Wave 2 Rabbit Vibrator Instruction Manual

## INTRODUCTION

---

This manual provides essential information for the safe and effective use of your LELO INA Wave 2 Rabbit Vibrator. The INA Wave 2 features Wavemotion Technology, 12 vibration settings, and is designed to be waterproof and rechargeable for convenience and versatility.

## WHAT'S INCLUDED

---

Your LELO INA Wave 2 package includes the following items:

- LELO INA Wave 2 G-Spot and Clitoral Vibrator
- USB Charging Cable
- Instruction Manual
- Moisturizer Sachet (water-based lubricant, 5 ml / 0.17 fl. oz.)
- Warranty Card
- Satin Storage Pouch

## INA Wave™ 2

g-spot and clitoral vibrator



## MANUAL

how to use guide



## MOISTURIZER SACHET

water-based lubricant  
5 ml / 0.17 fl. oz.



## CHARGING CORD

USB cable



## WARRANTY CARD

verifies product authenticity



## SATIN POUCH

for storage

Image: The LELO INA Wave 2 package contents, showing the vibrator, USB charging cable, instruction manual, lubricant sachet, warranty card, and satin pouch neatly arranged.

## SETUP

### Charging Your Device

Before first use, fully charge your INA Wave 2. To charge:

1. Locate the DC power socket at the base of the device.
2. Insert the provided USB charging cable into the socket.
3. Connect the USB end of the cable to a USB port on a computer or a compatible USB charger.

The LELO logo on the device will blink to indicate charging. Once fully charged, the light will become solid. A full charge typically takes approximately 2 hours and provides up to 4 hours of use, depending on the intensity settings.

Your browser does not support the video tag.

Video: A demonstration of unboxing, charging, sound test, and waterproofing for the LELO INA Wave 2. This video shows how to connect the charging cable and indicates the light signals for charging status.

## OPERATING INSTRUCTIONS

### Controls

The LELO INA Wave 2 features a 5-button interface for easy control:

- **Center Button:** Power On/Off. Press and hold to turn on or off.
- **Up/Down Arrows:** Adjust vibration intensity. Press the '+' button to increase intensity, and the '-' button to decrease intensity.
- **Left/Right Arrows:** Change vibration modes. Press the left arrow to cycle through modes, and the right arrow to cycle through modes in reverse.



Image: A detailed view of the LELO INA Wave 2's control panel, highlighting the power button and intensity/mode adjustment arrows.

## Power On/Off

To turn on the device, press and hold the center button for 3 seconds until the vibrations begin. To turn off, press and hold the center button again for 3 seconds until the vibrations stop.

## Adjusting Vibration Settings

The INA Wave 2 offers 12 distinct vibration settings. Use the left and right arrow buttons to cycle through these patterns. Adjust the intensity of the vibrations using the up (+) and down (-) arrow buttons.

## Wavemotion Technology

The unique Wavemotion Technology simulates a finger-like motion, providing a distinct sensation in addition to the vibrations. This feature is integrated into the device's design for enhanced experience.



# Features

-  **WAVEMOTION™ TECHNOLOGY**  
for a thrilling finger-like massage motion on top of its satisfying vibrations
-  **12 SETTINGS**  
from a teasing murmur to a satisfying pulse
-  **SCULPTED FOR YOUR PLEASURE**  
double whammy: unlocks both the G-spot and clitoral orgasm
-  **100% WATERPROOF**  
perfect for the bath and shower
-  **EXTRA LONG-LASTING CHARGE**  
longer time for pleasure
-  **EXTRA-SOFT SILICONE**  
premium silicone that feels warm to the touch

Image: A diagram highlighting the Wavemotion Technology, indicating the simulated finger-like motion within the device.

## Travel Lock

To activate the travel lock, press and hold the '+' and '-' buttons simultaneously until the device locks. This prevents

accidental activation during travel or storage. To unlock, press and hold the '+' and '-' buttons simultaneously again.

## MAINTENANCE

---

### Cleaning

The LELO INA Wave 2 is 100% waterproof, making it easy to clean. Always clean the device thoroughly before and after each use. Wash the device with warm water and a mild, antibacterial soap, or use a specialized LELO cleaning spray. Rinse thoroughly and pat dry with a lint-free cloth.

*Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.*

### Storage

Store your INA Wave 2 in the provided satin pouch in a dust-free environment, away from extreme temperatures and direct sunlight. Avoid storing it with other toys made of different materials to prevent potential damage or reactions.

## TROUBLESHOOTING

---

Problem	Solution
Device does not turn on.	Ensure the device is fully charged. Press and hold the center button for 3 seconds to power on. Check if the travel lock is activated (press and hold '+' and '-' simultaneously to deactivate).
Device does not charge.	Verify the USB cable is securely connected to both the device and the power source. Try a different USB port or charger. Ensure the charging port is clean and free of debris.
Vibrations are weak or inconsistent.	The device may require charging. Ensure it is fully charged before use. If the issue persists after charging, contact LELO customer support.
Device turns off unexpectedly after a short period.	This can indicate a low battery. Fully charge the device. If the problem continues even after a full charge, there might be an internal issue. Refer to the warranty section and contact LELO customer support.

If you experience any issues not listed here or if the suggested solutions do not resolve the problem, please contact LELO customer support for further assistance.

## SPECIFICATIONS

---

- **Model Name:** INA Wave 2
- **Item Model Number:** 8465
- **Material:** Body-safe Silicone, ABS Plastic
- **Dimensions:** 7.87 x 2.56 x 1.77 inches
- **Weight:** 6.21 ounces
- **Battery:** 1 Lithium Polymer battery (included)
- **Charging:** USB Rechargeable
- **Usage Time:** Up to 4 hours (depending on settings)
- **Charging Time:** Approximately 2 hours
- **Waterproof:** 100% Waterproof

- **Vibration Settings:** 12
- **Technology:** Wavemotion Technology

## WARRANTY INFORMATION

---

Your LELO INA Wave 2 comes with a **1-Year Warranty** covering manufacturing defects. Additionally, LELO offers a **10-Year Quality Guarantee**, providing a discount on a new device if a defect is found after the initial 1-year warranty period. Please retain your proof of purchase and the warranty card for any claims.

For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official LELO website.

## CUSTOMER SUPPORT

---

For any questions, technical support, or warranty claims, please contact LELO customer service. You can find contact information on the official LELO website or on your warranty card.

**Website:** [www.lelo.com](http://www.lelo.com)

