

Senville SENY1507-14A

Senville 1500W Oil Filled Radiator Heater User Manual

Model: SENY1507-14A

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this heater.

- Do not use an extension cord or power strip, which could overheat and result in a fire.
- Do not plug any other electrical devices into the same outlet as the heater.
- Place space heaters on level, flat surfaces.
- Never place heaters on cabinets, tables, furniture, or carpets, which can overheat and start a fire.
- Ensure the heater is placed away from flammable materials such as curtains, furniture, and bedding.
- Do not cover the heater. Covering the heater can cause overheating and fire.
- Always unplug the heater when not in use.
- Keep out of reach of children and pets.

PRODUCT OVERVIEW

The Senville 1500W Oil Filled Radiator Heater provides quiet and efficient warmth for indoor spaces. It features a digital LED display, multiple heat settings, and advanced safety features.



Image: The Senville 1500W Oil Filled Radiator Heater, black in color, with its digital display and control panel visible. A remote control is shown next to the heater. The heater stands on its base with wheels.

Designed for Comfort & Efficiency

Powerful, Safe, and Energy-Saving Heating



**Energy
Efficient**



**Silent
Operation**



 **senville**

Image: The heater positioned in a living room setting, with text overlays indicating "Energy Efficient" and "Silent Operation," emphasizing its quiet and cost-effective heating capabilities.

Advanced Performance

for Every Season



Oil-Filled Radiator

Retains heat longer for sustained warmth



No Installation Required

Simply plug and play



Portable & Lightweight

Easy to move around your home

Image: The heater in a room, with icons and text highlighting its features: "Oil-Filled Radiator" for sustained warmth, "No Installation Required" for simple setup, and "Portable & Lightweight" for easy movement.

Key Features:

- **Electric Space Heater:** Provides noise-free warmth, suitable for work or relaxation.
- **Plug & Play:** No installation required; simply plug in for immediate warmth.
- **Energy-Efficient:** Designed for cost-effective heating.
- **Tailored Warmth:** Features 3 heat settings and 5 adjustable temperature options.
- **Safety Features:** Includes overheat protection and a stable, tip-resistant design.

SETUP

The Senville Oil Filled Radiator Heater is designed for easy setup and immediate use.

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.
2. **Positioning:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, curtains, or other flammable materials. Do not place it on carpets with long piles.
3. **Power Connection:** Ensure the heater is switched off. Plug the power cord directly into a 120V AC, 60Hz grounded wall outlet. Do not use extension cords, power strips, or surge protectors.
4. **Remote Control Batteries:** If using the remote control, insert the required batteries (not included) into the remote control unit.



Image: The heater in a room setting, illustrating its "No Installation Required" feature, emphasizing its plug-and-play simplicity.

OPERATING INSTRUCTIONS

Control your Senville heater using the digital LED display on the unit or the provided remote control.

User Friendly Digital Controls

Customize Your Comfort with Ease



Image: A close-up view of the heater's digital LED display, showing temperature readings and control buttons for power, mode, and temperature adjustment.

Control Panel and Display:

- **Power Button (⏻):** Turns the heater On or Off.
- **Mode Button (M):** Cycles through heat settings (Low, Medium, High).
- **Temperature Up (▲) / Down (▼) Buttons:** Adjusts the desired temperature.
- **Timer Button (⌚):** Sets the operating timer.
- **ECO Mode Button (🌿):** Activates energy-saving mode.
- **Digital LED Display:** Shows current temperature, selected mode, and timer settings.

Basic Operation:

1. **Turning On:** Press the Power button on the control panel or remote. The display will illuminate.
2. **Setting Temperature:** Use the Temperature Up/Down buttons to select your desired temperature. The heater will cycle on and off to maintain this temperature.
3. **Selecting Heat Mode:** Press the Mode button to cycle through the 3 available heat settings:

- **Low:** For minimal heat output.
 - **Medium:** For moderate heat output.
 - **High:** For maximum heat output (1500W).
4. **ECO Mode:** Press the ECO Mode button to activate the energy-saving function. The heater will automatically adjust its power consumption to maintain an optimal temperature efficiently.
 5. **Timer Function:** Press the Timer button to set an auto-off timer. Each press typically increases the timer by one hour. Refer to the display for the set duration.
 6. **Turning Off:** Press the Power button again. The heater will stop operating. Unplug the unit from the wall outlet when not in use for extended periods.

Stay Warm & Comfortable

Ideal for bedrooms, office, and study room



3 Heat Modes
Low, Medium, High

5 Temperature Settings
Tailor your warmth

Image: The heater in a room, with visual indicators for "3 Heat Modes" (Low, Medium, High) and "5 Temperature Settings," illustrating the customization options for warmth.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your Senville heater. Always unplug the heater

and allow it to cool completely before performing any maintenance.

- **Cleaning:**
 - Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Ensure no water enters the interior of the heater.
 - Do not immerse the heater in water.
- **Storage:**
 - If storing the heater for an extended period, clean it thoroughly.
 - Store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.
 - Wrap the power cord neatly to prevent tangling or damage.
- **No User-Serviceable Parts:** This heater contains no user-serviceable parts. Do not attempt to open or repair the unit yourself. Any repairs should be performed by qualified service personnel.

TROUBLESHOOTING

If you experience issues with your Serville heater, please consult the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely. No power to the outlet. Overheat protection activated. Tip-over switch activated.	Ensure the power cord is firmly plugged into a grounded outlet. Check the circuit breaker or try a different outlet. Unplug the heater, wait 30 minutes for it to cool down, then plug it back in. Ensure the heater is on a flat, stable surface and upright.
Heater produces no heat or insufficient heat.	Temperature setting too low. Heat mode not selected. Room size too large for heater.	Increase the desired temperature setting. Press the Mode button to select a higher heat setting (Medium or High). Ensure the heater is appropriately sized for the room.
Heater makes unusual noises.	Normal expansion/contraction of metal. Loose part (unlikely for oil-filled).	Minor clicking or crackling sounds are normal as the oil heats and cools. If noises are loud or persistent, unplug the unit and contact customer support.

Built-In Safety Features

Reliable Protection for You and Your Family



Overheat Protection

Automatically shuts off if it gets too hot



Tip-Over Safety Switch

Turns off instantly if knocked over



Image: The heater with visual cues indicating its safety features: "Overheat Protection" (automatic shut-off) and "Tip-Over Safety Switch" (turns off if knocked over).

SPECIFICATIONS

Feature	Detail
Brand	Senville
Model Number	SENY1507-14A
Colour	Black
Power/Wattage	1500 watts
Number of Speeds	3 (Heat Modes)

Feature	Detail
Special Features	Noiseless, Digital LED Display, Overheat Protection, Tip-Over Safety Switch
Item Weight	9.06 kg
Parcel Dimensions	66 x 39 x 17.4 cm
Form Factor	Pedestal
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Heating Method	Radiant (Oil-Filled)
Recommended Uses	Home, Office, Bedroom, Study Room
Mounting Type	Floor Mount



Image: The heater shown next to a person on a couch, with its dimensions clearly marked: 66 cm (height), 39.4 cm (width), and 16.7

WARRANTY AND CUSTOMER SUPPORT

Senville is committed to providing high-quality products and excellent customer service.

Warranty Information:

This product comes with an industry-leading warranty, ensuring best-in-class protection and long-lasting durability. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Senville website.


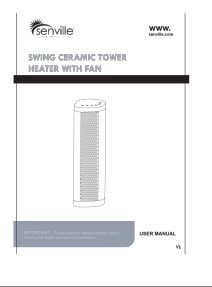 
Customer Support:



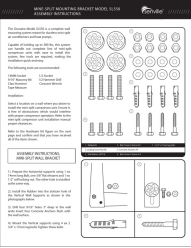 
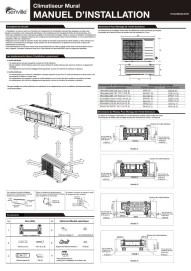 
Our dedicated customer support team is available 24/7 to assist you with setup, maintenance, troubleshooting, and any other product-related inquiries. For assistance, please visit the Senville website or contact us through the provided channels.

Online Support: [Visit the Senville Store on Amazon](#)

For further assistance, please refer to the contact information provided in your product packaging.

Related Documents - SENY1507-14A

	<p>Pelonis PH-14A Digital Oil-Filled Radiator Owner's Manual</p> <p>Comprehensive owner's manual for the Pelonis PH-14A Digital Oil-Filled Radiator, covering important safety instructions, assembly, operation, remote control use, care, cleaning, troubleshooting, and warranty information.</p>
	<p>Senville SENCH-22 Ceramic Tower Heater with Fan - User Manual & Safety Guide</p> <p>Comprehensive user manual for the Senville SENCH-22 Ceramic Tower Heater with Fan. Includes safety instructions, operating procedures, features, maintenance, and troubleshooting tips.</p>

 <p>Maintenance and Service Guide</p> <p>HP</p> <p>HP</p>	<p>HP Chromebook 14a Maintenance and Service Guide</p> <p>Comprehensive guide for HP Chromebook 14a, detailing component identification, illustrated parts catalog, removal and replacement procedures, backup and recovery steps, technical specifications, and power requirements.</p>
 <p>Guida per l'utente</p> <p>HP</p> <p>HP</p>	<p>Guida per l'utente HP Chromebook: Componenti, Funzionamento e Specifiche</p> <p>Manuale utente completo per HP Chromebook che copre componenti, navigazione dello schermo, gestione dell'alimentazione, stampa, backup, ripristino, specifiche tecniche e informazioni sull'accessibilità.</p>
 <p>SL550 MOUNTING BRACKET ASSEMBLY INSTRUCTIONS</p> <p>Senville</p>	<p>Senville SL550 Mini-Split Mounting Bracket Assembly Instructions</p> <p>Detailed assembly instructions for the Senville SL550 mini-split wall mounting bracket, designed for ductless air conditioners and heat pumps. Includes required tools, hardware list, and step-by-step installation guidance.</p>
 <p>Climatiseur Mural MANUEL D'INSTALLATION</p> <p>Senville</p>	<p>Manuel d'Installation Climatiseur Mural Senville</p> <p>Guide d'installation complet pour climatiseurs muraux Senville, couvrant la sécurité, les dimensions, la tuyauterie, le câblage et les procédures de test.</p>