



Manuals.plus /

- › **SDRD /**
- › SDRD SD-18 Magic Karaoke Portable Microphone with Speaker User Manual

SDRD 6221237169221

SDRD SD-18 Magic Karaoke Portable Microphone with Speaker

USER MANUAL

Model: SD-18 (6221237169221)

Introduction

This manual provides detailed instructions for the proper use and maintenance of your SDRD SD-18 Magic Karaoke Portable Microphone with Speaker. Designed for portability and versatile audio performance, this device combines a microphone and speaker into a single unit, suitable for various audio applications.

Key features include a compact design for easy transport, robust audio output with clear bass and treble, and durable construction. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

Product Overview



Figure 1: Front view of the SDRD SD-18 Magic Karaoke Portable Microphone with Speaker. This image displays the microphone grille at the top, the main speaker housing, and the control panel located on the handle.



Figure 2: Side view of the SDRD SD-18 Magic Karaoke Portable Microphone with Speaker, highlighting the speaker grille and the overall compact design.

Setup

- 1. Unboxing:** Carefully remove all components from the packaging. Verify that the microphone/speaker unit and any included charging cables are present.
- 2. Charging the Device:**

Before first use, fully charge the device. Connect the provided charging cable to the charging port on the microphone and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The charging indicator light will typically turn off or change color once fully charged.
- 3. Power On/Off:** Press and hold the power button (usually located on the control panel) for a few seconds to turn the device on or off. A voice prompt or indicator light will confirm the status.
- 4. Bluetooth Pairing:**

Once powered on, the device will typically enter Bluetooth pairing mode automatically (indicated by a flashing light or voice prompt). On your smartphone, tablet, or other Bluetooth-enabled device, search for "SD-18" or a similar device name in the Bluetooth settings. Select it to pair. A confirmation sound will indicate successful pairing.
- 5. AUX Connection (if applicable):** If your device supports an AUX input, connect an audio source using a 3.5mm audio cable (not included) to the AUX port on the microphone.

Operating Instructions

- **Microphone Usage:** Hold the microphone approximately 5-10 cm from your mouth for optimal sound capture. Avoid covering the microphone grille.
- **Volume Control:** Use the volume buttons on the control panel to adjust the microphone volume and speaker output volume. There may be separate controls for microphone and music volume.
- **Echo/Reverb Adjustment:** If available, use the dedicated echo or reverb slider/buttons on the control panel to add or reduce echo effects to your voice.
- **Music Playback:** Once connected via Bluetooth or AUX, play music from your connected device. The microphone will

mix your voice with the music.

- **Mode Switching:** Some models may have different modes (e.g., Karaoke mode, Speaker mode). Refer to the control panel for mode selection buttons.

Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the microphone. Do not use harsh chemicals, abrasive cleaners, or allow water to enter any openings.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% every few months.
- **Handling:** While the device is built with premium quality materials, avoid dropping or subjecting it to strong impacts to prevent damage.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery; power button not pressed correctly.	Charge the device fully. Press and hold the power button for 3-5 seconds.
No sound from speaker.	Volume too low; device not connected; music paused.	Increase speaker volume. Ensure Bluetooth or AUX connection is active. Check music playback on source device.
Microphone not working.	Microphone volume too low; microphone muted; incorrect mode.	Increase microphone volume. Ensure microphone is not muted. Switch to appropriate mode if applicable.
Bluetooth pairing failed.	Device too far; Bluetooth not enabled on source; interference.	Ensure device is within range. Enable Bluetooth on your source device. Restart both devices and try pairing again.

Specifications

Feature	Detail
Model Number	6221237169221
Brand Name	SDRD
Package Dimensions	27.8 x 9.4 x 8.6 cm
Item Weight	120 Grams
Color	Grey (Multi Color variant available)
Special Features	Portable
Compatible Devices	Karaoke Machine (and Bluetooth-enabled devices)
Included Components	Battery (internal)
Polar Pattern	Hyper Cardioid
Impedance	4 Ohm
Microphone Form Factor	Handheld
Hardware Platform	Karaoke Machine

Warranty and Support

Specific warranty information for the SDRD SD-18 is not provided in the product details. Please refer to your purchase documentation or contact the retailer for warranty terms and conditions.

For technical support or further assistance, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.