



Manuals.plus /

› AIRSEE /

› AIRSEE Electric Spin Scrubber Instruction Manual

AIRSEE EB-01

AIRSEE Electric Spin Scrubber Instruction Manual

Model: EB-01 | Brand: AIRSEE

INTRODUCTION

The AIRSEE Electric Spin Scrubber is a cordless, handheld power cleaning tool designed to make various cleaning tasks easier and more efficient. Featuring two speed settings and multiple interchangeable brush heads, it is suitable for cleaning a wide range of surfaces in your home, including floors, windows, bathtubs, tiles, sinks, and even car interiors.



Image: The AIRSEE Electric Spin Scrubber, showcasing its main unit, multiple brush heads, and charging cable.

KEY FEATURES

- **High-Torque Motor:** Reaches speeds of up to 350 revolutions per minute (r/min) and provides up to 45kgf.cm of torque, preventing sudden stops under pressure for effective dirt and stain removal.

- **Two Speed Settings:** Offers 350 r/min for tough cleaning and 280 r/min for lighter tasks, reducing cleaning time and effort.
- **Long-Lasting Battery:** Equipped with an integrated 2400mAh rechargeable battery, providing 80-100 minutes of continuous operation on a 2.5-hour fast charge.
- **LED Digital Screen:** Conveniently displays the current mode and remaining battery life.
- **Versatile Brush Heads:** Includes six different brush heads (flat brush, corner scrubber brush, scouring pads, sponges) to tackle various surfaces and cleaning needs.
- **IPX7 Waterproof Level:** Designed to work in water for extended periods without damage, ensuring durability and ease of cleaning.
- **Lightweight & Portable:** Crafted from high-quality ABS materials, weighing just 1lb with a compact 2.8-inch handle, offering a wireless and user-friendly design.

LONG-LASTING BATTERY LIFE


2400 mAh
 Rechargeable Battery


2.5 Hours
 Fast Charging


80-100 mins
 Runtime


LED screen
 Read the remaining power



Image: Diagram illustrating the internal components, emphasizing the 2400mAh battery and its long runtime.

INCLUDED COMPONENTS

Your AIRSEE Electric Spin Scrubber comes with the following components:

1. Main Scrubber Unit: The handheld device with integrated battery and LED display.



Image: The main scrubber unit with its compact dimensions highlighted.

2. Flat Brush: Ideal for large flat surfaces like shower walls, countertops, and bathtubs.

AIRSEE Electric Spin Scrubber



Image: A detailed view of the flat brush head.

3. Corner Scrubber Brush: Designed for reaching into tile grout, edges, and corners.

AIRSEE Spin Scrubber Replacement



Image: A detailed view of the corner scrubber brush head.

4. Scouring Pads (Various Grits): Suitable for kitchen tasks, cleaning ovens, stovetops, sinks, and pots. Includes red (soft), gray (moderate), and green (stiff) pads.

AIRSEE Gua Sha Facial Tool



Image: Three scouring pads of different colors (red, gray, green) for varying abrasive needs.

5. Sponges: Great for washing siding and glass effectively.

AIRSEE Scalp Massager Hair Growth



Image: A soft yellow sponge pad, suitable for delicate surfaces.

6. USB-C Charging Cable: For recharging the scrubber unit.

MULTI-PURPOSE BRUSH HEADS

Flat Brush

Tile floor
Bathroom walls
Balcony



Corner Brush

Tile grout
Edges
Corners



Strong Bonding

Black Fabric Backed Pads



Red

Soft Pad
Textured Glass
Wood furniture
Bathtub



Gray

Moderate Pad
Everyday Cleaning
Sinks Oven
Cooktop



Green

Stiff Pad
Deep Cleaning
Soap Scum
Cookware;Pans



Black

Very soft sponge
Glass,mirrors
Polishing
Leather

Image: An overview of all the multi-purpose brush heads and pads that come with the scrubber.

SETUP

1. Charging the Scrubber

Before first use, ensure the scrubber is fully charged. Use the provided USB-C cable and a 5V 2A rated power adapter (not included) for optimal charging.

1. Locate the charging port on the handle of the scrubber.
2. Plug the USB-C cable into the scrubber's charging port.
3. Connect the other end of the USB-C cable to a 5V 2A power adapter.
4. The LED display will show the charging progress. A full charge takes approximately 2.5 hours.

Important Safety Note: Make sure to use a 5V 2A rated power adapter for the appliance. Connecting to a charger that does not match the power ratings of the unit may result in damage to the unit, fire, or electric shock.

HOW TO USE



Image: Visual guide for installing brush heads, operating the device, and charging.

2. Attaching Brush Heads

The scrubber features an easy-to-install and remove brush head system.

1. Select the appropriate brush head or pad for your cleaning task.
2. Align the chosen brush head with the rotating mechanism on the scrubber unit.
3. Gently push and twist the brush head clockwise until it locks securely into place. For pads, ensure the Velcro backing aligns with the pad holder.
4. To remove, twist counter-clockwise and pull the brush head off.

Your browser does not support the video tag.

Video: Demonstrates the process of installing and removing various brush heads on the AIRSEE Electric Spin Scrubber.

OPERATING INSTRUCTIONS

1. Powering On/Off and Speed Adjustment

The scrubber features a simple one-button operation for power and speed control.

1. Press the power button once to turn on the scrubber at the low speed setting (280 r/min). The LED display will show the battery percentage and a green indicator.
2. Press the power button a second time to switch to the high speed setting (350 r/min). The LED display will show a blue indicator.
3. Press the power button a third time to turn off the scrubber.

WATERPROOF **IPX7** RATING

works normally even after soaking in water



Image: The scrubber demonstrating its IPX7 waterproof capability, showing it can be submerged in water.

2. Cleaning Applications

Once the scrubber is charged and the desired brush head is attached, you can begin cleaning. Apply appropriate cleaning solution to the surface as needed.

- **For large areas (e.g., shower walls, bathtubs, floors):** Use the flat brush. Apply light to moderate pressure, allowing the spin action to do the work.
- **For corners and grout lines:** Use the corner scrubber brush. Its angled bristles are designed to reach tight spaces effectively.
- **For tough kitchen grime (e.g., ovens, stovetops, sinks):** Use the appropriate scouring pad (red for delicate, gray for moderate, green for stiff/deep cleaning).
- **For delicate surfaces (e.g., glass, siding):** Use the soft sponge pad.

Your browser does not support the video tag.

Video: Shows the AIRSEE Electric Spin Scrubber in action, cleaning various surfaces in a bathroom and kitchen.



Image: Collage demonstrating the multi-functional use of the scrubber on various household surfaces.

MAINTENANCE

1. Cleaning the Scrubber Unit

Thanks to its IPX7 waterproof rating, cleaning the main unit is simple.

- After use, rinse the scrubber unit under running water to remove any cleaning solution or debris.
- Wipe the unit dry with a clean cloth.
- Ensure the charging port plug is securely in place before rinsing to prevent water ingress.

2. Cleaning Brush Heads and Pads

- Remove the used brush head or pad from the scrubber.
- Rinse the brush heads and pads thoroughly with warm water to remove dirt and cleaning residue.

- Allow them to air dry completely before storing.

TROUBLESHOOTING

- **Scrubber not turning on:** Ensure the battery is fully charged. Check the LED display for battery level.
- **Brush head not spinning or stopping under pressure:** The battery might be low, or the brush head might be improperly attached. Re-attach the brush head securely and ensure the unit is charged. The high torque motor is designed to prevent sudden stops, so if this occurs frequently, contact support.
- **Reduced cleaning performance:** The brush head or pad might be worn out or clogged with debris. Clean or replace the attachment as needed.
- **Charging issues:** Verify that you are using a 5V 2A power adapter. Ensure the USB-C cable is properly connected to both the scrubber and the adapter.

SPECIFICATIONS

Product Dimensions	10 x 3.2 x 6.8 inches
Item Weight	1 pounds
Manufacturer	AIRSEE
Model Number	EB-01
Power Source	Battery Powered (1 Lithium Ion battery required)
Charging Time	2.5 hours
Runtime	80-100 minutes
Waterproof Rating	IPX7
Care Instructions	Wash with Warm Water

WARRANTY AND SUPPORT

Warranty: You will get 45 days free return and a quickly unconditional refund. A 6-month free replacement is provided for product quality issues.

For any questions, concerns, or support needs, please contact AIRSEE customer service.

IMPORTANT SAFETY INFORMATION

- Always ensure the scrubber is fully charged before use.
- Use only a 5V 2A rated power adapter for charging. Using an incompatible charger may cause damage, fire, or electric shock.
- Do not immerse the charging port in water unless the protective plug is securely in place.
- If the device exhibits abnormal noise, odor, or any other malfunction, immediately stop use and contact customer support.
- Keep hair and loose clothing away from moving parts to prevent entanglement.