

[Manuals.plus](#) /

› [BANTI](#) /

› BANTI Dual Motor L-Shaped Electric Standing Desk User Manual

BANTI B-SDE-LRC

BANTI Dual Motor L-Shaped Electric Standing Desk User Manual

Model: B-SDE-LRC

1. INTRODUCTION

Thank you for choosing the BANTI Dual Motor L-Shaped Electric Standing Desk. This desk is designed to enhance your working environment by allowing seamless transitions between sitting and standing positions, promoting better posture and reducing discomfort. Its robust construction and intelligent features make it an ideal addition to any home or office setup. Please read this manual thoroughly before assembly and operation to ensure safe and efficient use of your new desk.



Image: The BANTI Dual Motor L-Shaped Electric Standing Desk, showcasing its L-shaped design and spacious surface, suitable for a laptop, monitor, and other office essentials.

2. SAFETY INFORMATION

To prevent injury or damage to your desk, please observe the following safety precautions:

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not overload the desk. Refer to the specifications for maximum weight capacity.
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact customer support for assistance.
- Ensure there are no obstructions in the desk's path when adjusting height to prevent collision.
- Use only the provided power adapter and cables.

3. PACKAGE CONTENTS

Please verify that all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, contact

Component	Quantity
Desktop Panels (L-shaped)	3
Lifting Columns (Legs)	2
Foot Supports	2
Control Box	1
Hand Controller with Memory Presets	1
Power Adapter & Cable	1
Wooden Monitor Stand	1
Headphone Hook	1
Assembly Hardware (Screws, Allen Wrenches, etc.)	1 Set
User Manual	1

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people and a drill (not included). Follow these steps carefully:

- 1. Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Refer to the Package Contents list to ensure everything is present.
- 2. Attach Foot Supports to Lifting Columns:** Securely fasten the foot supports to the bottom of each lifting column using the provided screws.
- 3. Assemble Desktop Panels:** Connect the three L-shaped desktop panels. Ensure they align correctly to form the corner shape.
- 4. Attach Lifting Columns to Desktop:** Carefully place the assembled desktop upside down. Attach the lifting columns to the pre-drilled holes on the underside of the desktop.
- 5. Install Control Box and Hand Controller:** Mount the control box and hand controller to the designated locations under the desk. Connect the motor cables from the lifting columns to the control box, and then connect the hand controller to the control box.
- 6. Connect Power:** Plug the power adapter into the control box and then into a wall outlet.
- 7. Install Accessories:** Attach the wooden monitor stand and headphone hook as desired.
- 8. Flip the Desk:** With assistance, carefully flip the desk upright.



Image: Detailed dimensional diagram of the BANTI L-shaped electric standing desk, illustrating its overall size and the individual measurements of the desktop and monitor stand.

5. OPERATING INSTRUCTIONS

Your BANTI standing desk features an intuitive control panel for easy height adjustment and memory settings.

5.1. Basic Height Adjustment

- **Raise Desk:** Press and hold the **Up Arrow** button (▲) to raise the desk to your desired standing height.
- **Lower Desk:** Press and hold the **Down Arrow** button (▼) to lower the desk to your desired sitting height.

5.2. Setting Memory Presets

The desk has three programmable memory buttons (1, 2, 3) to save your preferred heights.

1. Adjust the desk to your desired height using the Up/Down arrow buttons.
2. Press the **"S"** button (Set). The display will show "S-".
3. Within 3 seconds, press the desired memory button (**1, 2, or 3**). The display will show the number you pressed, confirming the height is saved.

5.3. Using Memory Presets

- Simply press the corresponding memory button (**1, 2, or 3**) to automatically move the desk to the saved height.

5.4. Collision Avoidance Feature

The desk is equipped with a collision-avoiding feature. If the desk encounters an obstruction during height adjustment, it will automatically stop and reverse slightly to prevent damage. Remove any obstructions before resuming operation.

Specific measurement of the desk

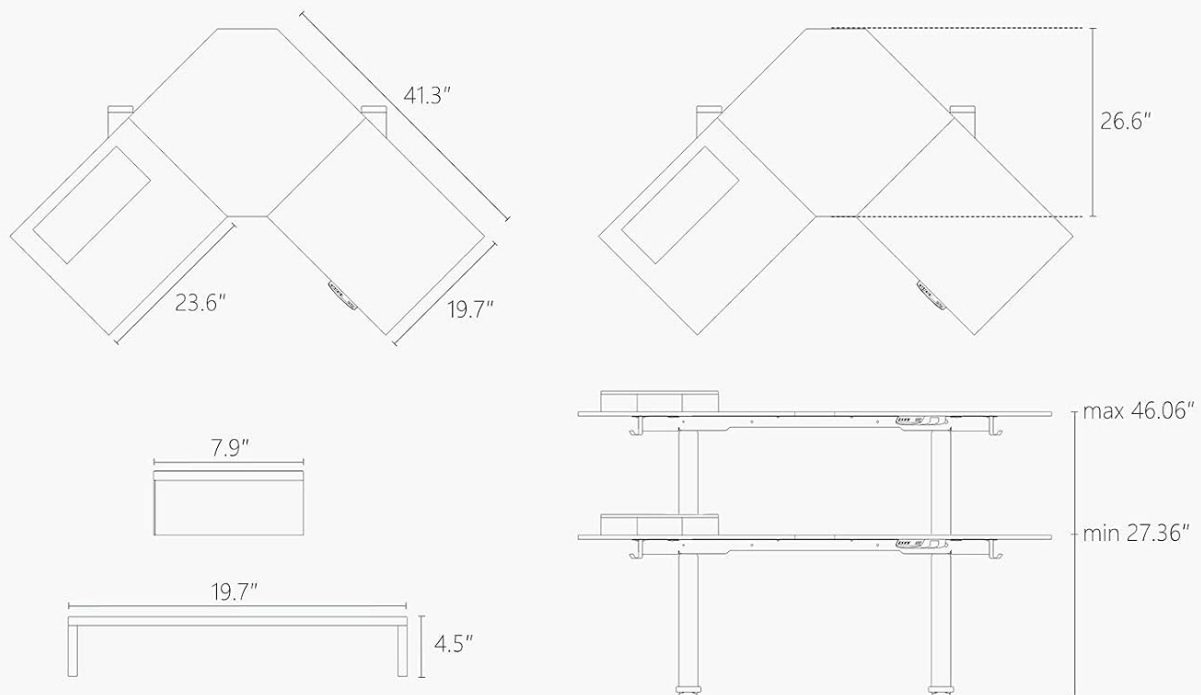


Image: A close-up view of the desk's control panel, highlighting the "S" (Set) button, memory presets (1, 2, 3), and up/down arrow buttons for height adjustment.

Your browser does not support the video tag.

Video: Official BANTI product video demonstrating the height adjustment functionality and the use of memory presets on the BANTI B-SDE-LBK Standing Desk.

6. MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your BANTI standing desk.

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cable Management:** Regularly check and organize cables to prevent tangles and potential hazards.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Motor Care:** The dual motors are designed for durability. Avoid continuous operation for extended periods without rest.

7. TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; control box issue.	Check all cable connections. Ensure power is supplied. Reset the system by unplugging for 30 seconds and plugging back in.

Problem	Possible Cause	Solution
Desk moves unevenly or makes unusual noise.	Uneven load; loose fasteners; motor issue.	Distribute weight evenly on the desktop. Check and tighten all assembly fasteners. If noise persists, contact customer support.
Memory presets not working.	Presets not saved correctly; system reset.	Re-save your desired heights using the "S" button and memory buttons. Perform a system reset if necessary.
Collision avoidance activates frequently.	Obstruction in path; sensitivity setting.	Ensure no objects are in the desk's path during movement. Consult the full user guide (PDF) for advanced sensitivity adjustments if available.

For more detailed troubleshooting or issues not listed here, please refer to the official [User Guide \(PDF\)](#) or [Installation Manual \(PDF\)](#) available online, or contact BANTI customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BANTI
Model Number	B-SDE-LRC
Product Dimensions (D x W x H)	24"D x 41.3"W x 46.06"H
Color	Rustic Brown Top / Black Frame
Style	L Desk
Base Material	Alloy Steel
Top Material Type	Engineered Wood
Special Feature	Adjustable Height, Programmable Memory Controller, Collision Avoidance
Minimum Height	27.6 Inches
Maximum Height	47.3 Inches
Maximum Weight Recommendation	176 Pounds
Item Weight	83.8 Pounds
Required Assembly	Yes (Recommended 2 people)
Tools Recommended For Assembly	Drill
Included Components	Wooden Monitor Stand, Headphone Hook

9. WARRANTY INFORMATION

BANTI provides the following warranty for your electric standing desk:

- **Motor:** 2 years warranty.
- **Frame:** 5 years warranty.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper assembly. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to make a warranty claim, please contact BANTI customer support. For the most up-to-date contact information, please visit the official BANTI store on Amazon or refer to the contact details provided with your purchase documentation.

You can also find additional resources and product information by visiting the [BANTI Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question