

[Manuals.plus](#) /

> [John Timberland](#) /

> John Timberland Titan Modern Outdoor Wall Light Fixture Instruction Manual

John Timberland 98Y71

John Timberland Titan Modern Outdoor Wall Light Fixture Instruction Manual

Model: 98Y71

INTRODUCTION

Thank you for choosing the John Timberland Titan Modern Outdoor Wall Light Fixture. This fixture is designed to provide reliable and stylish illumination for your outdoor spaces, including porches, patios, decks, and entryways. This manual provides essential information for safe installation, operation, and maintenance of your new light fixture. Please read these instructions carefully before installation and retain them for future reference.





Image 1: Close-up view of the John Timberland Titan Modern Outdoor Wall Light Fixture, showcasing the clear glass panels and the bulb socket.

IMPORTANT SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing. Consult a qualified electrician if you are unsure about the installation process.

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC).
- This fixture is intended for outdoor use and must be properly grounded.
- Do not install this fixture on surfaces that are easily flammable.
- Handle glass components with care to prevent breakage and injury.
- Use only the specified bulb type and wattage to avoid overheating.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	98Y71
Dimensions (H x W x Extension)	14 1/4" H x 5" W x 7" Extension from wall
Backplate Dimensions (H x W)	7" H x 5" W
Weight	4.6 lbs
Material	Metal frame, Clear Glass panels
Finish	Mystic Black
Bulb Type (Recommended)	Standard-medium base (E26)
Max Wattage	60 watts
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor
Water Resistance Level	Water Resistant

Extends 7"



Image 2: Detailed dimensions of the light fixture, including height, width, and extension from the wall.

PACKAGE CONTENTS

Please check to ensure all parts are present before beginning installation. If any parts are missing or damaged, do not attempt to install the fixture. Contact customer support for assistance.

- Light Fixture Assembly (1)
- Mounting Hardware Kit (1)
- Instruction Manual (1)

Note: Bulb is not included and must be purchased separately. A clear glass Edison filament tube bulb is recommended for optimal aesthetic.

INSTALLATION GUIDE

Follow these steps to install your John Timberland Titan Outdoor Wall Light Fixture. Professional installation is

recommended.

1. **Turn Off Power:** Before starting, ensure the power to the junction box is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Ensure the mounting surface is clean, dry, and structurally sound to support the fixture's weight.
3. **Attach Mounting Plate:** Secure the mounting plate (included in hardware kit) to the junction box using the provided screws. Ensure it is firmly attached.
4. **Make Electrical Connections:** Carefully connect the fixture's wires to the corresponding house wires:
 - Connect the black wire (hot) from the fixture to the black wire from the junction box.
 - Connect the white wire (neutral) from the fixture to the white wire from the junction box.
 - Connect the green or bare copper wire (ground) from the fixture to the ground wire from the junction box.

Secure connections with wire nuts and wrap with electrical tape for added safety.

5. **Mount the Fixture:** Carefully align the fixture's backplate with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall and stable.
6. **Install Bulb:** Insert one standard-medium base (E26) bulb, up to 60 watts, into the socket. Ensure the bulb is fully seated.
7. **Restore Power:** Once installation is complete and all components are secure, restore power at the circuit breaker or fuse box. Test the light fixture.



Image 3: The light fixture shown installed on an exterior brick wall, demonstrating its modern aesthetic in an outdoor setting.

OPERATING INSTRUCTIONS

This light fixture operates via a standard wall switch connected to your home's electrical system. Once installed and powered, simply use the wall switch to turn the light on or off.

- Ensure the correct bulb type (E26 base) and wattage (max 60W) are used.
- The clear glass panels are designed to allow maximum light output and showcase decorative bulbs.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** To clean the fixture, first ensure the power is off. Wipe the metal frame with a soft, damp cloth. For glass panels, use a mild glass cleaner and a soft cloth to avoid streaks. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Always turn off the power at the circuit breaker before replacing a bulb. Allow the old bulb to cool completely before removing it. Screw in the new E26 base bulb, ensuring it does not exceed 60

watts.

- **Inspection:** Periodically check the fixture for any signs of wear, loose connections, or damage. If any issues are found, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

If your light fixture is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture	Check the circuit breaker or fuse. Ensure the wall switch is in the 'ON' position.
	Loose wire connections	Turn off power, then check and tighten all wire connections.
	Faulty bulb	Replace the bulb with a new one of the correct type and wattage.
Light flickers	Loose bulb or wiring	Turn off power, tighten the bulb, and check wire connections.
	Incorrect bulb type	Ensure you are using a compatible E26 base bulb.

If the problem persists after attempting these solutions, contact a qualified electrician or customer support.

WARRANTY AND CUSTOMER SUPPORT

This John Timberland light fixture comes with a **Limited 1-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims, technical assistance, or to report missing/damaged parts, please contact John Timberland customer support. Keep your purchase receipt as proof of purchase.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: An official brand video from John Timberland (Lamps Plus) showcasing various outdoor lighting styles, including porch and patio lighting, and fountains. This video provides a general overview of the brand's product range and design philosophy.