

Manuals.plus /
› ASHATA /
› User Manual: ASHATA Bluetooth Adapter for Bluetooth 4.0 USB Dongle Transmitter and Receiver with Mic for PS 4 Game Console Gamepad

ASHATA eboxer-17d4k0umi1x552

User Manual: ASHATA Bluetooth Adapter for PS4

Model: eboxer-17d4k0umi1x552

1. INTRODUCTION

This manual provides comprehensive instructions for the ASHATA Bluetooth Adapter, designed for use with PS4 game consoles and other compatible devices. This USB dongle acts as both a transmitter and receiver, enabling Bluetooth audio connectivity for your gaming and multimedia needs. It supports Bluetooth 4.0 and includes a microphone for voice communication.



Image 1.1: The ASHATA Bluetooth Adapter (USB dongle) and its accompanying 3.5mm microphone jack. The dongle features a button and an indicator light.

2. PRODUCT FEATURES

- **Universal Compatibility:** Connects to most Bluetooth audio devices when plugged into a USB slot, ideal for PS4 game consoles.
- **Plug and Play Power:** USB 5V power supply ensures automatic Bluetooth activation upon connection.
- **A2DP Support:** Enables high-quality audio streaming from your PC or console to Bluetooth headsets (44.1K sampling, double channels, 16bits wide).
- **HFP (Voice Talkback) Support:** Facilitates voice communication through Bluetooth headsets (8K sampling, mono channel, 16bits wide).
- **Independent Protocol Implementation:** The Bluetooth protocol is implemented directly on the dongle,

allowing audio transmission to Bluetooth terminal devices as long as the host supports USB.

- **Compact and Portable:** Small and lightweight design for easy transport and storage.

Made of high quality material, strong and durable

Real voice, no delay in real time

USB 5V power supply

Support A2DP, HFP

Small and light, easy to carry

A USB adapter, will connect to most wireless audio devices
when you plug into for PS4 USB slot



Image 2.1: The ASHATA Bluetooth Adapter, illustrating its compact size and key features such as real-time voice, USB 5V power, A2DP/HFP support, and portability.

3. SPECIFICATIONS

Attribute	Value
Product Dimensions	0.39 x 0.39 x 0.39 inches (10 x 10 x 10 mm approx.)
Item Weight	0.776 ounces (22 Grams)
Model Number	eboxer-17d4k0umi1x552
Brand	ASHATA

Attribute	Value
Hardware Interface	Bluetooth, USB
Compatible Devices	Desktop (and PS4 Game Console)
Data Link Protocol	Bluetooth, USB
Data Transfer Rate	3 Megabits Per Second



Image 3.1: Detailed dimensions of the ASHATA Bluetooth Adapter (USB dongle) and the 3.5mm microphone jack, showing measurements in both millimeters and inches.

4. SETUP GUIDE

1. **Connect the Dongle:** Insert the ASHATA Bluetooth Adapter into an available USB port on your PS4 console or compatible desktop computer. The dongle is powered by the USB 5V supply.
2. **Automatic Activation:** Upon successful connection, the Bluetooth function of the dongle will activate automatically. An indicator light on the dongle may illuminate or flash to indicate its status.
3. **Connect Microphone (Optional):** If you intend to use voice chat, plug the included 3.5mm microphone jack into the designated port on the Bluetooth adapter.



Image 4.1: The ASHATA Bluetooth Adapter shown from an angled perspective, ready to be inserted into a USB port. This view highlights the USB connector and the main body of the dongle.

5. OPERATING INSTRUCTIONS

Once the adapter is connected and active, you can proceed to pair your Bluetooth audio devices.

1. **Enter Pairing Mode:** Put your Bluetooth headset or audio device into pairing mode. Refer to your device's manual for specific instructions on how to do this (often involves holding a power or pairing button until an

indicator light flashes).

2. **Initiate Pairing on Adapter:** Press the 'M' button on the ASHATA Bluetooth Adapter. The indicator light on the dongle will likely flash rapidly, indicating it is searching for devices.
3. **Successful Connection:** Once your Bluetooth audio device is successfully paired, the indicator light on the dongle will typically change to a solid light or a slower flash. Audio from your PS4 or computer will now be routed through your Bluetooth headset.
4. **Voice Chat (if applicable):** If using the microphone, ensure it is properly inserted into the dongle. Your voice will be transmitted through the paired Bluetooth headset.



Image 5.1: A close-up view of the ASHATA Bluetooth Adapter, showing the circular 'M' button used for pairing and the small indicator light next to it.



Image 5.2: A detailed view of the 3.5mm microphone jack, which plugs into the Bluetooth adapter for voice communication.

6. MAINTENANCE

To ensure the longevity and optimal performance of your ASHATA Bluetooth Adapter, follow these simple maintenance guidelines:

- **Keep Dry:** Avoid exposing the adapter to water or excessive humidity.
- **Clean Gently:** Use a soft, dry cloth to clean the exterior of the adapter. Do not use harsh chemicals or abrasive materials.
- **Store Properly:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handle with Care:** Avoid dropping or subjecting the adapter to strong impacts.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Adapter not powering on / No indicator light.	◦ Ensure the adapter is fully inserted into a working USB port. ◦ Try a different USB port on your device. ◦ Verify the host device (PS4, PC) is powered on.
Cannot pair with Bluetooth headset.	◦ Ensure your Bluetooth headset is in pairing mode. ◦ Press the 'M' button on the adapter to initiate its pairing mode. ◦ Move the headset closer to the adapter. ◦ Ensure no other Bluetooth devices are interfering. ◦ Try restarting both the adapter (by unplugging and replugging) and your headset.
No audio output after pairing.	◦ Check the volume levels on both your headset and the host device (PS4/PC). ◦ Ensure the Bluetooth headset is selected as the audio output device in your PS4 or computer settings. ◦ Confirm the headset is fully charged.
Microphone not working.	◦ Ensure the 3.5mm microphone jack is fully inserted into the adapter. ◦ Check microphone settings on your PS4 or computer to ensure it's enabled and selected as the input device. ◦ Test the microphone with another device if possible.

8. WARRANTY AND SUPPORT

ASHATA products are manufactured with quality and performance in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit the official ASHATA website. If you encounter any issues or require technical assistance, please contact ASHATA customer support through their official channels. For further information or support, you may visit the ASHATA store on Amazon: [ASHATA Store](#)

© 2023 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099KGJCST>

More documents and user manuals: **<https://manuals.plus/>**