

[Manuals.plus](#) /

› [edihome](#) /

› edihome Clothes Rack Instruction Manual

edihome EDIH-0014-3

edihome Clothes Rack Instruction Manual

Model: EDIH-0014-3

1. INTRODUCTION

Thank you for choosing the edihome Clothes Rack. This portable and adjustable clothes rack is designed to provide a convenient and durable solution for organizing your garments. Constructed with high-quality metal tubes and ABS plastic parts, it offers excellent resistance and durability, capable of supporting up to 10 kg of weight. Its wheeled design ensures easy portability, and its adjustable height and width make it versatile for various spaces and needs.



Figure 1: Fully assembled edihome Clothes Rack with clothes.

2. SAFETY INFORMATION

- Ensure the rack is assembled correctly and all connections are secure before use.
- Do not exceed the maximum load capacity of 10 kg to prevent instability or damage.
- Place the clothes rack on a flat, stable surface to avoid tipping.
- Keep children and pets away from the rack during assembly and while in use to prevent accidents.

- Avoid hanging heavy items unevenly, as this can cause the rack to become unbalanced.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Main horizontal hanging bar (1 unit)
- Vertical support poles (2 units, each typically in two adjustable sections)
- Base supports with wheels (2 units)
- Connecting tubes for the base (2 units)
- Plastic ABS connectors/joints (various, for securing poles and bars)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

The edihome Clothes Rack is designed for easy, tool-free assembly. Follow these steps:

1. **Attach Wheels to Base Supports:** Ensure the wheels are securely inserted into the designated slots on the base supports.
2. **Connect Base Supports:** Insert the two connecting tubes into the holes on the base supports to form the rectangular base frame. Ensure they click into place or are firmly seated.
3. **Assemble Vertical Poles:** Each vertical pole typically consists of two sections. Connect these sections, ensuring the adjustable mechanism is functional.
4. **Insert Vertical Poles into Base:** Securely insert the assembled vertical poles into the upright openings on the base supports.
5. **Attach Horizontal Bar:** Place the main horizontal hanging bar onto the top of the vertical poles. Ensure it is firmly seated and secured by the plastic connectors.
6. **Adjust Height and Width:** Loosen the locking mechanisms on the vertical poles and the horizontal bar to adjust the rack to your desired height and width. Once set, tighten the mechanisms to secure the position.



Figure 2: Dimensions of the edihome Clothes Rack, illustrating adjustable height and width.

5. OPERATING INSTRUCTIONS

- **Adjusting Height and Width:** To adjust the height, loosen the plastic locking collars on the vertical poles, extend or retract the poles to the desired height, and then firmly tighten the collars. Similarly, to adjust the width, loosen the locking mechanisms on the horizontal bar, extend or retract, and then tighten.
- **Moving the Rack:** The edihome Clothes Rack is equipped with wheels for easy portability. Simply push or

pull the rack to move it to your desired location. Ensure the path is clear of obstacles.

Easy to move

- ✓ 360° Rotation
- ✓ Move and place as you like



Figure 3: Detail of the 360-degree rotating wheels for easy movement.

Usage Examples

The versatile design allows for use in various settings:

- **Corridor:** Ideal for temporary hanging of coats or guest clothing.
- **Bedroom:** Perfect as an auxiliary wardrobe or for organizing daily outfits.
- **Balcony:** Suitable for drying clothes outdoors (ensure it is not exposed to extreme weather conditions).

Corridor



Figure 4: Clothes rack in a corridor.

Bedroom



Figure 5: Clothes rack in a bedroom.

Balcony



Figure 6: Clothes rack on a balcony.

6. MAINTENANCE AND CARE

- **Cleaning:** To clean the clothes rack, simply wipe it down with a damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the metallic finish and plastic components.
- **Regular Checks:** Periodically check all connections and locking mechanisms to ensure they remain tight and secure. Retighten if necessary.
- **Storage:** If not in use for an extended period, the rack can be easily disassembled for compact storage. Store in a dry place to prevent corrosion.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Loose connections; uneven weight distribution; overloaded.	Ensure all plastic connectors and locking mechanisms are fully tightened. Distribute clothes evenly across the bar. Do not exceed the 10 kg weight limit.

Problem	Possible Cause	Solution
Height/width adjustment slips.	Locking collars/mechanisms not tightened sufficiently.	Firmly tighten the locking collars/mechanisms after adjusting the height or width.
Wheels do not roll smoothly.	Debris in wheels; wheels not properly inserted.	Check wheels for any trapped debris and clean if necessary. Ensure wheels are fully inserted into the base supports.

8. SPECIFICATIONS

- **Model Number:** EDIH-0014-3
- **Dimensions (Adjustable):** Approximately 43 cm (Depth) x 150 cm (Width) x 160 cm (Height)
- **Material:** Metal tubes, ABS plastic connectors
- **Color:** Metallic
- **Weight Capacity:** Up to 10 kg
- **Product Weight:** 1.68 kg
- **Special Features:** Portable, Adjustable Height and Width, Wheeled

9. WARRANTY AND SUPPORT

edihome products come with a European warranty. If you encounter any issues with your clothes rack, whether before or after your purchase, please do not hesitate to contact our customer support team. We are committed to ensuring your satisfaction.

Customer Support: For assistance, please refer to the contact information provided on your purchase receipt or visit the official edihome website for support options.