

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HYUNDAI](#) /
- › [HYUNDAI 14-inch HyBook Laptop HT14CCIC81EG-128BNDL User Manual](#)

HYUNDAI HT14CCIC81EG-128BNDL

HYUNDAI 14-inch HyBook Laptop User Manual

Model: HT14CCIC81EG-128BNDL

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HYUNDAI 14-inch HyBook Laptop. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.



Image 1.1: The HYUNDAI 14-inch HyBook Laptop, showcasing its sleek design and Windows 10 operating system interface.

2. SETUP

2.1 Unpacking and Initial Power On

1. Carefully remove the laptop and all accessories from the packaging.
2. Connect the power adapter to the DC-IN jack on the right side of the laptop and then to a power outlet.
3. Open the laptop lid and press the power button, typically located above the keyboard, to turn on the device.
4. Follow the on-screen instructions to complete the initial Windows 10 Home setup, including language selection, region, and user account creation.

2.2 Connecting Peripherals

Your HyBook laptop features various ports for connecting external devices.



Image 2.1: Left side view of the laptop, highlighting the USB 3.0, Ethernet RJ45, USB 2.0, expandable microSD slot, and 3.5mm audio jack.



Image 2.2: Right side view of the laptop, showing the DC-IN jack, USB 2.0 port, and Mini HDMI port.

- **USB Ports:** Connect USB devices such as mice, keyboards, or external drives to the USB 3.0 (left side) or USB 2.0 (left and right sides) ports.
- **Audio Jack:** Plug in headphones or external speakers to the 3.5mm audio jack.
- **Mini HDMI:** Use a Mini HDMI to HDMI cable to connect to an external monitor or TV.
- **Ethernet RJ45:** Connect an Ethernet cable for a wired internet connection.

2.3 Internet Connection

- **Wi-Fi:** After initial setup, click the Wi-Fi icon in the taskbar, select your network, enter the password, and click Connect.
- **Ethernet:** Plug an Ethernet cable into the RJ45 port for a stable wired connection.

3. OPERATING YOUR LAPTOP

3.1 Windows 10 Home Overview

Your laptop runs on Windows 10 Home, providing a familiar and user-friendly interface. Navigate using the touchpad or an external mouse. The Start Menu (Windows icon) provides access to applications, settings, and power options.

Comprehensive, Built-in, Ongoing Protection

Windows 10 Home

Get the best PC experience possible—only with a genuine version of Windows 10. Built-in security features include antivirus, firewall, and internet protections.



Image 3.1: The laptop running Windows 10 Home, illustrating the operating system's interface.

3.2 Storage Management

The laptop comes with 128GB SSD storage and an included 128GB MicroSD card. You can further expand storage:

- **MicroSD Slot:** Insert an additional microSD card into the expandable microSD slot on the left side for more storage.
- **M.2 SSD Slot:** An internal M.2 SSD slot is available for advanced users to install an additional M.2 Solid State Drive. Consult a professional if you are unsure about this upgrade.

Expandable Storage Capabilities

Save endless amounts of data with the pre-installed 128GB. Increase your storage space with its built-in microSD slot that supports an additional 128GB of storage.



8GB
RAM



128GB
Storage



microSD
Slot



Image 3.2: Overview of the laptop's storage and memory features, including expandable options.

3.3 Connectivity Features

The laptop supports various connectivity options for seamless integration into your digital life.

- **Wi-Fi:** Integrated Wi-Fi allows for wireless internet access.
- **Bluetooth:** Connect wireless peripherals such as headphones, speakers, or mice via Bluetooth 4.0.
- **USB Ports:** For connecting a wide range of USB devices.
- **Mini HDMI:** For connecting to external displays.
- **Ethernet:** For a stable wired network connection.

Completely Connected, Perfectly Productive

Connect and work anywhere. Reliable WiFi connection for enhanced streaming, downloads and web surfing. Included Ethernet RJ45 port.



WiFi



Ethernet
RJ45



Online
Streaming



Internet
Browsing

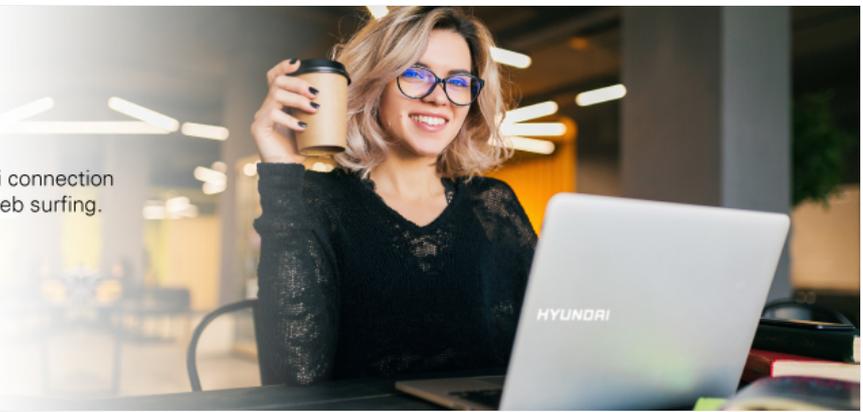


Image 3.3: Visual representation of the laptop's comprehensive connectivity options.

4. MAINTENANCE

4.1 Cleaning Your Laptop

- Use a soft, lint-free cloth to clean the screen and exterior. Avoid harsh chemicals.
- For the keyboard, use compressed air to remove dust and debris.
- Ensure the laptop is powered off and unplugged before cleaning.

4.2 Software Updates

- Regularly check for and install Windows updates to ensure system stability and security. Go to **Settings > Update & Security > Windows Update**.
- Keep your drivers updated for optimal hardware performance.

4.3 Battery Care

- Avoid completely draining the battery frequently.
- Store the laptop in a cool, dry place when not in use for extended periods.
- For long-term storage, charge the battery to about 50-60%.

5. TROUBLESHOOTING

This section addresses common issues you might encounter.

5.1 Common Issues

- **Laptop does not power on:** Ensure the power adapter is securely connected to both the laptop and a working power outlet. Check if the power button is functioning correctly.
- **Slow performance:** Close unnecessary applications. Check for background processes in Task Manager (Ctrl+Shift+Esc). Ensure sufficient free storage space. Consider running a disk cleanup.
- **No sound or poor sound quality:** Check volume settings in Windows. Ensure headphones or external speakers are properly connected. Update audio drivers. If internal speakers have low quality, consider using external USB speakers or headphones for an improved audio experience.
- **Wi-Fi connection issues:** Restart your router and laptop. Check if Wi-Fi is enabled in Windows settings. Ensure you are within range of the Wi-Fi network.
- **External display not detected:** Ensure the Mini HDMI cable is securely connected to both the laptop and the display. Check the input source on your external display. Press **Windows key + P** to cycle through display modes.

5.2 Contact Support

If you encounter issues not resolved by the troubleshooting steps, please contact HYUNDAI customer support for further assistance. Refer to the warranty section for details.

6. SPECIFICATIONS

Below are the technical specifications for the HYUNDAI 14-inch HyBook Laptop.



Image 6.1: Physical dimensions of the HYUNDAI 14-inch HyBook Laptop.

Feature	Specification
Brand	HYUNDAI
Model Name	Intel Celeron
Screen Size	14.1 Inches
Native Resolution	1366 x 768 pixels (IPS Display)
CPU Model	Intel Celeron N4120

RAM Memory Installed Size	8 GB DDR4
Hard Disk Size	128 GB SSD
Expandable Storage	128GB MicroSD (included), M.2 SSD slot
Operating System	Windows 10 Home
Graphics Coprocessor	Intel UHD Graphics 600
Connectivity Technology	Bluetooth 4.0, Wi-Fi (802.11bgn), Ethernet, USB, Mini HDMI
Ports	1x USB 3.0, 2x USB 2.0, 1x Mini HDMI, 1x Ethernet RJ45, 1x 3.5mm Audio Jack, 1x DC-IN, 1x MicroSD Slot
Item Weight	2.98 Pounds
Dimensions (L x W x Thickness)	8.8"L x 12.7"W x 0.68"Th
Battery	5000 mAh

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your HYUNDAI 14-inch HyBook Laptop comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or modifications.

Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your product, please visit the official HYUNDAI Technology website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.