

Sanus MEHKS-W2

Instruction Manual

Sanus Tilt Stand for Amazon Echo Show 15

Model: MEHKS-W2

1. INTRODUCTION

This manual provides detailed instructions for the proper assembly, operation, and maintenance of your Sanus Tilt Stand, designed specifically for the Amazon Echo Show 15. Please read this manual thoroughly before installation and keep it for future reference.

2. SAFETY INFORMATION

Please observe the following safety precautions to ensure safe operation and to prevent damage to your device or injury.

- Ensure all screws are securely fastened during assembly. Loose connections can lead to instability.
- Place the assembled unit on a stable, level surface to prevent tipping. The stand features anti-slip foot pads for enhanced stability.
- Do not exceed the recommended device weight or size. This stand is designed exclusively for the Amazon Echo Show 15.
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Sanus Tilt Stand (1)
- Screws for assembly (Quantity as specified in hardware pack)
- Instruction Manual (This document)



ALL ASSEMBLY HARDWARE INCLUDED

Image: All components included in the Sanus Tilt Stand package.

4. SETUP AND INSTALLATION

Follow these steps to attach your Amazon Echo Show 15 to the Sanus Tilt Stand:

1. Carefully unbox the Sanus Tilt Stand and verify all components are present as listed in Section 3.
2. Position the Echo Show 15 with its back facing upwards on a soft, clean surface to prevent scratches.
3. Align the mounting holes on the back of the Echo Show 15 with the corresponding holes on the Sanus Tilt Stand.
4. Insert the provided screws into the aligned holes and tighten them securely with a screwdriver. Do not overtighten.
5. Route the power cable for the Echo Show 15 through the integrated hidden cable management channel on the stand. This helps to stow extra cable and maintain a tidy appearance.



Image: Rear view illustrating the attachment of the Echo Show 15 to the stand.



Image: The Sanus Tilt Stand in its open configuration, highlighting the attachment area.

5. OPERATING THE TILT STAND

The Sanus Tilt Stand allows for flexible viewing angles and orientation changes.

Adjusting Tilt Angle

The stand offers up to 27-degrees of upward tilt when the Echo Show 15 is in portrait orientation and up to 30-degrees of tilt when in landscape orientation. Gently push or pull the top edge of the Echo Show 15 to adjust the viewing angle to your preference.



Image: Side view showing the adjustable tilt of the Echo Show 15 on the stand.

Changing Orientation (Portrait/Landscape)

The stand supports both portrait and landscape orientations. To change the orientation, simply rotate the Echo Show 15 on the stand. Ensure the stand is on a stable surface during rotation.



Image: Echo Show 15 displayed in landscape orientation on the tilt stand.

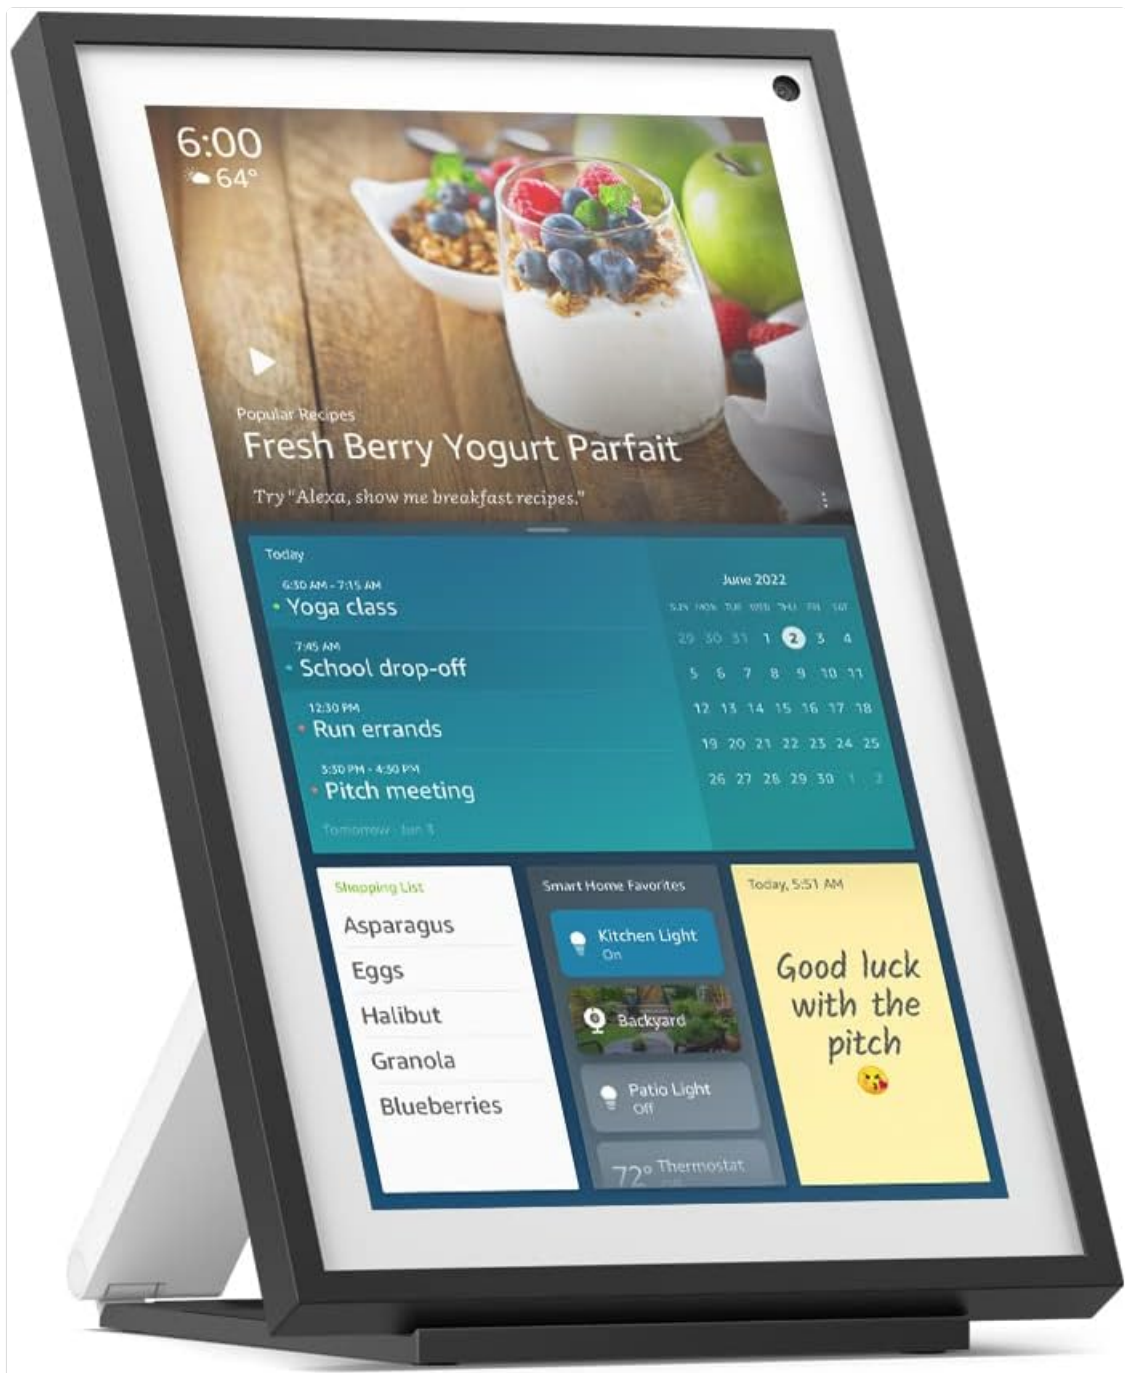


Image: Echo Show 15 displayed in portrait orientation on the tilt stand.

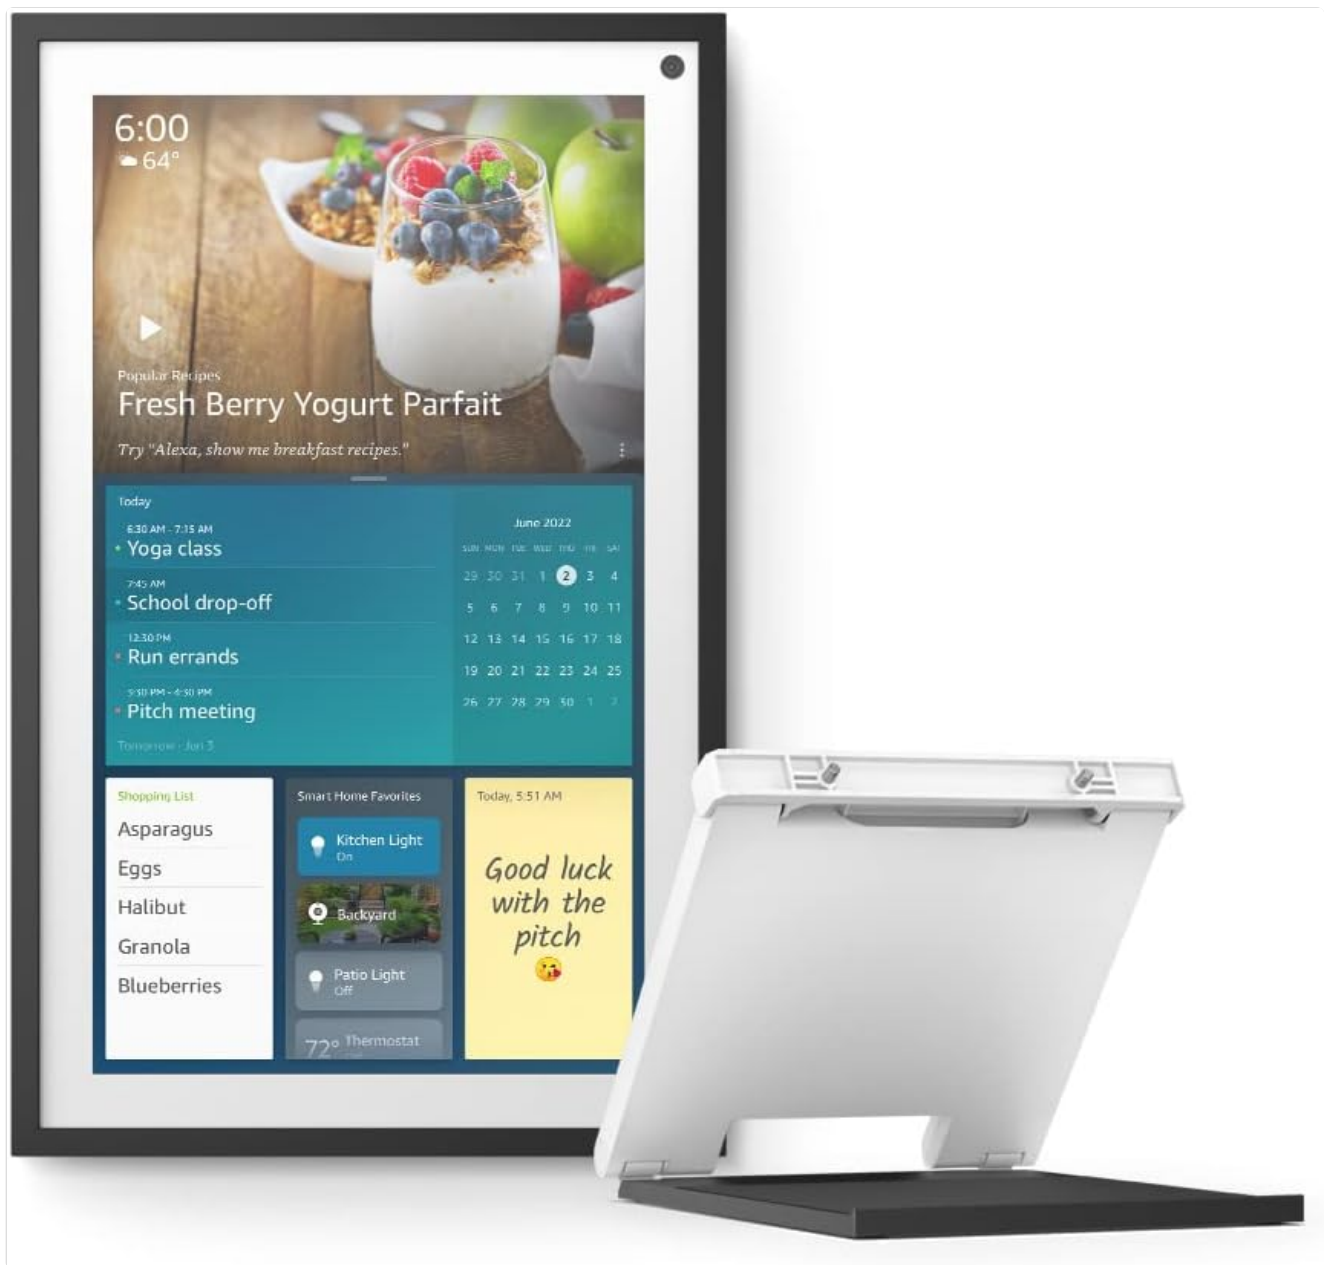


Image: The Sanus Tilt Stand configured for portrait use, ready for the Echo Show 15.

6. MAINTENANCE

To ensure the longevity and proper function of your tilt stand:

- Clean the stand with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Periodically check that all screws remain tight. Retighten if necessary.
- Ensure the anti-slip foot pads are clean and free of debris to maintain optimal grip.

7. TROUBLESHOOTING

If you encounter issues with your Sanus Tilt Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand feels unstable or wobbly.	Screws are loose; surface is uneven.	Ensure all attachment screws are tightened. Place the stand on a flat, stable surface.

Problem	Possible Cause	Solution
Difficulty adjusting tilt angle.	Mechanism is stiff.	Apply gentle, even pressure. The mechanism is designed for firm, stable adjustments. Do not force.
Echo Show 15 does not fit.	Incorrect device model.	This stand is designed exclusively for the Amazon Echo Show 15. Verify your device model.

8. SPECIFICATIONS

- **Model:** MEHKS-W2
- **Compatibility:** Amazon Echo Show 15
- **Tilt Angle (Portrait):** Up to 27 degrees upward
- **Tilt Angle (Landscape):** Up to 30 degrees upward
- **Orientation Support:** Portrait and Landscape
- **Features:** Stable design, anti-slip foot pads, hidden cable management

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Sanus website. Keep your proof of purchase for warranty claims.

© 2024 Sanus. All rights reserved.

Amazon, Echo, and Echo Show are trademarks of Amazon.com, Inc. or its affiliates.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question