

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Chillafish](#) /

› [Chillafish Charlie GLOW Kids Balance Bike Instruction Manual](#)

Chillafish Charlie GLOW (CPCH02BEI)

Chillafish Charlie GLOW Kids Balance Bike Instruction Manual

Model: Charlie GLOW (CPCH02BEI)

Brand: Chillafish

1. INTRODUCTION

The Chillafish Charlie GLOW Balance Bike is a lightweight and durable 10-inch balance trainer designed to help toddlers aged 18-48 months develop essential gross motor skills, balance, and steering. Its innovative design features no-puncture EVA tires and wheels that light up when in motion, requiring no batteries. The bike's adjustable seat and handlebar ensure it grows with your child, providing a comfortable and effective learning experience.



Image 1.1: The Chillafish Charlie GLOW Balance Bike, showcasing its lightweight frame and illuminated wheels.

2. SAFETY INFORMATION

WARNING: Use under adult supervision.

- Always ensure your child wears a helmet and appropriate safety gear while riding.
- Do not use the balance bike near stairs, on steep inclines, or in heavy traffic areas.
- Regularly inspect the bike for loose parts, damage, or wear before each use.
- Ensure all bolts and fasteners are securely tightened.
- The maximum weight recommendation for this balance bike is 77 pounds (35 kg).

3. PACKAGE CONTENTS

Please verify that all the following components are included in your package:

- Chillafish Charlie GLOW Balance Bike (main frame with wheels)
- Instruction Manual (this document)
- Tools for Assembly (typically Allen keys)
- Warranty Sheet

4. SETUP AND ASSEMBLY

The Chillafish Charlie GLOW Balance Bike requires minimal assembly. Please follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Handlebars:** Insert the handlebar stem into the front fork tube. Ensure it is aligned correctly and tighten the securing bolt using the provided tools.
3. **Install Seat Post:** Insert the seat post into the frame's seat tube. Do not tighten fully yet, as adjustment will be needed.
4. **Final Checks:** Ensure all connections are secure and there is no excessive play in any moving parts.



Image 4.1: Visual representation of the adjustable seat and handlebar components.

5. OPERATING INSTRUCTIONS

5.1. Adjusting Seat Height

The seat height is adjustable from 11 to 14.5 inches (28-37 cm) to accommodate your child's growth. To adjust:

1. Loosen the quick-release lever or bolt on the seat post clamp.
2. Adjust the seat to a height where your child can comfortably place both feet flat on the ground with a

slight bend in their knees. This allows them to push off and stop safely.

3. Tighten the quick-release lever or bolt securely.

5.2. Adjusting Handlebar Height

The handlebar height can be adjusted from 18.7 to 19.8 inches (47.6-50.4 cm). To adjust:

1. Loosen the bolt on the handlebar stem using the provided tools.
2. Raise or lower the handlebars to a comfortable position for your child, typically around waist height when standing.
3. Ensure the handlebars are straight and aligned with the front wheel before tightening the bolt securely.

5.3. Riding the Balance Bike

Encourage your child to walk or run with the bike between their legs, pushing off the ground with their feet. As they gain confidence, they will naturally lift their feet and glide. The glow wheels activate kinetically as the bike moves, providing visibility and fun.



Image 5.1: A child demonstrating proper riding posture on the balance bike.

6. MAINTENANCE

- **Tires:** The 10-inch EVA tires are puncture-proof and require no inflation or maintenance. Simply wipe them clean as needed.
- **Cleaning:** Clean the bike with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Inspections:** Regularly check all bolts, nuts, and connections to ensure they are tight. Inspect the frame, seat, and handlebars for any signs of damage or wear.
- **Storage:** Store the balance bike in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan.



Image 6.1: Detail of the durable, puncture-proof EVA tires, designed for various surfaces.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheels do not glow when riding.	Screws securing the wheel mechanism are not tight enough.	Tighten the screws on the wheel hubs to increase pressure on the dynamo-style system.

Problem	Possible Cause	Solution
Handlebars or seat feel loose.	Securing bolts/levers are not fully tightened.	Re-tighten the handlebar stem bolt and seat post clamp securely using the provided tools.
Bike is difficult to steer.	Handlebars may be misaligned or too low/high.	Check handlebar alignment with the front wheel. Adjust handlebar height for optimal comfort and control.

8. SPECIFICATIONS

Feature	Detail
Bike Type	Balance Bike
Model Name	Charlie GLOW
Model Number	CPCH02BEI
Age Range (Description)	Toddler (18-48 months)
Wheel Size	10 Inches
Frame Material	Alloy Steel
Wheel Material	Ethylene Vinyl Acetate (EVA)
Item Weight	5.8 Pounds (2.6 kg)
Maximum Weight Recommendation	77 Pounds (35 kg)
Adjustable Seat Height	11 - 14.5 inches (28 - 37 cm)
Adjustable Handlebar Height	18.7 - 19.8 inches (47.6 - 50.4 cm)
Special Features	Adjustable Handlebars, Adjustable Seat, Lightweight, Glow Wheels (kinetic)
Brake Style	No brake
Assembly Required	Yes

A nice Packaging
for a great gift!



Image 8.1: Ergonomic dimensions and specifications for the Charlie GLOW Balance Bike.

9. WARRANTY AND SUPPORT

9.1. Warranty Information

The Chillafish Charlie GLOW Balance Bike comes with a **2-Year Limited Manufacturer Warranty**. Please refer to the included Warranty Sheet in your package for full details regarding coverage, terms, and conditions. An extended 5-year warranty may be available upon product registration.



Image 9.1: Extended warranty information.

9.2. Customer Support

For any questions, concerns, or support needs regarding your Chillafish Charlie GLOW Balance Bike,

please contact Chillafish customer service. Contact information can typically be found on the product packaging, the warranty sheet, or the official Chillafish website.