

[Manuals.plus](#) /

> [ZOKOP](#) /

> Portable Compact Twin Tub Washing Machine Capacity 14.3lbs 1300rpm/mins Semi-automatic Washer Laundry Machine Dryer Built-in Drain Pump Spin Cycle, Grey, 22.83inch x 14.72inch x 26.38inch

ZOKOP 1

Portable Compact Twin Tub Washing Machine User Manual

Model: XPB35-ZK35 | Brand: ZOKOP

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your ZOKOP Portable Compact Twin Tub Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.



Figure 1: Front view of the ZOKOP Portable Compact Twin Tub Washing Machine.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the specifications (110V/60Hz).
- Do not operate the machine with a damaged cord or plug.
- Keep children away from the appliance during operation.
- Do not immerse the electrical parts in water.
- Unplug the machine when not in use or before cleaning.
- Do not wash waterproof materials as this may cause abnormal vibration.

PRODUCT OVERVIEW

Components and Controls

Familiarize yourself with the main components and control panel of your washing machine.



Figure 2: Top view illustrating the control panel and dual tubs. The controls include a Wash Timer, Wash Selector (Gentle/Normal), and Spin Timer.

- **Wash Timer Knob:** Sets the washing duration (up to 15 minutes).
- **Wash Selector Knob:** Selects wash mode (Gentle or Normal) and Drain function.
- **Spin Timer Knob:** Sets the spin duration (up to 5 minutes).
- **Wash Tub:** For washing clothes.
- **Spin Tub:** For spinning clothes to remove excess water.
- **Water Inlet:** Connection point for the water supply.
- **Drain Hose:** For discharging dirty water.



Figure 3: Various angles of the washing machine, highlighting its compact design and rear drain hose connection.

SETUP

Unpacking and Placement

1. Carefully remove the washing machine from its packaging.
2. Check for any damage during transit.
3. Place the machine on a firm, level surface to minimize vibration and noise during operation. Ensure there is enough space around the machine for ventilation and access.

Connecting Water and Drain

1. Connect the provided water inlet hose to the water inlet on the machine and to a water faucet. Ensure connections are tight to prevent leaks.
2. Position the drain pipe to discharge water into a sink or drain. The built-in drain pump allows for more flexible drainage options. The drain pipe is extended to 1.1M.



Figure 4: Illustration of water inlet connection, drain hose, and internal components like the spin basket.

Power Connection

1. Plug the power cord into a standard 110V/60Hz electrical outlet.

OPERATING INSTRUCTIONS

Washing Clothes

1. Open the lid of the wash tub.
2. Load clothes into the wash tub. Do not overload (maximum 7.7 lbs).
3. Add appropriate amount of water and detergent.
4. Close the wash tub lid.
5. Set the **Wash Selector Knob** to "Normal" or "Gentle" depending on fabric type.
6. Turn the **Wash Timer Knob** to the desired washing time (up to 15 minutes). The machine will start washing.
7. Once washing is complete, turn the **Wash Selector Knob** to "Drain" to empty the water.

Spin Drying Clothes

1. Transfer washed clothes from the wash tub to the spin tub. Ensure clothes are evenly distributed. Do not overload (maximum 6.6 lbs).
2. Place the spin cap firmly on top of the clothes in the spin tub.
3. Close the spin tub lid.
4. Turn the **Spin Timer Knob** to the desired spin time (up to 5 minutes). The machine will start spinning.
5. Once spinning is complete, wait for the tub to stop completely before opening the lid and removing clothes.



Figure 5: Detailed view of the spin basket and the removable spin cap, which helps secure clothes during the spin cycle.

MAINTENANCE

Cleaning the Machine

- Always unplug the machine before cleaning.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the inside of the wash and spin tubs regularly to prevent residue buildup.
- Ensure the drain hose is clear of blockages.

Storage

- Drain all water from the machine.
- Wipe the machine dry.
- Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Check circuit breaker; Set timer knob.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to "Drain".	Straighten hose, clear blockage; Turn wash selector to "Drain".
Excessive vibration/noise	Machine not level; Uneven load in spin tub; Overloaded.	Adjust machine to be level; Redistribute clothes evenly; Reduce load size.

Problem	Possible Cause	Solution
Water leakage	Hoses not properly connected; Overfilling.	Check and tighten hose connections; Do not exceed maximum water level.

SPECIFICATIONS

Feature	Detail
Model	XPB35-ZK35
Power Supply	110V/60Hz
Rated Washing Capacity	7.7 lbs (3.5 kg)
Rated Spin Capacity	6.6 lbs (3.0 kg)
Rated Wash Input Power	240W
Rated Spin Input Power	120W
Total Power	360W
Color	Grey
Dimensions (L x W x H)	22.83 x 14.72 x 26.38 inches (58 x 37.4 x 67 cm)
Weight	24.25 lbs (11 kg)
Material	Plastic
Motor Speed	1300 rpm/mins
Included Components	Washing Machine with Built-in Drain Pump, Water Inlet, Drain Pipe



Figure 6: Dimensional diagram of the washing machine, indicating length, width, and height.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact ZOKOP customer service. Keep your purchase receipt as proof of purchase.

Customer Service: Please refer to the contact information provided on the product packaging or the official ZOKOP website for the most up-to-date support channels.

