

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [JOLIKE](#) /

> [JOLIKE MP3 Player Bluetooth 5.3 Full Touch Screen Color Screen Mini MP3 Player Instruction Manual](#)

JOLIKE M5-32GB-Red

JOLIKE M5-32GB-Red MP3 Player Instruction Manual

Model: M5-32GB-Red

PRODUCT OVERVIEW

The JOLIKE M5-32GB-Red MP3 Player is a compact and versatile audio device designed for high-fidelity music playback and various multimedia functions. Featuring a full touch screen, durable zinc alloy design, and Bluetooth 5.3 connectivity, it offers a seamless user experience. This player is ideal for listening to music, FM radio, recording audio, viewing videos, and reading e-books, making it suitable for outdoor activities, travel, and daily use.



The JOLIKE M5-32GB-Red MP3 Player in red, shown with included wired earphones, highlighting its compact size and full-screen display.

KEY FEATURES

- **Full-screen Touch Interface:** Highly sensitive touch screen with a mirror surface and zinc alloy design for intuitive navigation and scratch resistance. Supports one-key lock screen.
- **Bluetooth 5.3 Connectivity:** Offers faster transmission speed, stable performance, and wide compatibility with Bluetooth speakers and headsets. Supports background operation for multitasking. *Note: This MP3 player acts as a Bluetooth transmitter and cannot pair with mobile phones.*
- **HiFi Lossless Sound Quality:** Equipped with a professional intelligent digital noise reduction chip for superior audio. Supports various audio formats including MP3, WMA, APE, FLAC, WAV, ACELP. Customizable equalizer settings are available.
- **Multifunctional Capabilities:** Includes FM radio, pedometer, recording (line input supported), video playback, e-book reader, alarm clock, equalizer, A-B repeat, and text synchronization.
- **Durable Metal Build & Long Battery Life:** Constructed with a metal body for durability. Provides up to 48 hours of music playback with wired headphones (screen off) and 6.5 hours in Bluetooth mode after a 2.5-hour full charge.

Incredible Multi-function

Enrich Your Life



Full touchscreen



Bluetooth 5.0



FM Radio



Recording



E-book



TF card slot



Pedometer



Alarm Clock



An illustration of the MP3 player's multi-functional capabilities, including full touchscreen, Bluetooth, FM Radio, Recording, E-book, TF card slot, Pedometer, and Alarm Clock.

PACKAGE CONTENTS

Please check the box for the following items:

- JOLIKE M5-32GB-Red MP3 Player

- USB Cable
- Anti-lost Rope (Lanyard)
- Earphones (Wired)
- Protective Case
- User Manual (this document)

Size & Packing List



User Manual



USB Cable



Anti-lost rope



Earphones



Protective case

A visual representation of the MP3 player and its included accessories: User Manual, USB Cable, Anti-lost rope, Earphones, and Protective

SETUP GUIDE

1. Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge takes approximately 2.5 hours.

2. Power On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off prompt appears on the screen, then confirm.

3. Transferring Music and Files

The MP3 player has 32GB of built-in memory and supports up to a 128GB TF card (not included) for expanded storage.

1. Connect the MP3 player to your computer using the provided USB cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your desired music, video, e-book, or image files into the appropriate folders on the player's internal storage or inserted TF card.
4. Safely eject the device from your computer before disconnecting the USB cable.

Built-in 32GB memory

you can store and enjoy 8000 songs in the mp3 player
Support expand up to 128GB TF card



The MP3 player highlighting its 32GB built-in memory and the slot for an expandable TF card (up to 128GB).


OPERATING INSTRUCTIONS

1. Navigation

The device features a full touch screen for easy navigation. Swipe left/right or up/down to browse through menus and tap icons to select functions.

Full Touch Screen

Simple touch screen to control the device

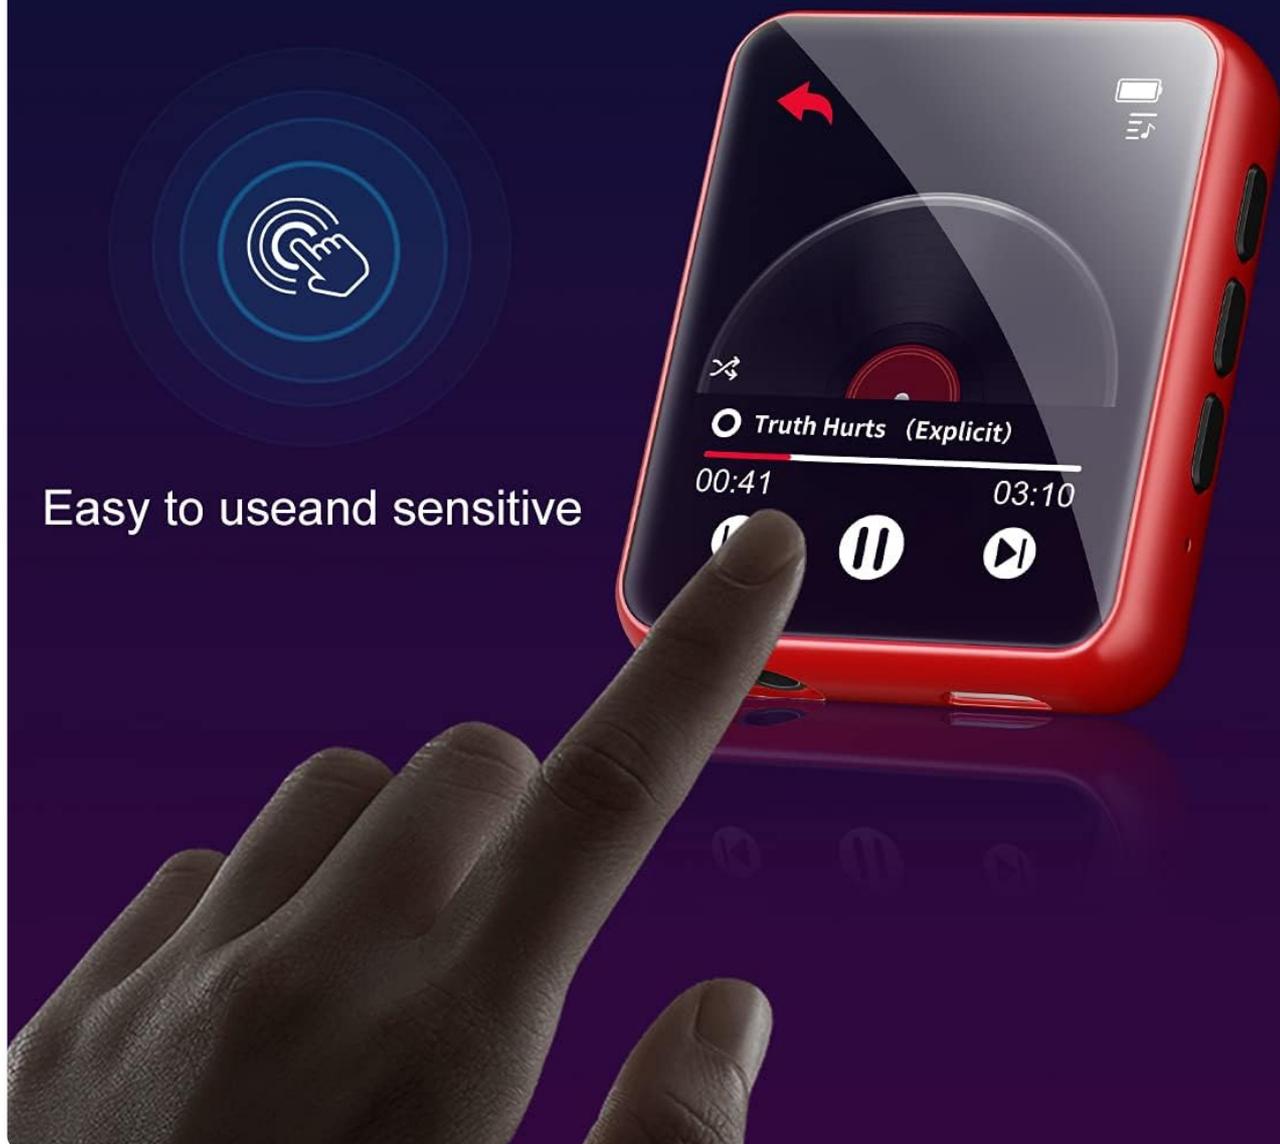

Easy to use and sensitive

A hand demonstrating interaction with the MP3 player's sensitive full touch screen, showing music playback controls.

2. Music Playback

- From the main menu, tap the 'Music' icon.
- Browse your music library by artist, album, genre, or folder.
- Tap a song to begin playback.
- Use the on-screen controls for play/pause, skip tracks, and volume adjustment.

- Adjust equalizer settings via the 'Settings' menu or during playback.

3. Bluetooth Connection


To connect to Bluetooth headphones or speakers:

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the MP3 player, tap the 'Bluetooth' icon from the main menu.
3. Turn Bluetooth 'On' and scan for available devices.
4. Select your device from the list to pair.

Upgrade Bluetooth 5.0

- More stable
- Lower power consumption
- Faster connection
- Longer transmission distance

Universal Compatibility

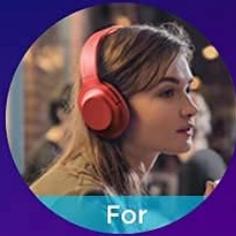

For

Bluetooth Headphone



For

Bluetooth earbuds



For

Bluetooth Speaker




The MP3 player demonstrating its Bluetooth 5.0 capabilities, connecting to various audio devices like headphones, earbuds, and speakers for a stable and faster connection.

4. FM Radio

To use the FM radio function:

1. Plug in the wired earphones; they act as the antenna for the FM radio.
2. Tap the 'FM Radio' icon from the main menu.

3. Use the on-screen controls to scan for stations or manually tune to a frequency.

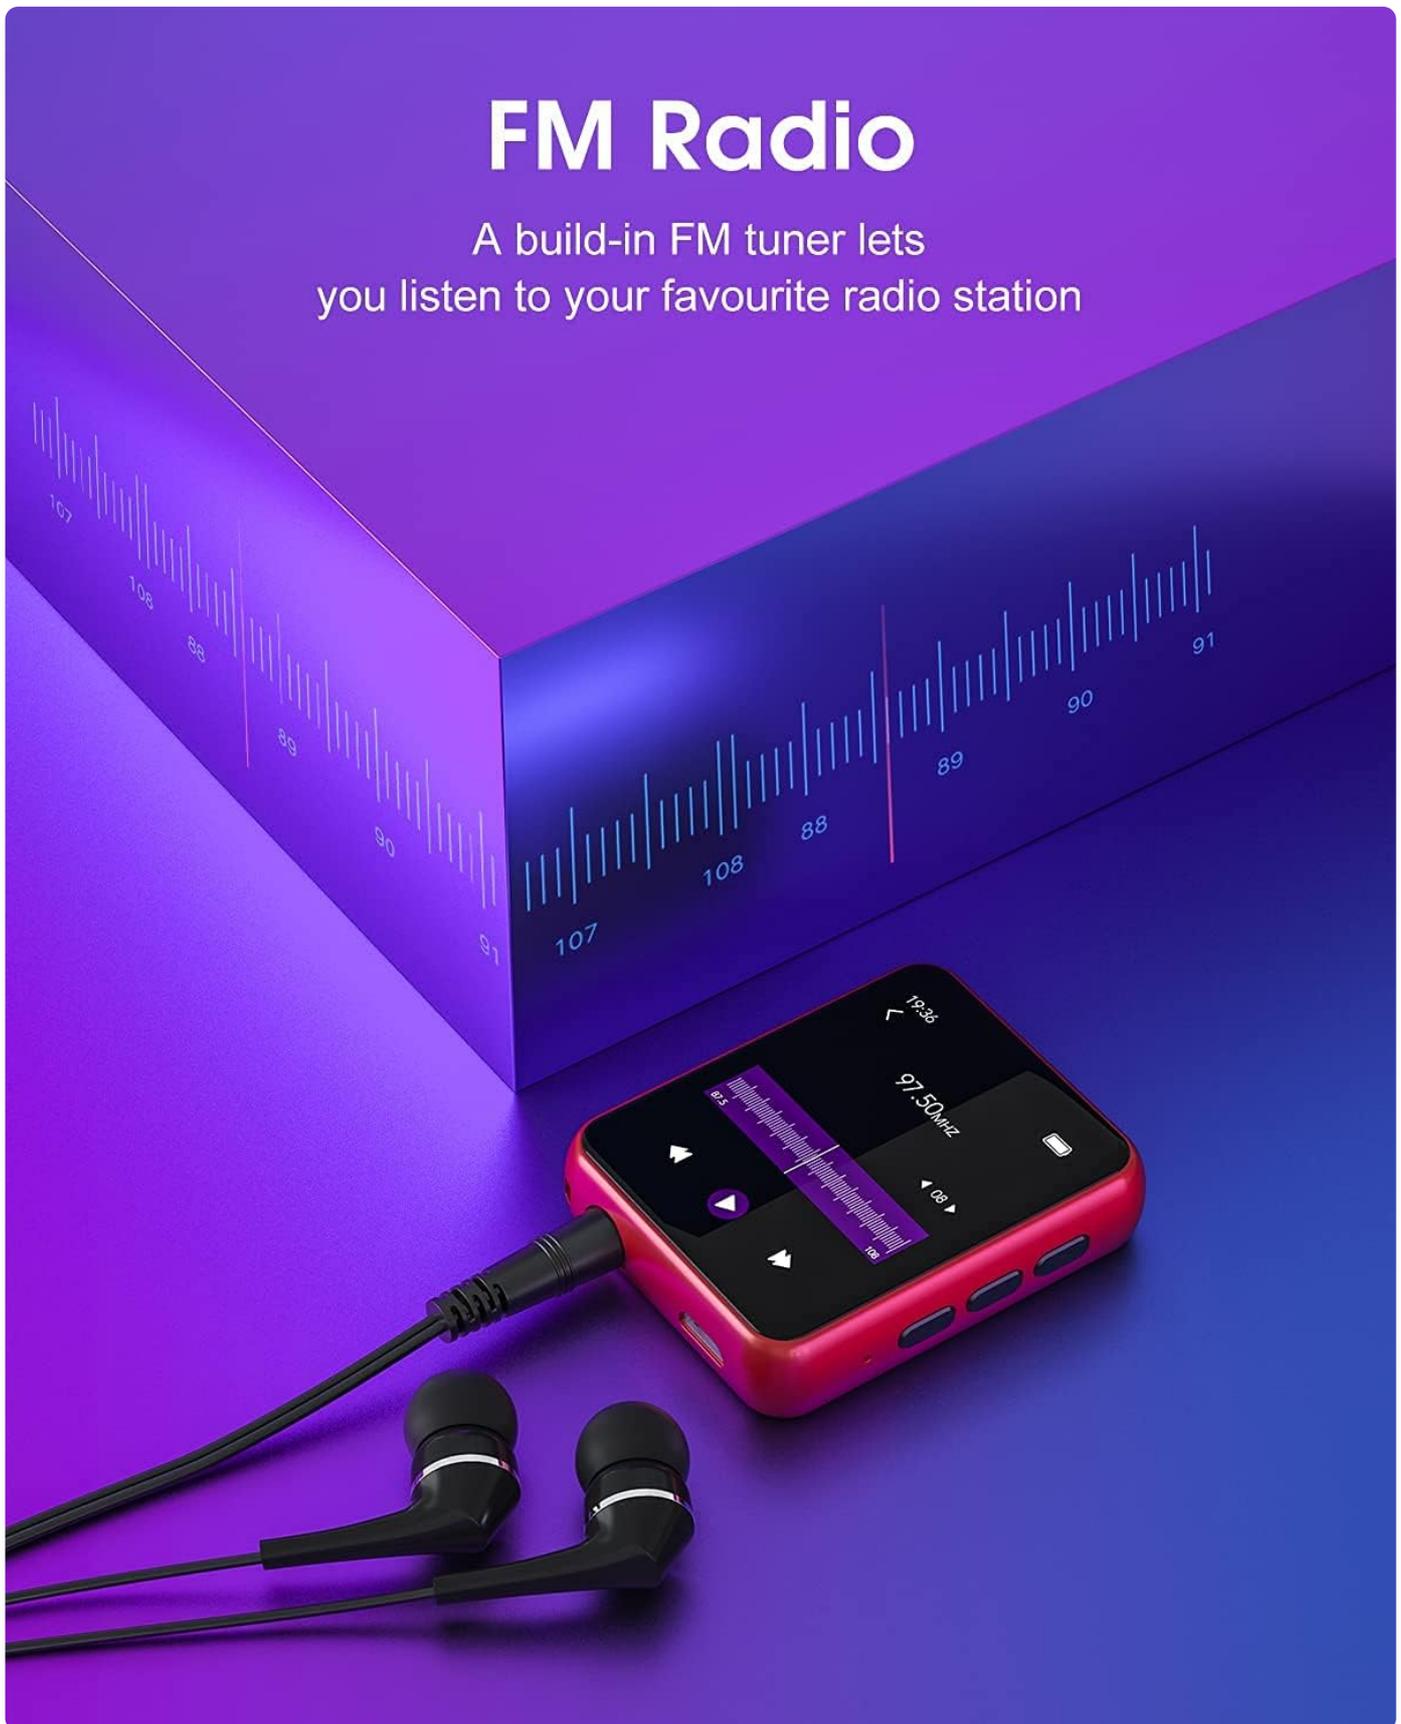

The MP3 player showing its FM Radio interface, with wired earphones connected to serve as the antenna for tuning into favorite radio stations.

5. Recording

The player supports voice recording and line-in recording:

- Tap the 'Record' icon.

- Select 'Voice Recording' to use the built-in microphone or 'Line-in Recording' to record from an external audio source (requires a 3.5mm audio cable, not included).
- Press the record button to start/stop recording.

6. Other Functions

- **E-book:** Tap the 'E-book' icon to read text files (e.g., .TXT format).
- **Video:** Tap the 'Video' icon to play compatible video files.
- **Pedometer:** Access the pedometer function to track your steps during physical activity.
- **Alarm/Stopwatch:** Set alarms or use the stopwatch function for timing.

MAINTENANCE AND CARE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.
- Avoid extreme temperatures. Do not expose to direct sunlight or very cold environments.
- Handle with care. The zinc alloy design offers scratch resistance, but excessive force or drops can cause damage.
- Store in a safe place when not in use, preferably in the provided protective case.

TROUBLESHOOTING

If you encounter issues with your JOLIKE MP3 player, please refer to the following common solutions:

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Charge the device for at least 30 minutes. If still unresponsive, try a different USB cable or charging port.
Cannot transfer files to the device.	Ensure the USB cable is securely connected. Try a different USB port on your computer. Verify the device is recognized as a removable disk. Check if the device's storage is full.
No sound or low volume.	Check volume settings on the device. Ensure earphones/headphones are properly plugged in or Bluetooth device is connected and its volume is up. Test with different earphones/speakers.
Bluetooth connection issues.	Ensure both devices are in pairing mode and within range. Disconnect and re-pair the devices. Restart both the MP3 player and the Bluetooth audio device.
FM Radio not working.	Ensure wired earphones are securely plugged in, as they function as the antenna. Try scanning for stations again in a different location.

For more detailed troubleshooting, please refer to the [Troubleshooting Guide \(PDF\)](#).

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	M5-32GB-Red
Product Dimensions	0.4 x 1.5 x 1.9 inches
Item Weight	1.76 ounces
Memory Storage Capacity	32 GB (internal), supports up to 128 GB TF card
Connectivity Technology	USB, Bluetooth 5.3
Screen Size	1.8 inches
Battery Type	1 Lithium Metal battery (included)
Battery Life (Wired Headphones)	Up to 48 hours (screen switched off)
Battery Life (Bluetooth Mode)	Up to 6.5 hours
Battery Life (FM Radio)	Up to 14 hours
Charging Time	Approx. 2.5 hours
Supported Audio Formats	MP3 / WMA / APE / FLAC / WAV / ACELP
Special Features	Line input recording, Built-in Speaker

WARRANTY AND SUPPORT

JOLIKE is committed to providing high-quality products and excellent customer service. Your MP3 player comes with a standard warranty period. For any questions, technical support, or warranty claims, please contact JOLIKE customer service through the retailer's platform or visit the official JOLIKE store page.

We value your feedback and suggestions to continuously optimize our products and ensure your satisfaction.

Visit the [JOLIKE Store](#) for more information.