

[Manuals.plus](#) /

> [AUMATE](#) /

> AUMATE Air Fryer Toaster Oven User Manual

AUMATE 19 Quart 7-in-1 Convection Toaster Oven

AUMATE Air Fryer Toaster Oven User Manual

Model: 19 Quart 7-in-1 Convection Toaster Oven

Brand: AUMATE

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

2. PRODUCT OVERVIEW

The AUMATE Air Fryer Toaster Oven is a versatile 7-in-1 appliance designed to simplify your cooking. It combines the functions of a toaster oven, convection oven, and air fryer, allowing you to bake, broil, toast, air fry, and warm a variety of foods. Its compact design makes it suitable for any kitchen countertop.



Figure 2.1: The AUMATE Air Fryer Toaster Oven in operation, showcasing its capacity for both pizza and air-fried items.

2.1. Control Panel

The oven features intuitive knob controls for easy operation. These controls allow you to select functions, set temperature, and manage cooking time.

EASY OPERATIONS



Figure 2.2: Detailed view of the control panel, highlighting the Function, Temperature, and Oven Timer knobs for precise cooking adjustments.

2.2. Included Accessories

Your AUMATE Air Fryer Toaster Oven comes with essential accessories to enhance your cooking experience:

- **Baking Pan:** Ideal for baking cookies, roasting vegetables, or heating leftovers.
- **Oven Rack:** For general baking, broiling, or placing dishes.
- **Fry Basket:** Specifically designed for air frying, allowing hot air to circulate evenly around food for crispy results.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning.



Figure 2.3: Visual representation of the included accessories and their typical uses.

2.3. Capacity and Dimensions

This 19-quart capacity oven is designed to accommodate family-sized meals, including a whole chicken or multiple servings of fries. Its compact exterior fits well on most countertops.

19 QT

LARGE COOKING SPACE



Figure 2.4: Illustration of the oven's internal capacity and external dimensions.

3. SETUP

1. **Unpack the Oven:** Carefully remove all packaging materials, including any internal packing and accessories. Ensure all parts are accounted for.
2. **Initial Cleaning:** Before first use, wipe the exterior of the oven with a damp cloth. Wash the baking pan, oven rack, fry basket, and crumb tray in warm, soapy water. Rinse and dry thoroughly.
3. **Placement:** Place the oven on a stable, heat-resistant surface, ensuring adequate ventilation (at least 4 inches of space on all sides and above). Do not place it directly against a wall or under cabinets.
4. **First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated during this process.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

The AUMATE Air Fryer Toaster Oven offers multiple cooking functions controlled by its intuitive knobs.

4.1. Function Selection

Use the **Function** knob to select your desired cooking mode:

- **Warm:** Keeps food warm without further cooking.
- **Broil:** For grilling and browning the top of food.
- **Convection Broil:** Combines broiling with convection for faster, more even browning.
- **Toast:** Specifically for toasting bread, bagels, etc.
- **Bake:** For general baking, like cakes, cookies, and casseroles.
- **Convection Bake:** Uses a fan to circulate hot air for faster and more even baking.
- **Air Fry:** Utilizes powerful hot air circulation for crispy, fried results with little to no oil.

360° CIRCULATION HOT AIR TECHNOLOGY



**POWERFUL AIR CIRCULATION
TARGETS FOOD WITH FAST**



**CRISPY FOOD WITH 85%
LESS OIL, HEALTHIER**

Figure 4.1: The 360° hot air circulation technology ensures even cooking and crisping, especially in Air Fry mode.

4.2. Temperature and Timer Settings

Adjust the **Temperature** knob to set the desired heat from Warm up to 450°F. The **Oven Timer** knob allows you to set cooking times up to 60 minutes. For toasting, use the dedicated **On/Toast Timer** knob to select your preferred toast shade (light, medium, dark).

4.3. General Operation Steps

1. Place food on the appropriate accessory (baking pan, oven rack, or fry basket).
2. Insert the accessory into the desired rack position inside the oven. Ensure the crumb tray is always in place at the bottom.
3. Close the oven door.
4. Turn the **Function** knob to select the cooking mode.
5. Turn the **Temperature** knob to set the desired temperature.
6. Turn the **Oven Timer** knob to set the cooking time. The oven will begin heating. For toast, use the **On/Toast Timer** knob.
7. The oven light can be turned on/off using the dedicated button next to the timer knob to monitor cooking progress.
8. When cooking is complete, the timer will ding, and the oven will turn off. Carefully remove food using oven mitts.

5. CLEANING AND MAINTENANCE

Regular cleaning will ensure the longevity and optimal performance of your AUMATE Air Fryer Toaster Oven.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Crumb Tray:** The crumb tray should be removed and cleaned regularly to prevent grease buildup and potential fire hazards. Simply slide it out, discard crumbs, and wash with warm, soapy water.



Figure 5.1: The removable crumb tray for easy cleaning.

3. **Accessories:** The baking pan, oven rack, and fry basket are dishwasher safe for convenient cleaning. For stubborn residue, soak them in warm, soapy water before scrubbing.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For baked-on grease, a non-abrasive cleaner designed for ovens can be used. Avoid harsh abrasives or metal scouring pads.
5. **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or steel wool, as they may damage the

finish.

6. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the oven is securely plugged into a working outlet. Check your home's circuit breaker. Make sure the timer knob is turned past the "OFF" position.
Food is not cooking evenly.	Overcrowding; incorrect rack position; uneven food placement.	Avoid overcrowding the basket/pan. Use a single layer for air frying. Rotate food halfway through cooking. Ensure food is spread evenly.
Excessive smoke from oven.	Grease buildup; fatty foods; food touching heating elements.	Clean the crumb tray and interior thoroughly. Trim excess fat from food. Ensure food is not touching the heating elements.
Air fryer results are not crispy.	Too much oil; overcrowding; insufficient cooking time/temperature.	Use minimal oil or cooking spray. Do not overcrowd the fry basket. Increase cooking time or temperature slightly. Ensure the Air Fry function is selected.

7. SPECIFICATIONS

Brand: AUMATE

Model: 19 Quart 7-in-1 Convection Toaster Oven

Color: Stainless Steel

Product Dimensions: 13.5"D x 16"W x 15"H

Control Type: Knob

Door Style: Dropdown Door

Included Components: Baking Pan, Oven Rack, Fry Basket, Crumb Tray

Power: 1550W

Item Weight: 21.4 pounds

UPC: 195893507726

ASIN: B099MRW8DB

8. WARRANTY AND SUPPORT

AUMATE is committed to providing a high-quality experience for its customers. Your AUMATE Air Fryer Toaster Oven is backed by a:

- **One-Year Product Return Guarantee:** For any manufacturing defects or issues within one year of purchase.
- **Lifelong Technical Support:** Our support team is available to assist you with any questions or problems you may encounter during the lifetime of your product.

Please feel free to contact us if you encounter any problems or require assistance.



