

YUINK 1502BJ

YUINK Digital Watch Model 1502BJ User Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your YUINK Digital Watch Model 1502BJ.

1. PRODUCT OVERVIEW

The YUINK Digital Watch Model 1502BJ is an ultra-thin, waterproof sports watch designed for both men and women. It features a stainless steel case and a comfortable resin band, offering a blend of durability and style. This watch is equipped with essential digital functions for daily use.

Key Features

- Ultra-thin and stylish design with a stainless steel case.
- Water resistant up to 50 meters (5 ATM), suitable for swimming in shallow water and cold showers.
- Functions include 12/24 hour display, alarm clock, hourly chime, auto date, stopwatch, and LED backlight.
- Durable mineral dial window and quartz movement for accurate timekeeping.

Watch Components

Your YUINK Digital Watch features a clear digital display and four control buttons located on the sides of the watch case. While specific button labels may vary, they typically correspond to the following functions:

- **MODE (M) Button:** Used to cycle through different display modes (Time, Alarm, Stopwatch).
- **LIGHT (L) Button:** Activates the LED backlight for visibility in low-light conditions.
- **START/STOP (S) Button:** Used to start and stop the stopwatch, and to adjust values during setting.
- **RESET/ADJUST (R) Button:** Used to reset the stopwatch, and to enter or exit setting modes.



Figure 1: Front view of the YUINK Digital Watch Model 1502BJ, showing the digital display and side buttons.



Figure 2: Angled view of the YUINK Digital Watch Model 1502BJ, highlighting its ultra-thin profile.

2. INITIAL SETUP

Setting Time and Date

1. From the normal time display, press the **MODE (M)** button repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET/ADJUST (R)** button to cycle through the settings: seconds, hours, minutes, month, date, day of the week.
3. While a setting is flashing, use the **START/STOP (S)** button to increase the value. Hold the button to rapidly advance.
4. Once all settings are correct, press the **MODE (M)** button to exit the setting mode and return to the normal time display.

12/24 Hour Format

In the normal time display, press the **START/STOP (S)** button to toggle between 12-hour (AM/PM

indicator) and 24-hour formats.

3. OPERATING INSTRUCTIONS

Using the Backlight

To illuminate the display in dark conditions, press the **LIGHT (L)** button. The backlight will activate for a few seconds, making the time clearly visible.



Figure 3: The watch display showing both normal and luminous (backlit) modes for enhanced visibility.

Alarm Function

To set and use the alarm:

1. From the normal time display, press the **MODE (M)** button once to enter the Alarm mode. The alarm time will be displayed.
2. Press the **RESET/ADJUST (R)** button to select the hour or minute setting. The selected digit will flash.
3. Use the **START/STOP (S)** button to adjust the flashing hour or minute value.
4. Press the **MODE (M)** button to confirm the alarm time and exit the setting mode.

5. To turn the alarm ON/OFF, press the **START/STOP (S)** button while in Alarm mode (without flashing digits). An alarm icon will appear/disappear on the display.
6. To activate/deactivate the hourly chime, press the **RESET/ADJUST (R)** button while in Alarm mode (without flashing digits). A chime icon will appear/disappear.

Stopwatch Function

To use the stopwatch:

1. From the normal time display, press the **MODE (M)** button twice to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START/STOP (S)** button to start the stopwatch.
3. Press the **START/STOP (S)** button again to pause the stopwatch.
4. Press the **START/STOP (S)** button again to resume timing.
5. While the stopwatch is paused, press the **RESET/ADJUST (R)** button to reset it to "00:00:00".
6. Press the **MODE (M)** button to exit Stopwatch mode and return to the normal time display.

4. CARE AND MAINTENANCE

Water Resistance

The YUINK Digital Watch is water resistant to 50 meters (5 ATM), making it suitable for swimming in shallow water and cold showers. However, it is not designed for long-term underwater activities such as diving. **Important: Do not press any buttons while the watch is submerged in water, as this can compromise the water resistance. Avoid exposure to hot water and steam.**

Battery Replacement

The watch requires 1 Lithium Metal battery. When the display becomes dim or the watch stops functioning, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or components. Ensure the watch is dry after cleaning, especially if it has been exposed to water.

5. TROUBLESHOOTING GUIDE

Issue	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidentally reset.	Refer to Section 2.1 "Setting Time and Date" to reset the time.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons simultaneously for a few seconds to perform a soft reset (if applicable to model). If issue persists, replace battery.
Alarm does not sound.	Alarm is not activated.	Refer to Section 3.2 "Alarm Function" to ensure the alarm is turned ON.

6. PRODUCT SPECIFICATIONS

- **Model Number:** 1502BJ
- **Brand:** YUINK
- **Product Dimensions:** 5.94 x 2.68 x 1.34 inches
- **Item Weight:** 1.4 ounces
- **Dial Width:** Approximately 42mm
- **Dial Thickness:** Approximately 7mm
- **Total Length of Watch:** Approximately 253mm
- **Water Resistance:** 5 ATM (50 meters / 165 feet)
- **Clasp Type:** Buckle
- **Battery:** 1 Lithium Metal battery required
- **Movement:** Digital Quartz

Dimensions

Tips: Fits for 22mm width straps



Figure 4: Detailed diagram illustrating the dimensions of the YUINK Digital Watch.

7. WARRANTY AND CUSTOMER SUPPORT

YUINK is committed to providing good after-sales service. If you encounter any questions or issues with your product, please contact YUINK customer support directly for assistance. They are dedicated to providing a satisfactory solution to any concerns you may have regarding your purchase.

For specific warranty details and contact information, please refer to the packaging or the official YUINK website.