

ECONTROLLY RC-CT-8547-ECO

CT-8547 Replacement Remote Control User Manual

Model: RC-CT-8547-ECO | Brand: ECONTROLLY

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY CT-8547 Replacement Remote Control, designed for various Toshiba TV models including 50U5069EE, 50U5069EV, 50U5069EA, 55U5069, 55U5069EE, 43U5069EV, 43U5069EA, 50U5069, 55U5069EV, 55U5069EA, 58U5069, 58U5069EE, 58U5069EV, 58U5069EA, 65U5069, 65U5069EE, 65U5069EV, 65U5069EA, 43U5965, 50U5865 series, 55U5865 series, 65U5865 series, 32I5865 series, 43I5865 series, and 49I5865 series 7 series. This remote control requires no programming; simply install batteries to begin operation.





Image: The ECONTROLLY CT-8547 replacement remote control. It is black, rectangular, and features numerous buttons for TV operation, including a numeric keypad, navigation buttons, volume and channel controls, and dedicated buttons for Netflix and YouTube.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: No programming is required. The remote control is ready for use once batteries are installed.

This section details the functions of the buttons on your CT-8547 replacement remote control.

Button	Function
Power ()	Turns the TV on or off.
P.MODE	Picture Mode selection.
S.MODE	Sound Mode selection.
APPS	Accesses the TV's applications menu.
MEDIA	Switches to media playback mode (e.g., USB, network media).
TV	Switches to live TV input.
Numeric Keypad (0-9)	Direct channel selection or numerical input.
MENU	Opens the TV's main menu.
TEXT	Activates or deactivates Teletext (if supported).
LIST	Displays a list of channels or media files.
Volume (+ / -)	Increases or decreases the volume level.
Mute ()	Mutes or unmutes the TV sound.
Channel (P ▲ / P ▼)	Changes to the next or previous channel.
HOME	Returns to the TV's home screen or smart portal.
BACK (↵)	Goes back to the previous screen or menu.
EXIT	Exits the current menu or application.
Navigation Arrows (▲ ▼ ◀ ▶)	Navigates through menus and options.
OK	Confirms a selection or enters a menu.
GUIDE	Opens the Electronic Program Guide (EPG).
SUBTITLE	Activates or deactivates subtitles.
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
Rewind ()	Rewinds media playback.
Play (▶)	Starts or resumes media playback.
Fast Forward ()	Fast forwards media playback.
Previous Track ()	Goes to the beginning of the current track or the previous track.
Stop (■)	Stops media playback.
Pause ()	Pauses media playback.

Button	Function
Next Track ()	Goes to the next track.
NETFLIX	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Solution
Remote control not working.	• Check if the batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new AAA alkaline batteries. • Ensure there are no obstructions between the remote control and the TV's infrared sensor. • Confirm the remote is pointed directly at the TV.
Buttons are unresponsive or sticky.	• Clean the remote control surface with a soft, dry cloth. • Ensure no foreign objects are lodged under the buttons.
Remote works intermittently.	• Batteries may be low; replace them. • Ensure consistent line of sight to the TV's IR sensor.

SPECIFICATIONS

- **Model:** RC-CT-8547-ECO
- **Brand:** ECONTROLLY
- **Compatibility:** Toshiba TV models (50U5069EE, 50U5069EV, 50U5069EA, 55U5069, 55U5069EE, 43U5069EV, 43U5069EA, 50U5069, 55U5069EV, 55U5069EA, 58U5069, 58U5069EE, 58U5069EV, 58U5069EA, 65U5069, 65U5069EE, 65U5069EV, 65U5069EA, 43U5965, 50U5865 series, 55U5865 series, 65U5865 series, 32I5865 series, 43I5865 series, 49I5865 series 7 series)
- **Power Source:** 2 x AAA batteries (not included)

- **Connectivity Technology:** Infrared (IR)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounces
- **Special Feature:** No programming required

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your original purchase or contact the retailer where the product was acquired. As this is a replacement remote, specific warranty terms may vary.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099NGTZFS>

More documents and user manuals: <https://manuals.plus/>

