

[Manuals.plus](#) /

› [Emerio](#) /

› Emerio AF-125770 SmartFryer AirFryer User Manual

Emerio AF-125770

Emerio AF-125770 SmartFryer AirFryer User Manual

Model: AF-125770

INTRODUCTION

Welcome to the user manual for your new Emerio AF-125770 SmartFryer AirFryer. This appliance utilizes hot air circulation to cook food with little to no additional oil, offering a healthier alternative to traditional deep frying. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- The appliance features a Cool Touch housing, meaning the exterior does not overheat during operation. However, caution should still be exercised.
- All plastic parts that may come into contact with food are BPA-free.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Emerio SmartFryer AirFryer.



Figure 1: The Emerio AF-125770 SmartFryer AirFryer with its frying basket partially removed, revealing food items such as chicken nuggets and french fries. This image highlights the appliance's compact design and the removable basket for easy loading and unloading.



Figure 2: Front view of the Emerio AF-125770 SmartFryer, showcasing the two main control dials: the upper dial for temperature adjustment and the lower dial for setting the cooking timer. The sleek black finish and ergonomic handle are visible.



Figure 3: The Emerio AF-125770 SmartFryer, featuring a clear "BPA FREE" label on the side of the frying basket. This emphasizes the product's commitment to safety by ensuring that all plastic components in contact with food are free from Bisphenol A.

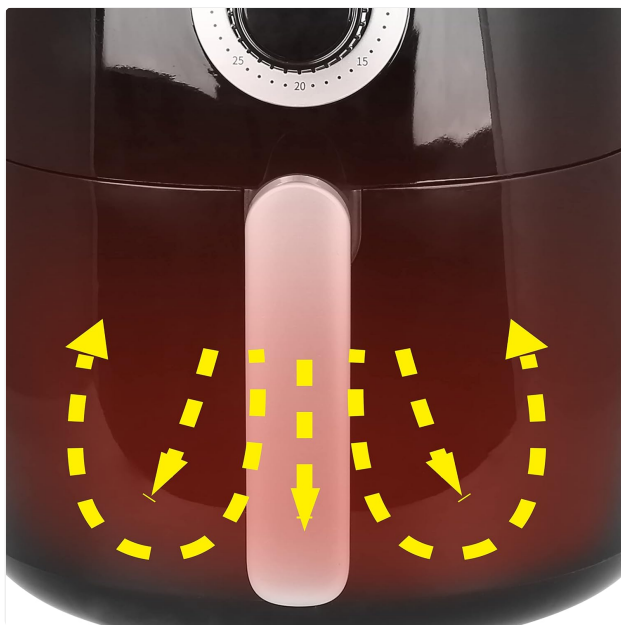


Figure 4: An internal diagram of an air fryer, depicting the hot air circulation process. Yellow arrows illustrate the rapid movement of hot air around the food, ensuring even cooking and crisping without the need for excessive oil.

Main Components:

- Main Unit with Cool Touch Housing
- Temperature Control Dial
- Timer Dial
- Removable Frying Basket
- Bottom Insert (for frying basket)
- Handle

SETUP

Before first use, follow these steps to prepare your air fryer:

1. **Unpack:** Carefully remove the air fryer and all its components from the packaging. Retain packaging for future storage or transport if needed.



Figure 5: The Emerio AF-125770 SmartFryer in its original retail packaging, illustrating the product's branding and key features on the box.

2. **Clean:** Wipe the exterior of the appliance with a damp cloth. Wash the frying basket and bottom insert with warm, soapy water. Rinse thoroughly and dry completely before use.
3. **Placement:** Place the air fryer on a stable, flat, heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

The Emerio SmartFryer is designed for simple and intuitive operation.

1. **Prepare Food:** Place the food you wish to cook into the frying basket. For optimal results with fries, a batch of approximately 250g is recommended. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks securely into place.
3. **Set Temperature:** Use the upper dial to set the desired cooking temperature. The temperature range is typically from 80°C to 200°C.



Figure 6: A close-up view of the Emerio AF-125770 SmartFryer's control panel, highlighting the temperature and timer dials for precise cooking adjustments.

4. **Set Timer:** Use the lower dial to set the cooking time. The appliance will automatically turn off when the timer reaches zero.
5. **Start Cooking:** The air fryer will begin heating immediately once the timer is set. The heating element and fan will activate to circulate hot air.
6. **Check Food:** For even cooking, especially for larger quantities or certain foods, it is recommended to shake or turn the food halfway through the cooking process. Carefully pull out the basket using the Cool Touch handle. The appliance will pause operation. Reinsert the basket to resume cooking.
7. **Completion:** Once the timer reaches zero, the air fryer will emit an audible signal and shut off. Carefully remove the basket and transfer the cooked food to a serving dish.

COOKING GUIDELINES

While specific cooking times and temperatures vary by food type and desired crispness, here are some general guidelines:

- **Preheating:** The Emerio SmartFryer heats up quickly. For most recipes, preheating for 3-5 minutes at the desired temperature is sufficient.
- **Oil Usage:** For best results and crispiness, some foods may benefit from a light spray of oil, especially fresh vegetables or homemade fries.
- **Shaking/Tossing:** For foods like fries, chicken wings, or smaller items, shaking the basket every 5-10 minutes ensures even browning and crisping.
- **Batch Size:** Avoid overcrowding the basket. Cook in smaller batches if necessary to ensure proper air circulation and even cooking.



Figure 7: An informational graphic highlighting that the SmartFryer uses up to 50% less energy than a conventional oven, promoting energy efficiency during cooking.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The frying basket and the bottom insert are dishwasher safe. Alternatively, they can be washed by hand with warm water and a non-abrasive sponge.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Emerio SmartFryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the timer dial to the desired cooking time.
Food is not cooked evenly.	Basket overcrowded; Food not shaken/turned.	Cook in smaller batches. Shake or turn food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from appliance.	Grease residue from previous use; Fatty food being cooked.	Clean the basket and bottom insert thoroughly after each use. For fatty foods, consider draining excess fat during cooking.
Frying basket is difficult to insert/remove.	Basket not aligned correctly; Minor deformation due to heat (rare).	Ensure the basket is aligned properly with the guides. If deformation occurs, allow the unit to cool completely and try again. If the issue persists, contact customer support.

SPECIFICATIONS

Technical specifications for the Emerio AF-125770 SmartFryer AirFryer:

Brand	Emerio
Model Number	AF-125770
Color	Black
Dimensions (L x W x H)	24.5 x 29.5 x 30.2 cm
Weight	3.54 Kilograms
Capacity	3.0 Liters (Volume), 3.4 Liters (Overall Capacity)
Power	1450 Watts
Voltage	230 Volts
Material	Metal, Plastic
Special Features	BPA-Free, Cool Touch Housing
Recommended Use	Frying

WARRANTY AND SUPPORT

The Emerio AF-125770 SmartFryer comes with a commitment to quality.

- Spare Parts Availability:** Spare parts for this model are available for 1 year from the date of purchase.
- Customer Support:** For any questions, technical assistance, or warranty claims, please contact Emerio customer support through their official website or the retailer from whom you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099NPG1GD>

More documents and user manuals: **<https://manuals.plus/>**