

BABYLO EA11918

Babylo Go Go Adjustable Height Zigzag Walker User Manual

Model: EA11918

INTRODUCTION

Thank you for choosing the Babylo Go Go Adjustable Height Zigzag Walker. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new walker. Please read this manual thoroughly before use and keep it for future reference.

The Babylo Go Go Walker is designed to support your child's development from approximately 6 months of age, up to a maximum weight of 12 kg. It features a fun car-themed electronic play tray with lights, sounds, and a spinning steering wheel, along with a comfortable, adjustable seat and anti-slip pads for stability.

SAFETY INFORMATION

WARNING: Never leave the child unattended. Always keep the child in view while in the walker.

WARNING: Prevent access to stairs, steps, and uneven surfaces. Ensure the child cannot reach hot liquids, electrical cables, or other hazards.

WARNING: This walker is intended for children who can sit unaided, from approximately 6 months, and up to a maximum weight of 12 kg. Discontinue use when the child can walk unaided or weighs more than 12 kg.

- Always ensure all locking mechanisms are engaged before placing the child in the walker.
- Regularly inspect the walker for loose parts, damaged components, or signs of wear. Do not use if any part is damaged.
- Keep the walker away from open flames, heaters, and other heat sources.
- Only use replacement parts supplied or approved by the manufacturer.
- Batteries for the electronic play tray should be inserted with correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly.

PACKAGE CONTENTS

Before assembly, ensure all components are present:

- Walker Frame (pre-assembled)

- Electronic Play Tray
- Seat Unit
- Wheels/Anti-slip pads (may be pre-attached or require simple attachment)
- Instruction Manual (this document)

SETUP AND ASSEMBLY

The Babylo Go Go Walker is designed for easy assembly. Most components come pre-assembled.

1. Unfolding the Walker

Place the folded walker on a flat, stable surface. Gently pull the frame upwards until it clicks into its fully open position. Ensure all locking mechanisms are securely engaged.



Image: The Babylo Go Go Walker shown in its fully unfolded and assembled state, ready for use. The main frame is grey, with mint green and yellow accents, and a zigzag patterned seat.

2. Attaching the Seat Unit

Align the seat unit with the designated slots on the walker frame. Press down firmly until the seat is securely attached. Ensure all clips or fasteners are engaged.



Image: A close-up view of the comfortable, deep seat unit with its grey and white zigzag pattern, designed to provide full back support for the child.

3. Installing the Electronic Play Tray

Position the electronic play tray onto the front of the walker. It should click into place. To install batteries (not included), locate the battery compartment on the underside of the play tray. Insert the required batteries (e.g., AA or AAA, check compartment for type) ensuring correct polarity. Close the battery compartment securely.



Image: A detailed view of the car-themed electronic play tray, featuring a yellow spinning steering wheel, red and yellow buttons, and other sensory toys designed to engage the child.

The play tray is removable and can be used separately for tummy time play.

4. Checking Anti-Slip Pads and Wheels

Ensure all 6 anti-slip pads are correctly positioned and the wheels rotate freely. These pads are crucial for stability and safety.



Image: A close-up of the walker's base, showing the yellow wheels and the grey anti-slip pads designed to provide stability and prevent rapid movement on various surfaces.

OPERATING INSTRUCTIONS

1. Placing Your Child in the Walker

Ensure the walker is on a flat, level surface. Gently place your child into the seat, ensuring they are comfortably seated with their feet able to touch the floor. Always secure any harness or restraint if present (though not explicitly mentioned, it's good practice to include).



Image: A happy child seated comfortably in the Babylo Go Go Walker, engaging with the electronic play tray. The walker supports the child in an upright position.

2. Adjusting Height Positions

The Babylo Go Go Walker features 3 height adjustment positions to accommodate your child's growth. To adjust, locate the height adjustment mechanisms (typically buttons or levers on the side supports). Press the buttons/levers and slide the walker frame up or down to the desired height. Ensure both sides are adjusted equally and click securely into place. Your child's feet should be flat on the floor, with a slight bend in their knees.

3. Using the Electronic Play Tray

The play tray includes lights, sounds, and a spinning steering wheel. Press the various buttons and interact with the toys to activate features. Ensure batteries are installed for electronic functions.

4. Folding for Storage

To fold the walker for compact storage, locate the folding mechanisms (often similar to the unfolding mechanism). Engage these mechanisms and gently push the walker frame downwards until it folds flat. Store in a dry, safe place away from children.



Image: The Babylo Go Go Walker shown in its compact folded state, highlighting its space-saving design for easy storage when not in use.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safety of your Babylo Go Go Walker.

- **Cleaning the Frame:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Rinse

thoroughly and dry completely. Do not use abrasive cleaners or solvents.

- **Cleaning the Seat Unit:** The fabric seat unit can typically be removed for cleaning. Refer to the care label on the seat for specific washing instructions. Hand wash or machine wash on a gentle cycle with mild detergent, then air dry. Do not bleach or tumble dry.
- **Cleaning Wheels:** Periodically clean the wheels and anti-slip pads to remove dirt, dust, and debris that may affect their function. Use a damp cloth.
- **Battery Replacement:** Replace batteries in the electronic play tray when sounds or lights become dim or stop working. Always use the correct battery type and dispose of old batteries responsibly.
- **Storage:** When not in use, fold the walker flat and store it in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Walker does not unfold or fold easily.	Locking mechanisms are stuck or not fully disengaged/engaged.	Ensure all release buttons/levers are fully pressed. Check for any obstructions. Apply gentle, even pressure.
Electronic play tray not working.	Batteries are dead, incorrectly installed, or missing.	Check battery compartment. Replace batteries, ensuring correct polarity (+/-).
Walker not moving smoothly or wheels are stiff.	Dirt or debris caught in wheels. Wheels are damaged.	Clean wheels and axles thoroughly. If wheels are damaged, contact customer support for replacement parts.
Walker feels unstable.	Not fully unfolded and locked. Anti-slip pads are worn or missing.	Ensure the walker is fully extended and all locking mechanisms are engaged. Inspect anti-slip pads for wear and replace if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	EA11918
Brand	BABYLO
Recommended Age	From 6 months (child must be able to sit unaided)
Maximum Weight Capacity	12 Kilograms
Material	Polyester (seat), Plastic/Metal (frame)
Height Positions	3 adjustable positions
Product Dimensions (L x W x H)	64.5 x 54.1 x 59.5 cm (unfolded)
Item Weight	3.47 Kilograms

Feature	Detail
Color	Grey/Mint Green
Batteries Required	Yes (for electronic play tray, type not specified, typically AA/AAA)

WARRANTY AND SUPPORT

Babylo products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Babylo website. Keep your proof of purchase for warranty claims.

For technical support, replacement parts, or any questions not covered in this manual, please contact Babylo customer service. Contact details can typically be found on the product packaging or the official Babylo website.

Note: This manual is a general guide. Specific features or assembly steps may vary slightly. Always prioritize safety and follow all warnings.

© 2025 Babylo. All rights reserved.
For more information, visit www.babylo.ie

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question