

[Manuals.plus](#) /

› [Tefal](#) /

› T-Fal Easy Fry Air Fryer & Grill 2 in1 XL Instruction Manual

Tefal EY505850

T-Fal Easy Fry Air Fryer & Grill 2 in1 XL Instruction Manual

Model: EY505850

1. Safety Information

Please read all instructions carefully before using your T-Fal Easy Fry Air Fryer & Grill. Keep this manual for future reference.

- Keep away from naked flame or direct heat sources.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- This appliance is intended for household use only.
- Supervise children when the appliance is in use.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm (4 inches) free space on the back and sides and 10 cm (4 inches) free space above the appliance.
- Hot air is released through the air outlet opening during operation. Keep your hands and face at a safe distance from the openings.
- Do not cover the air inlet or air outlet openings while the appliance is operating.
- The surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.

2. Product Overview

The T-Fal Easy Fry Air Fryer & Grill 2 in1 XL is a versatile kitchen appliance designed for healthy cooking with minimal oil. It combines air frying and grilling functionalities.

Key Features:

- **Extra Crisp Technology:** Optimizes hot air flow for crispy results with 99% less added fat.
- **Grilling Function:** Features a die-cast aluminum Sizzling Grill Plate for authentic grilling taste.
- **Fast Cooking:** Prepares meals up to 40% faster than a conventional oven.
- **8 Pre-set Modes:** Includes Fries, Nuggets, Roasted Chicken, Pizza, Meat, Fish, Vegetables, and Dessert.
- **Easy-to-Use Touchscreen:** Large digital touchscreen for simple operation.
- **Extra Large Capacity:** 4.2L / 4.4Qt capacity, suitable for up to 6 people.
- **Timer with Auto Shut-off:** 60-minute countdown timer for convenience.
- **Adjustable Thermostat:** Precise temperature control from 80°C to 200°C.



Image: The T-Fal Easy Fry Air Fryer & Grill 2 in 1 XL, showcasing its main unit with a basket of golden fries and the removable grill plate.



Image: Illustration of the Extra Crisp Technology, demonstrating optimized hot air flow within the appliance for even cooking and crisping.

Have it -
crispy
Juicy

2in1

49%* Faster

Get that crispy crunch and taste you love in almost half the amount of time. Prepare a wide variety of meals
49% faster than a conventional oven*

Image: A close-up of a grilled steak on the appliance's grill plate, highlighting the crispy exterior and juicy interior achieved by the grilling function.



Image: The spacious 4.2L cooking basket filled with a variety of fresh vegetables, demonstrating the appliance's extra-large capacity for family meals.



Image: A user's hand touching the intuitive digital touchscreen panel, showing the clear display and various cooking icons for easy selection.



VERSATILITY IS EVERYTHING

8 pre-set modes to help you perfect your meals:
Fries, Nuggets, Roasted Chicken, Pizza, Meat, Fish,
Vegetables, Dessert



Image: A visual representation of the appliance's versatility, displaying various dishes like fries, roasted chicken, and grilled fish, prepared using its 8 pre-set modes.

3. Setup

Unpacking:

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any stickers or labels from the appliance.
3. Dispose of packaging materials responsibly.

First Use:

1. Before first use, clean the basket and grill plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.
4. Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.

5. Plug the power cord into a grounded wall outlet.

4. Operating Instructions

Basic Operation:

1. Place the food in the cooking basket or on the grill plate. Do not overfill.
2. Slide the basket or grill plate back into the appliance until it clicks into place.
3. Press the power button on the digital touchscreen to turn on the appliance.
4. Select your desired cooking mode (Air Fry or Grill) and then choose a pre-set program or manually set the temperature and time using the '+' and '-' buttons.
5. Press the start button to begin cooking.
6. Some foods may require shaking or turning halfway through cooking for even results. The appliance may beep to remind you.
7. Once cooking is complete, the timer will sound. Carefully pull out the basket/grill plate and remove the food.

Pre-set Modes:

The appliance features 8 pre-set modes for common dishes. Simply select the icon corresponding to your food type on the touchscreen. The appliance will automatically set the optimal temperature and time, which can be adjusted manually if needed.

- Fries
- Nuggets
- Roasted Chicken
- Pizza
- Meat
- Fish
- Vegetables
- Dessert

Grilling Function:

To use the grilling function, insert the die-cast aluminum grill plate into the appliance. Select the 'Grill' mode on the touchscreen. The grill plate is designed to provide excellent searing and flavor for meats and vegetables.



Image: A close-up view of a seared steak on the die-cast aluminum grill plate, demonstrating its ability to create authentic grill marks and flavor.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your appliance.

Cleaning the Basket and Grill Plate:

- Always unplug the appliance and allow it to cool down completely before cleaning.
- The cooking basket and grill plate are non-stick and dishwasher safe.
- For manual cleaning, wash with hot water, dish soap, and a non-abrasive sponge.
- For stubborn residue, soak the basket/grill plate in hot water with some dish soap for about 10 minutes.
- Do not use metal utensils or abrasive cleaning materials, as this may damage the non-stick coating.

Exterior Cleaning:

- Wipe the exterior of the appliance with a damp cloth.

- Never immerse the main unit in water or any other liquid.
- Clean the heating element with a cleaning brush to remove any food residue.

6. Troubleshooting

If you encounter issues with your T-Fal Easy Fry Air Fryer & Grill, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	The appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded electrical outlet.
Food is not cooked evenly.	Too much food in the basket; food not shaken/turned.	Reduce the amount of food per batch. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Fat residue from previous use; fatty ingredients being cooked.	Clean the basket and grill plate thoroughly. For fatty foods, ensure proper ventilation.
Appliance smells like burning plastic.	New appliance smell; foreign object inside.	This is normal for first few uses. If persistent, unplug and check for foreign objects. Contact support if smell continues.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly coat food with oil. Increase temperature or cooking time.

7. Specifications

Feature	Detail
Brand	Tefal
Model Number	EY505850
Colour	Digital Black 4.2qt + Grill
Product Dimensions	31.75 x 39.88 x 37.08 cm
Capacity	4.2 liters (4.4 Qt)
Power/Wattage	1450 watts
Voltage	120V

Feature	Detail
Material	Aluminum
Auto Shut-off	Yes
Special Features	Manual, Programmable
Item Weight	5.31 kg

8. Warranty and Support

Your T-Fal Easy Fry Air Fryer & Grill 2 in1 XL is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance beyond this manual, or to inquire about warranty claims, please contact T-Fal customer service. Contact information can typically be found on the T-Fal official website or on the product packaging.

When contacting support, please have your product model number (EY505850) and purchase date ready.