

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CLEANmaxx](#) /

› [CLEANmaxx Cordless Cyclonic Vacuum Cleaner \(Model: localization-B099P35TLF\) User Manual](#)

CLEANmaxx localization-B099P35TLF

CLEANmaxx Cordless Cyclonic Vacuum Cleaner User Manual

MODEL: LOCALIZATION-B099P35TLF

Introduction

Thank you for choosing the CLEANmaxx Cordless Cyclonic Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and retain them for future reference.

This versatile vacuum cleaner combines the convenience of a lightweight handheld unit with the power of a stick vacuum, featuring two suction power levels, an extendable telescopic tube, and a 600ml bagless dust tank.

Safety Instructions

- Always ensure the appliance is switched off before cleaning or performing maintenance.
- Do not use the vacuum cleaner to pick up water or other liquids, hot ashes, sharp objects, or flammable substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the original charger and battery provided with the appliance.
- Store the vacuum cleaner in a dry place, away from direct sunlight and extreme temperatures.
- This appliance is intended for household use only.

Package Contents

Before assembly, please verify that all components listed below are present and undamaged.



Image: All components of the CLEANmaxx Cordless Cyclonic Vacuum Cleaner, including the main unit, telescopic tube, floor nozzle, crevice tool, brush nozzle, wall mount, and charger.

- Main Vacuum Unit (with integrated dust tank and battery)
- Telescopic Tube
- Combined Floor Nozzle
- Crevice Tool
- Brush Nozzle
- Wall Mount
- Power Adapter/Charger

Setup

1. Charging the Battery

Before first use, fully charge the vacuum cleaner's battery. The 22.2V battery is removable for convenient charging. Connect the power adapter to the charging port on the main unit or directly to the removed battery, then plug it into a wall outlet. The charging indicator will show the charging status. A full charge typically takes several hours.

2. Assembling the Vacuum Cleaner

1. For Stick Vacuum Mode:

- Insert the telescopic tube into the main vacuum unit until it clicks securely.
- Attach the combined floor nozzle to the other end of the telescopic tube until it clicks.

2. For Handheld Vacuum Mode:

- Directly attach the crevice tool or brush nozzle to the main vacuum unit.



Image: The CLEANmaxx vacuum cleaner assembled in stick mode, ready for floor cleaning.



Image: The CLEANmaxx vacuum cleaner in handheld mode, with the brush nozzle attached for upholstery or delicate surfaces.

3. Installing the Wall Mount

The included wall mount allows for convenient storage and charging. Choose a suitable location near a power outlet. Securely fasten the wall mount to the wall using appropriate screws and anchors (not included, depending on wall type). Ensure the mount is stable before hanging the vacuum cleaner.



Image: The CLEANmaxx vacuum cleaner stored on its wall mount, demonstrating a space-saving storage solution.

Operating Instructions

1. Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off.

2. Adjusting Suction Power

The vacuum cleaner features two suction power levels. Press the power level button (often labeled "Vario Power" or similar) to switch between the standard and maximum suction modes. Use the higher power for stubborn dirt and the lower power for general cleaning and to extend battery life.

3. Using Attachments

- **Combined Floor Nozzle:** Ideal for cleaning various floor types, including carpets and hard floors.
- **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges.
- **Brush Nozzle:** Suitable for upholstery, curtains, and delicate surfaces.



Image: A person operating the CLEANmaxx stick vacuum cleaner on a carpeted floor.



Image: A person using the CLEANmaxx handheld vacuum with the brush nozzle to clean dirt from an upholstered chair.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Tank

The 600ml dust tank should be emptied regularly, especially when the MAX fill line is reached. To empty:

1. Ensure the vacuum cleaner is switched off.
2. Locate the dust tank release button and press it to detach the dust tank from the main unit.
3. Hold the dust tank over a waste bin and open the bottom flap to release the collected dirt.
4. Close the flap and reattach the dust tank to the main unit until it clicks.

2. Cleaning the Filters

The vacuum cleaner uses a HEPA filter system. Filters should be cleaned periodically to maintain suction power. Depending on

usage, clean filters monthly or as needed.

1. With the dust tank detached, carefully remove the filter assembly.
2. Tap the filter gently over a waste bin to remove loose dust.
3. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reinserting. **Do not use detergents or hot water.**
4. Reassemble the filter and dust tank, then reattach to the main unit.

3. Cleaning Attachments and Exterior

Wipe the exterior of the vacuum cleaner and attachments with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Charge the battery fully. Ensure the battery is securely inserted into the main unit.
Low suction power.	Dust tank is full, filters are clogged, or an attachment/hose is blocked.	Empty the dust tank. Clean or replace the filters. Check for and remove any blockages in the nozzles, tube, or main unit.
Short operating time.	Battery not fully charged, or operating in maximum power mode.	Ensure the battery is fully charged before use. Use standard power mode for longer operating times. Battery life naturally decreases over time.
Unusual noise during operation.	Blockage in the air path or a foreign object caught in the brush roll (if applicable).	Switch off and unplug the vacuum. Check for and remove any blockages. Inspect the brush roll for tangled hair or debris.

Specifications

Feature	Detail
Brand	CLEANmaxx
Model Number	localization-B099P35TLF
Power	135 Watts
Voltage	22.2 Volts
Number of Speeds	2
Runtime	Up to 25 minutes
Dust Tank Capacity	600 ml
Filter Type	HEPA Filter
Special Feature	Cordless
Power Source	Battery Powered
Recommended Surface	Carpet (and other floor types)

Feature	Detail
Included Components	Telescopic tube, floor nozzle, wall mount, crevice tool, brush nozzle

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official CLEANmaxx website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please contact CLEANmaxx customer service for assistance.

Related Documents - localization-B099P35TLF

	<p>CLEANMAXX 12572/15098 Cordless Handheld Vacuum Cleaner - Operating Instructions</p> <p>Official operating instructions for the CLEANMAXX 12572/15098 cordless handheld vacuum cleaner, including important notices and product information from DS Produkte GmbH.</p>
	<p>CLEANmaxx Akku-Handstaubsauger Bedienungsanleitung & Informationen</p> <p>Entdecken Sie den CLEANmaxx Akku-Handstaubsauger: leistungsstark, kabellos und einfach zu reinigen. Ideal für Haushalt, Auto und mehr. Inkl. Zubehör und technischer Daten.</p>
	<p>CleanMaxx Dust Mite Vacuum Cleaner Operating Instructions</p> <p>This document provides operating instructions for the CleanMaxx Dust Mite Vacuum Cleaner, covering intended use, safety precautions, device overview, usage, cleaning, troubleshooting, and technical data. It is available in German, English, French, and Dutch.</p>
	<p>CLEANmaxx 15439 2-in-1 Cordless Vacuum Cleaner: Operating Instructions</p> <p>Operating instructions for the CLEANmaxx 15439 2-in-1 cordless vacuum cleaner, covering setup, usage, safety precautions, maintenance, and disposal.</p>
	<p>CLEANmaxx Upholstery & Rug Cleaner: User Manual and Operating Instructions</p> <p>Comprehensive user manual for the CLEANmaxx upholstery and rug cleaner, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications. Learn how to effectively clean carpets and upholstery with this appliance.</p>

CLEANmaxx



[CLEANmaxx Multi Cyclone Vacuum Cleaner 14638 - User Manual & Safety Guide](#)

Comprehensive operating instructions for the CLEANmaxx Multi Cyclone Vacuum Cleaner (Model 14638, HL-805 B). Learn about safe usage, intended use, assembly, cleaning, and disposal.