

Necchi NH9212

Necchi NH9212 2-in-1 Electric Broom Vacuum Cleaner User Manual

Model: NH9212 | Brand: Necchi

INTRODUCTION

Thank you for purchasing the Necchi NH9212 2-in-1 Electric Broom Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PACKAGE CONTENTS

Please check the contents of the package to ensure all parts are present and undamaged:

- Main Vacuum Unit (Handheld)
- Telescopic Extension Tube
- Floor/Carpet Brush Head
- 2-in-1 Crevice Tool / Brush Attachment
- User Manual (this document)



Image 1: Included accessories for the Necchi NH9212 vacuum cleaner. This image displays the main floor/carpet brush head, the telescopic extension tube, and the versatile 2-in-1 crevice tool with an integrated brush, all designed for various cleaning tasks.

PRODUCT OVERVIEW

The Necchi NH9212 is a versatile 2-in-1 electric broom vacuum cleaner, designed for efficient cleaning of various surfaces. It can be used as a full-size stick vacuum or detached for handheld use.







Image 2: The Necchi NH9212 vacuum cleaner fully assembled in its electric broom configuration. It shows the main handheld unit, the telescopic extension tube, and the floor/carpet brush head attached, ready for upright use.



Image 3: The Necchi NH9212 vacuum cleaner in its handheld configuration, with the 2-in-1 crevice tool attached. This compact form is ideal for cleaning upholstery, car interiors, or hard-to-reach areas.

SETUP AND ASSEMBLY

The Necchi NH9212 can be assembled in two main configurations: as an electric broom or as a handheld vacuum.

Assembling the Electric Broom:

1. **Attach the Telescopic Tube:** Insert the wider end of the telescopic extension tube into the main vacuum unit's suction inlet until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the floor/carpet brush head to the other end of the telescopic extension tube, ensuring it is firmly attached.
3. **Adjust Tube Length:** If applicable, adjust the telescopic tube to your desired length by pressing the release button and extending or retracting the tube.

Assembling the Handheld Vacuum:

1. **Direct Attachment:** For handheld use, you can directly attach the 2-in-1 crevice tool / brush attachment to the main vacuum unit's suction inlet.

2. **Using the Crevice Tool:** Slide the brush part back to use it as a crevice tool for narrow spaces.
3. **Using the Brush Tool:** Slide the brush part forward to use it as a brush for delicate surfaces or upholstery.

OPERATING INSTRUCTIONS

Powering On/Off:

- **Connect to Power:** Plug the power cord into a suitable electrical outlet. The cable length is approximately 5 meters.
- **Turn On:** Locate the power switch on the main vacuum unit and press it to turn the appliance on.
- **Turn Off:** Press the power switch again to turn the appliance off.
- **Unplug:** Always unplug the vacuum cleaner from the power outlet after use and before performing any maintenance.

Using the Vacuum Cleaner:

- **For Floors and Carpets:** Use the electric broom configuration with the floor/carpet brush head. Move the vacuum cleaner slowly over the surface to allow for effective dirt pickup.
- **For Hard-to-Reach Areas:** Switch to the handheld configuration and use the crevice tool for corners, edges, and tight spaces.
- **For Upholstery and Delicate Surfaces:** Use the handheld configuration with the brush attachment for gentle cleaning.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Container:

1. **Disconnect Power:** Ensure the vacuum cleaner is unplugged from the power outlet.
2. **Remove Dust Container:** Locate the release button or latch for the dust container on the main unit. Press it to detach the dust container.
3. **Empty Contents:** Hold the dust container over a waste bin and open its bottom flap to empty the collected dust and debris. The dust container has a capacity of 0.6 liters.
4. **Reattach:** Close the dust container flap and reattach it to the main unit, ensuring it clicks securely into place.

Cleaning the Filters:

The Necchi NH9212 uses cyclonic filtration with a fabric filter. Filters should be cleaned regularly to maintain suction power.

1. **Access Filters:** With the dust container removed, you will find the filters inside. Carefully remove them.
2. **Clean Filters:** Tap the filters gently over a waste bin to remove loose dust. For a more thorough clean, you may rinse the fabric filter under cold running water.
3. **Dry Completely:** Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum cleaner with wet filters.

4. **Reassemble:** Once dry, place the filters back into the dust container and reattach the container to the main unit.

Cleaning the Brush Head:

- **Disconnect:** Unplug the vacuum and detach the floor/carpet brush head.
- **Remove Debris:** Use scissors or a brush to remove any tangled hair, threads, or debris from the brush roll.
- **Wipe Clean:** Wipe the exterior of the brush head with a damp cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; power switch off; no power at outlet.	Ensure plug is securely in outlet; press power switch; check circuit breaker or try another outlet.
Loss of suction.	Dust container full; filters clogged; blockage in hose/attachments.	Empty dust container; clean or replace filters; check for and remove blockages.
Unusual noise during operation.	Blockage in brush roll or hose; damaged motor.	Turn off and unplug. Check for and remove blockages. If noise persists, contact customer support.
Dust escaping from vacuum.	Dust container not properly closed; filters not correctly installed or damaged.	Ensure dust container is securely closed; check and correctly install filters; replace damaged filters.

TECHNICAL SPECIFICATIONS

- **Model:** NH9212
- **Brand:** Necchi
- **Type:** 2-in-1 Electric Broom Vacuum Cleaner
- **Power:** 600 Watts
- **Filtration:** Cyclonic, Fabric Filter
- **Dust Container Capacity:** 0.6 Liters
- **Cable Length:** Approximately 5 meters
- **Telescopic Tube Length:** Up to 84 centimeters
- **Product Dimensions (L x W x H):** 30 x 20 x 11.5 cm
- **Item Weight:** 2.2 Kilograms
- **Noise Level:** 1 Decibel (Note: This value seems unusually low and may be a misprint in source data. Actual operating noise will be higher.)
- **Special Features:** Bagless, Cyclonic, Includes animal brush (referring to the brush attachment)
- **Power Source:** Corded Electric (Note: Some source data incorrectly states "battery powered". This model is corded.)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for warranty claims.