

s20 BW-FLB3

Blitzwolf® BW-FLB3 Gaming Earbuds User Manual

Model: BW-FLB3

1. INTRODUCTION

Thank you for choosing the Blitzwolf® BW-FLB3 Gaming Earbuds. These earbuds are designed to provide an immersive audio experience with ultra-low latency, making them ideal for gaming, music, and calls. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. SAFETY INFORMATION

- Do not expose the earbuds to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the earbuds to strong impacts.
- Do not disassemble or modify the earbuds. This will void the warranty.
- Keep out of reach of children and pets.
- Use only the provided charging cable or a certified USB Type-C cable for charging.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

3. PACKAGE CONTENTS

- Blitzwolf® BW-FLB3 Gaming Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- User Manual
- Additional Eartips (various sizes)

4. PRODUCT OVERVIEW



Figure 4.1: Blitzwolf BW-FLB3 Gaming Earbuds and Charging Case. The image shows both earbuds placed inside their open charging case, highlighting their design and the charging contacts.

13mm Large Dynamic Driver

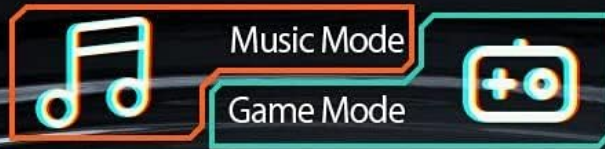


Figure 4.2: Detachable HD Microphone Feature. This close-up view illustrates the connection point for the detachable high-definition microphone on one of the earbuds, emphasizing clear voice pickup.

Components:

- **Earbuds:** Left and Right, with touch control areas and LED indicators.
- **Charging Case:** Houses and charges the earbuds, features a USB Type-C charging port and LED indicators for battery status.
- **Detachable Microphone:** For enhanced voice clarity during calls or gaming.
- **13mm Large Dynamic Driver:** Provides powerful audio performance with deep bass.

5. SETUP

5.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case, ensuring they are correctly seated. The earbuds will begin charging automatically.

- 2. Connect the USB Type-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
- 3. The LED indicators on the case will show the charging status. A full charge typically takes 1-2 hours for the earbuds and 2-3 hours for the case.

5.2 Bluetooth Pairing

- 1. Open the charging case. The earbuds will automatically power on and enter pairing mode (LED indicators will flash).
- 2. On your device (smartphone, tablet, laptop), enable Bluetooth.
- 3. Search for "BW-FLB3" in the list of available Bluetooth devices and select it to connect.
- 4. Once connected, the earbud LEDs will stop flashing, indicating successful pairing.
- 5. If pairing fails, place the earbuds back into the case, close it, and then reopen to re-enter pairing mode.

5.3 Wearing the Earbuds

Gently insert the earbuds into your ears, ensuring a snug and comfortable fit. Adjust their position until the sound is clear and the earbuds feel secure. Try different eartip sizes for the best fit and sound isolation.

6. OPERATING INSTRUCTIONS

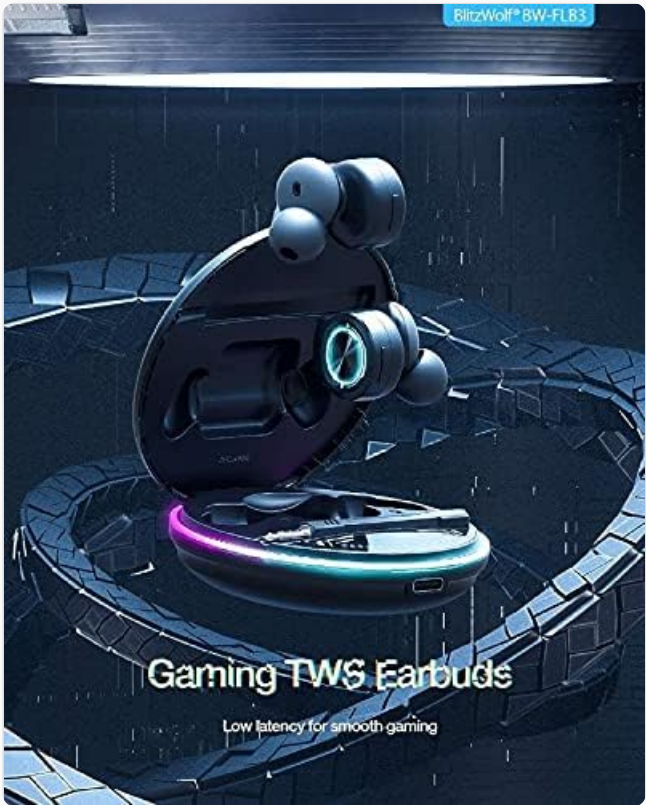


Figure 6.1: Simple Touch Control Functions. This diagram illustrates the various touch gestures on the earbuds for functions like power on/off, play/pause, volume control, call management, and mode switching.

6.1 Basic Touch Controls

Function	Action
Power On/Off	Open/Close charging case or long press touch area (manual)
Play/Pause	Single tap on either earbud
Volume Up	Tap and hold right earbud

Function	Action
Volume Down	Tap and hold left earbud
Next Song	Double tap right earbud
Previous Song	Double tap left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Long press on either earbud
Activate Voice Assistant	Triple tap on either earbud

6.2 Game Mode / Music Mode Switch



Figure 6.2: Ultra-low Latency for Gaming. This image visually represents the minimal delay (0.04s response) achieved by the earbuds in game mode, showing sound waves reaching the earbud from a gaming scenario on a smartphone. The BW-FLB3 earbuds feature a dedicated Game Mode for ultra-low latency audio, crucial for competitive gaming, and a

Music Mode optimized for high-fidelity sound. To switch between modes:

- **Switch Mode:** Quadruple tap (four taps) on either earbud. You will hear an audio prompt indicating the mode change (e.g., "Game Mode" or "Music Mode").

6.3 Microphone Usage

The earbuds come with a detachable HD microphone for clearer voice pickup. To use the microphone, simply plug it into the designated port on the earbud. Ensure it is securely connected. When not needed, the microphone can be detached for convenience.

7. MAINTENANCE

7.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Use a cotton swab or a small, soft brush to clean the charging contacts on both the earbuds and the case.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

7.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the product in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen. Turn off and on Bluetooth on your device.
No sound from one earbud	Check battery level of both earbuds. Re-pair the earbuds with your device. Clean charging contacts.
Low volume	Increase volume on both the earbuds (tap and hold right) and your connected device. Clean eartips and earbud mesh.
Microphone not working	Ensure the detachable microphone is securely plugged in. Check microphone settings on your connected device.
Intermittent connection	Ensure no obstacles between earbuds and device. Move closer to the device. Avoid strong electromagnetic interference.

9. SPECIFICATIONS

Feature	Detail
Model	BW-FLB3
Connectivity Technology	Bluetooth 5.0

Feature	Detail
Ear Placement	In-Ear
Microphone	Integrated, Detachable HD Microphone
Driver Size	13mm Large Dynamic Driver
Charging Port	USB Type-C
Material	Rubber
Color	Black
Product Weight	185 g
Package Dimensions	12 x 10 x 5 cm
Compatible Devices	Tablets, Mobile Phones, Laptops, Televisions, Gaming Consoles

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact the retailer where you purchased the product. For technical support or further assistance, please visit the official Blitzwolf website or contact their customer service.

© 2023 Blitzwolf. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question