

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [Casio CDP-S110WE Electronic Piano User Manual](#)

Casio CDP-S110WE

Casio CDP-S110WE Electronic Piano User Manual

MODEL: CDP-S110WE

Introduction

Welcome to the user manual for your new Casio CDP-S110WE Electronic Piano. This instrument is designed to provide a high-quality piano experience with its 88 weighted keys and slim, portable design. It is an ideal choice for beginners and experienced players alike, offering a range of sounds and versatile connectivity options. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your digital piano.

Setup

Follow these steps to set up your Casio CDP-S110WE Electronic Piano:

- Unpacking:** Carefully remove the piano and all accessories from the packaging. Ensure all components are present: the CDP-S110WE unit, AC adapter, music stand, and sustain pedal.
- Placement:** Place the piano on a stable, flat surface or a compatible keyboard stand. Ensure there is adequate space around the instrument for ventilation and comfortable playing.
- Power Connection:** Connect the supplied AC adapter to the DC 12V jack on the rear of the piano. Plug the other end of the adapter into a standard electrical outlet. Alternatively, the piano can be powered by 6 AA-size alkaline batteries (not included) for portable use.
- Sustain Pedal Connection:** Connect the included sustain pedal to the PEDAL jack on the rear of the piano.
- Music Stand Attachment:** Insert the music stand into the slots provided on the top panel of the piano.



Image: The Casio CDP-S110WE Electronic Piano, showcasing its full 88-key layout and slim design.

Operating Instructions

Familiarize yourself with the basic operations of your digital piano:

- **Power On/Off:** Press the **POWER** button located on the left side of the top panel to turn the piano on or off.
- **Volume Adjustment:** Use the **VOLUME** knob to adjust the overall sound output level. Turn clockwise to increase volume and counter-clockwise to decrease.
- **Sound Selection:** The CDP-S110WE features 10 built-in tones. To select a tone, hold down the **FUNCTION** button and press the corresponding key on the keyboard as indicated in the manual's tone list.
- **Metronome:** To activate the metronome, hold down the **FUNCTION** button and press the **METRONOME** key. You can adjust the tempo by holding **FUNCTION** and using the tempo keys.
- **Connectivity (USB to Host):** The USB Type B port on the rear panel allows you to connect the piano to a computer for MIDI data transfer. This enables use with music software.
- **Audio In:** The **AUDIO IN** jack allows you to connect an external audio player (e.g., smartphone, MP3 player) to play along with your favorite music through the piano's speakers. Use a 3.5mm stereo mini-plug cable.
- **Headphones:** Connect standard stereo headphones to the **PHONES/OUTPUT** jack for private practice. This will mute the internal speakers.



Image: A close-up view of the control panel on the Casio CDP-S110WE, showing the volume knob and function buttons.



Image: The rear panel of the Casio CDP-S110WE, highlighting the various input/output ports including USB and audio connections.

Maintenance

Proper care will ensure the longevity and optimal performance of your digital piano:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. For stubborn dirt, slightly dampen the cloth with water and a mild, neutral detergent, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or polishes, as they can damage the finish.

- **Key Cleaning:** Gently wipe the keys with a soft, slightly damp cloth. Do not use excessive moisture.
- **Storage:** When not in use for extended periods, store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If using batteries, remove them to prevent leakage.
- **Handling:** Avoid placing heavy objects on the piano or subjecting it to strong impacts. Do not block the speaker grilles.

Troubleshooting

If you encounter issues with your piano, refer to the following common problems and solutions:

- **No Sound:**
 - Ensure the power adapter is securely connected and the piano is turned on.
 - Check the VOLUME knob and ensure it is not set to minimum.
 - If headphones are connected, disconnect them to hear sound from the speakers.
- **Distorted Sound:**
 - Reduce the VOLUME level.
 - If an external device is connected to AUDIO IN, check its volume level.
- **Keys Not Responding:**
 - Ensure the piano is powered on.
 - If only certain keys are not responding, contact customer support.
- **Connectivity Issues (USB/Audio In):**
 - Ensure cables are securely connected.
 - For USB connection, verify that the necessary drivers are installed on your computer (if required by your operating system).
 - Check the volume settings on the connected external device.

Specifications

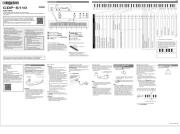
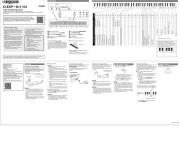
Feature	Specification
Model Name	CDP S110WE
Item Model Number	CDP-S110WEC5
Number of Keys	88 Weighted Keys
Dimensions (L x W x H)	1322 x 232 x 99 millimeters (57.48 x 8.27 x 12.2 inches)
Item Weight	10.5 Kilograms (23.1 pounds)
Color	White
Connectivity	MIDI USB, Auxiliary (Audio In)
Headphones Jack	3.5mm Jack
Power Source	AC Adapter (included), Battery Powered (6 AA-size alkaline batteries)

Warranty and Support

Your Casio CDP-S110WE Electronic Piano comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details. For technical support, service, or additional information, please visit the official Casio website or contact Casio customer service. You can find more information and resources at the [Casio Store on Amazon](#) or the main Casio support portal.

© 2025 Casio. All rights reserved.

Related Documents - CDP-S110WE

	<p>Casio CDP-S110 Digital Piano Quick Start Guide</p> <p>Concise guide to setting up and using the Casio CDP-S110 digital piano, covering features like tones, metronome, connectivity, and basic operations.</p>
	<p>CASIO CDP-S110 Digital Piano User's Guide</p> <p>Explore the CASIO CDP-S110 digital piano with this comprehensive user's guide. Learn setup, operation, features like tones, effects, metronome, and connectivity. Includes troubleshooting and support information.</p>
	<p>Casio CDP-S110 Digital Piano Quick Start Guide</p> <p>Concise guide to setting up and using the Casio CDP-S110 digital piano, covering tones, metronome, connections, and basic operations.</p>
	<p>CDP-S110 : Guide de démarrage rapide - Casio</p> <p>Guide de démarrage rapide pour le piano numérique Casio CDP-S110. Découvrez les fonctions de base, la connexion des accessoires et les précautions d'utilisation.</p>
	<p>Casio CDP-S110 Digital Piano User Manual</p> <p>Comprehensive user manual for the Casio CDP-S110 digital piano, covering setup, features, operations, troubleshooting, and technical specifications. Learn how to connect accessories, use effects, metronome, and MIDI functions.</p>
	<p>Casio CDP-130 Digital Piano User Guide</p> <p>Comprehensive user guide for the Casio CDP-130 Digital Piano, covering setup, playing features, connectivity, and troubleshooting.</p>

