

Rafow B099RGK3QQ

Rafow Electric Portable Food Processor with Electronic Scale - Instruction Manual

Model: B099RGK3QQ

Brand: Rafow

INTRODUCTION

Thank you for purchasing the Rafow Electric Portable Food Processor with Electronic Scale. This versatile appliance is designed to simplify your food preparation tasks, offering chopping, blending, and precise weighing capabilities. Please read this manual carefully before use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth.
- This appliance is not intended for use by children. Keep out of reach of children.
- Do not operate the appliance if any part is damaged. Contact customer support for assistance.
- Ensure the lid is securely locked in place before operating the chopper.
- Do not use the chopping function while the unit is charging.

PRODUCT COMPONENTS

Precise Electronic Scale Function

Accurate distribution of food for balanced nutrition.



Image showing the RafoW Electric Portable Food Processor with its main components, including the motor unit, glass bowl, and blade assembly.

- **Motor Unit:** Contains the motor, control buttons, and electronic scale display.
- **Glass Bowl:** 3-cup capacity, made of borosilicate glass.
- **Blade Assembly:** Detachable 4 S-shaped stainless steel blades for chopping.
- **Whisk Attachment:** For whipping eggs and cream.
- **Garlic Peeler Attachment:** For peeling garlic cloves.
- **Grinder Attachment:** For grinding paste or pureeing.
- **USB Charging Cable:** For recharging the internal battery.

SETUP AND ASSEMBLY

1. **Initial Charge:** Before first use, fully charge the motor unit using the provided USB cable. The charging indicator will show when charging is complete.

2. Assemble Chopping Blades:



1 Place the blade into the slot of the chopper bowl.



2 Put the container on the scale and zeroes the weight to weigh the ingredients.



3 Put the cut food in the chopper bowl.



4 Press the chopping button to start, release to stop.



5 Use a clean spatula to remove the chopped food perfectly.

Step-by-step visual guide for assembling the chopping blades and preparing the food processor for use.

- Place the blade assembly into the slot at the bottom of the glass bowl.
- Ensure the blade is seated correctly and securely.
- Place the motor unit onto the glass bowl, aligning the top of the blade assembly with the motor's drive shaft.
- Twist the motor unit clockwise until it locks securely onto the bowl. The appliance will not operate if not properly assembled due to the safety induction lock.

3. **Assemble Other Attachments:** For the whisk, garlic peeler, or grinder, replace the chopping blade assembly with the desired attachment in the same manner.

OPERATING INSTRUCTIONS

Using the Electronic Scale Function

Precise Electronic Scale Function

Accurate distribution of food for balanced nutrition.



Digital Electronic Scale

Digital Scale Display



"T" button: zeroes the weight (tare)



Button: scale switch



"M" Button: change the unit to "g" or "ml"



Button: chopping switch

Note:

1. Do not use the chopping function when charging.
2. The weighing range: < 1kg

The RafoW Food Processor features an integrated electronic scale for precise ingredient measurement. The image highlights the digital scale display and control buttons.

1. Place the empty glass bowl (with or without blade assembly) onto the motor unit.
2. Press the power button on the motor unit to turn on the scale. The display will show "0".
3. Use the "M" button to cycle through units: "g" (grams) or "ml" (milliliters).
4. Press the "T" (Tare) button to zero out the weight of the container if you are using an additional bowl or plate on top of the glass bowl.
5. Add your ingredients to the bowl. The weight will be displayed on the screen.
6. *Note: The weighing range is less than 1kg. Do not use the chopping function while charging.*

Your browser does not support the video tag.

Video demonstrating the use of the electronic scale function on the RafoW Food Processor, showing how to turn it on, select units, tare, and weigh ingredients.

Chopping and Blending

Multi-purpose Food Chopper Make Cooking Easier

Garlic | Herbs | Chili | Vegetables | Meat | Fish | Nuts
Crackers | Baby Food | and more...



This image illustrates the versatility of the Raflow Food Processor for chopping various ingredients like garlic, herbs, chili, vegetables, meat, fish, nuts, crackers, and baby food.

1. Ensure the chopping blade assembly is correctly installed in the glass bowl and the motor unit is securely locked.
2. Cut food into small pieces (approximately 1-2 inches) before placing them into the glass bowl. Do not overfill the bowl; ensure the maximum fill line is not exceeded.
3. Press and hold the chopping button on the motor unit to start chopping. Release the button to stop.
4. For coarse chops, use short pulses. For finer results, hold the button longer.
5. After chopping, carefully remove the motor unit and blade assembly. Use a spatula to remove processed food.

Your browser does not support the video tag.

Video demonstrating the chopping capabilities of the Raflow Food Processor, showing how to chop onions and mince meat quickly and efficiently.

Using Other Attachments (Whisk, Garlic Peeler, Grinder)

Egg Whisk, Garlic Peeler and Grinder Included



This image displays the additional attachments included with the RafoW Food Processor: an egg whisk, a garlic peeler, and a grinder, expanding its functionality beyond basic chopping.

- **Garlic Peeler:** Install the garlic peeler attachment. Add garlic cloves to the bowl. Press and hold the chopping button for a few seconds until the skins separate.
- **Egg Whisk:** Install the whisk attachment. Add eggs or cream to the bowl. Press and hold the chopping button until desired consistency is achieved.
- **Grinder:** Install the grinder attachment. Add ingredients for pureeing or grinding. Press and hold the chopping button until the desired texture is reached.

Your browser does not support the video tag.

Video demonstrating the use of the garlic peeler, egg whisk, and grinder attachments with the RafoW Food Processor, showcasing their respective functions.

MAINTENANCE AND CLEANING

Detachable Chopper Blade, Easy to Clean



Dishwasher Safe Parts

Note:

Please wear cut-resistant gloves when cleaning the blades manually.



This image highlights the detachable nature of the chopper blade and glass bowl, emphasizing their dishwasher-safe properties for easy cleaning.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water.
- **Glass Bowl and Attachments:** The glass bowl, blade assembly, whisk, garlic peeler, and grinder attachments are dishwasher safe. For manual cleaning, wash with warm soapy water and rinse thoroughly.
- **Blades:** Exercise extreme caution when handling the sharp blades. It is recommended to wear cut-resistant gloves when cleaning the blades manually.
- **Storage:** Ensure all parts are dry before storing. Store the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	• Not charged. • Motor unit not securely locked onto the bowl. • Safety induction lock not engaged.	• Charge the appliance fully. • Ensure the motor unit is twisted clockwise until it clicks into place. • Verify proper assembly.
Food is not chopping evenly.	• Overfilled bowl. • Food pieces are too large.	• Reduce the amount of food in the bowl. • Cut food into smaller, more uniform pieces. • Use pulse action for better control.
Scale display is inaccurate or not working.	• Unit not on a flat, stable surface. • Battery low. • Weight exceeds 1kg.	• Place the unit on a firm, level surface. • Recharge the appliance. • Ensure total weight is within the specified range.

SPECIFICATIONS

- **Brand:** Raflow
- **Model:** B099RGK3QQ
- **Special Features:** Detachable Attachment, Lightweight, USB Charging, Electronic Scale
- **Material:** Borosilicate Glass, Plastic, Stainless Steel
- **Included Components:** Motor Unit, Glass Bowl, Chopping Blade, Whisk Attachment, Garlic Peeler, Grinder Attachment, USB Cable
- **Power Source:** Corded Electric (USB Rechargeable)
- **Wattage:** 120 watts
- **Number of Speeds:** 1
- **Material Type Free:** BPA Free
- **Dishwasher Safe Parts:** Yes (Glass bowl and attachments, excluding motor unit)
- **Item Weight:** 680 Grams

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Raflow customer service directly. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question