

Ollny HG-29V403C

Ollny 131FT 400 LED Color Changing Christmas Lights Instruction Manual

Brand: Ollny | Model: HG-29V403C

INTRODUCTION

Thank you for choosing Ollny Christmas Lights. This manual provides essential information for the safe and effective use of your new 131FT 400 LED color-changing string lights. Designed for both indoor and outdoor decoration, these lights feature multiple modes, remote control, dimming, and timer functions to enhance your festive ambiance.

WHAT'S IN THE BOX

- 1 x Ollny 131FT 400 LED Color Changing String Lights
- 1 x Remote Control (1 CR2 battery included)
- 1 x 29V Low Voltage Power Adapter
- 1 x User Manual

PRODUCT FEATURES

- **Extra Long Length:** Total length of 131 feet with 400 LED lights, suitable for extensive decoration.
- **11 Lighting Modes:** Includes 4 steady lighting modes and 7 flashing modes for diverse visual effects.
- **IP44 Waterproof:** Designed for indoor and outdoor use, resistant to dust, rain, snow, and accidental water contact.
- **Safe to Touch:** Features a 29V low voltage, UL certified power adapter, ensuring safety and remaining cool to the touch.
- **Dimmable:** Offers 4 brightness levels (25%, 50%, 75%, 100%) to adjust the light intensity.
- **Timer Function:** Three timer settings (4 hours on, 6 hours on, 8 hours on) for automatic operation.
- **Memory Function:** The lights will remember the last selected mode for convenience.

SAFETY INFORMATION

- Operate with the provided 29V DC output voltage adapter only.

- The power adapter is UL certified, ensuring electrical safety.
- The lights remain cool to the touch, making them safe for children and pets.
- Ensure all connections are secure and the waterproof cap is properly inserted when used outdoors.

SETUP INSTRUCTIONS

1. Carefully untie the string lights and hang them in your desired location.
2. Connect the power supply adapter to the string lights and then plug it into a standard electrical outlet.
3. Test the lights to ensure they work properly before final installation.

OPERATING INSTRUCTIONS

Remote Control Functions

Use the included remote control to manage your lights. Ensure the remote is pointed towards the adapter for optimal response.

- **ON/OFF:** Press the green 'ON' button to turn lights on, red 'OFF' button to turn lights off.
- **Timer:** Select 4H, 6H, or 8H to activate the timer function. The lights will automatically turn on for the selected duration and then off. Press 'TIMER OFF' to deactivate.
- **Lighting Modes:** Choose from 11 modes including 4 steady-on (Warm White Steady-on, Multicolor Steady-on, Mixture Color 1 Steady-on, Mixture Color 2 Steady-on) and 7 flashing modes (Slo-Glo, Breathing, Warm White Slo-Glo, Multicolor Slo-Glo, Flash, In Wave, Combination).
- **Dim/Brighten:** Use the 'DIM' buttons (sun icons) to adjust brightness levels (25%, 50%, 75%, 100%).

Manual Control

You can also cycle through the lighting modes by pressing the button directly on the power adapter.

MEDIA GALLERY

Product Images

Ollny Super Long String Lights

Connect the power supply before installation and test if the lights works properly



400 LEDs



131 FT



Image: Ollny 131FT 400 LED Christmas Lights decorating a room, highlighting the extra-long length and number of LEDs.

IP44 Waterproof



Image: Ollny Christmas Lights in rain, demonstrating their IP44 waterproof rating for all weather conditions.



Image: A house exterior decorated with Olly Christmas Lights, illustrating the 4 steady-on and 7 flashing modes.

11 Lighting Modes

| | | | |
|----------------|----------------|----------------|--------------|
| 1 C1 Steady ON | 2 C2 Steady ON | 3 C1 Mixture | 4 C2 Mixture |
| 5 Breathing | 6 SLO-GLO | 7 C1 Flash | 8 C2 Flash |
| 9 Flash | 10 In Wave | 11 Combination | |

Image: The remote control for Olly Christmas Lights, detailing the 11 available lighting modes.



Christmas Lights for Indoor and Outdoor

Image: Ollny Christmas Lights used in various settings, demonstrating their versatility for both indoor and outdoor decoration.

Product Videos

Video: Official Ollny video showcasing the color-changing features of the 400 LED Christmas lights for outdoor use.

Video: Official Ollny video demonstrating the waterproof capabilities of the 400 LED Christmas lights for outdoor decoration.

MAINTENANCE

To ensure the longevity of your Ollny Christmas Lights, store them in a cool, dry place when not in use. Gently clean the lights with a soft, dry cloth if necessary. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

- **Lights do not turn on:** Ensure the power adapter is securely connected to both the lights and the electrical outlet. Try pressing the ON button on the remote or the button on the adapter to cycle through modes.
- **Remote control not working:** Check if the CR2 battery in the remote is correctly inserted and has sufficient power. Ensure there are no obstructions between the remote and the adapter.

- **Intermittent flickering:** Verify all connections are tight. If used outdoors, ensure the waterproof cap on the adapter is properly sealed.
- **Still experiencing issues:** If problems persist, please contact Ollny customer service with your order number for assistance.

SPECIFICATIONS

| Attribute | Detail |
|--------------------|-------------------------|
| Model Number | HG-29V403C |
| Total Length | 131 Feet |
| Number of LEDs | 400 |
| Light Color | Warm White & Multicolor |
| Power Source | Corded Electric |
| Voltage | 29V DC |
| Wattage | 6 Watts |
| Water Resistance | IP44 Waterproof |
| Material Type | Copper, Plastic |
| Control Method | Remote Control |
| Included Batteries | 1 CR2 (for remote) |

WARRANTY AND SUPPORT

Ollny provides a **12-month warranty** for this product, covering manufacturing defects. For any questions, technical support, or warranty claims, please contact Ollny customer service at support@ollny.com. Please include your order number for faster service.