

[manuals.plus](#) /

› [eufy](#) /

› [eufy RoboVac X8 Robot Vacuum Instruction Manual](#)

**eufy X8**

# eufy RoboVac X8 Robot Vacuum Instruction Manual

Model: X8 (T2262121)

---

## INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your eufy RoboVac X8 robot vacuum cleaner. Please read this guide thoroughly before using the product and retain it for future reference.

## PACKAGE CONTENTS

Verify that all components are present in the package:

- RoboVac X8 Unit
- Charging Base
- AC Power Adapter
- Side Brushes (2)
- Additional Filter
- Cleaning Tool
- Cable Ties (5)
- Owner's Manual and other documents



Image: The eufy RoboVac X8 robot vacuum with its charging base, power adapter, and other included accessories.

## PRODUCT FEATURES

- **Twin-Turbine Technology:** Equipped with two turbines, each generating 2000 Pa of suction power, for enhanced debris and pet hair pickup.
- **iPath Laser Navigation:** Utilizes advanced LiDAR technology to scan and map your home, enabling intelligent navigation and obstacle avoidance for efficient cleaning.
- **AI. Map 2.0 Technology:** Supports saving maps for multiple floors, allowing the RoboVac to recognize and clean different levels of your home.
- **UltraPack Dust Compression:** Compresses dust within the dust box, increasing its capacity and reducing the frequency of emptying.
- **App Control:** Manage cleaning schedules, select specific rooms, define no-go zones, and view real-time maps directly from your smartphone.
- **Voice Activated Control:** Compatible with Google Assistant and Amazon Alexa for convenient voice commands.

- **BoostIQ Technology:** Automatically increases suction power when transitioning from hard floors to carpets for deeper cleaning.

## SETUP GUIDE

---

1. **Unpack the RoboVac:** Carefully remove the RoboVac and all accessories from the packaging.
2. **Install Side Brushes:** Attach the two side brushes to the posts on the bottom of the RoboVac until they click into place.
3. **Position the Charging Base:** Place the charging base on a hard, level surface against a wall. Ensure there is at least 3 ft (1 m) of clear space to the front and 1 ft (0.3 m) to either side of the charging base. Connect the AC power adapter to the charging base and a wall outlet.
4. **Initial Charge:** Place the RoboVac on the charging base. Ensure the charging pins on the RoboVac align with those on the base. The indicator lights will illuminate to show charging status. Fully charge the RoboVac before first use (approximately 5-6 hours).
5. **Download the eufyHome App:** Search for "eufyHome" in the App Store (iOS) or Google Play (Android) and download the app.
6. **Connect to Wi-Fi:** Follow the in-app instructions to connect your RoboVac to your home Wi-Fi network. This enables smart features and remote control.

# iPath Laser Navigation

Intelligently Maps An Efficient Route

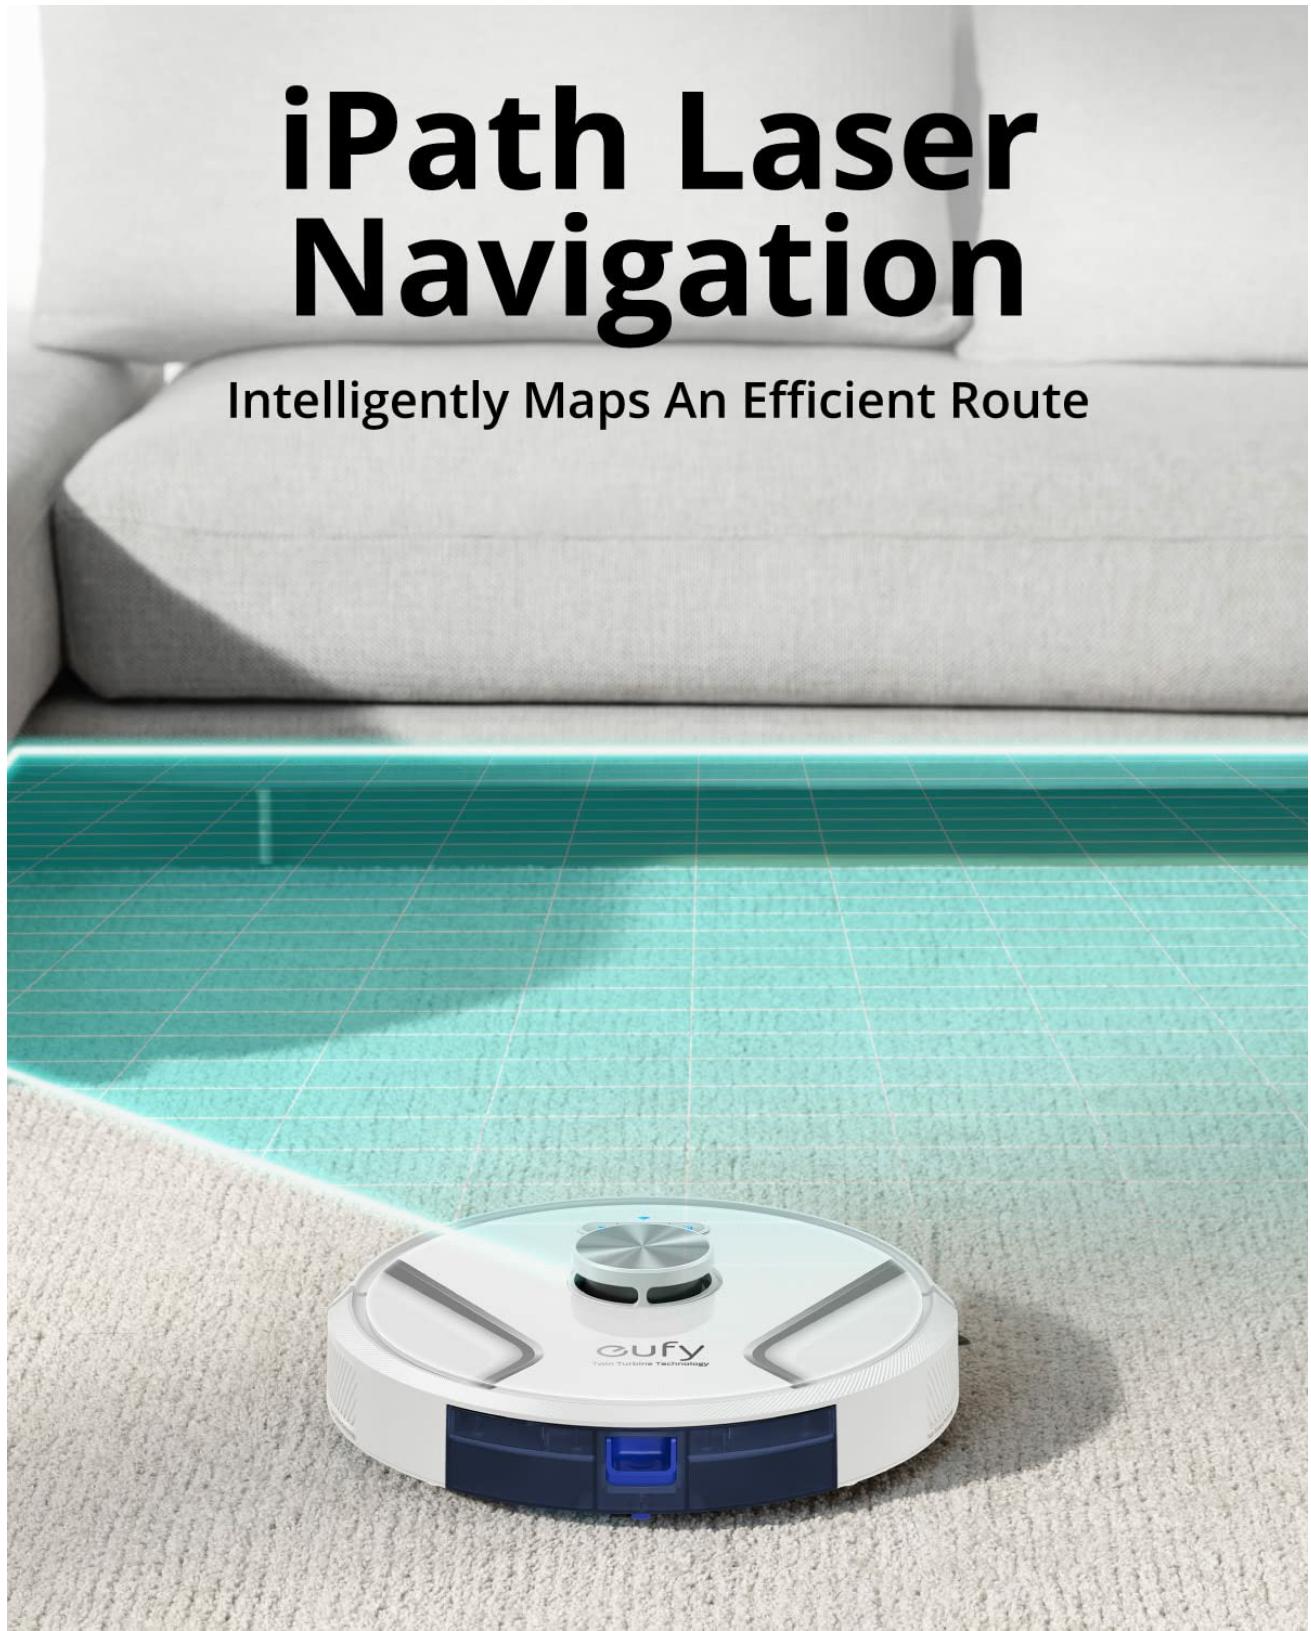


Image: The RoboVac X8 actively mapping its environment using iPath Laser Navigation.

## OPERATING INSTRUCTIONS

### Starting a Clean

- **Manual Start:** Press the power button on the RoboVac or the "Clean" button in the eufyHome app to start a cleaning cycle.
- **Scheduled Cleaning:** Use the eufyHome app to set up daily or weekly cleaning schedules.
- **Spot Cleaning:** Place the RoboVac directly over a concentrated area of dirt and select the spot cleaning mode

via the app or the spot clean button on the unit (if available).

## Using the eufyHome App

The eufyHome app provides comprehensive control over your RoboVac X8:

- **Real-time Mapping:** View the RoboVac's cleaning path and current location.
- **Customized Cleaning:** Select specific rooms or zones for cleaning.
- **No-Go Zones:** Draw virtual boundaries on the map to prevent the RoboVac from entering certain areas.
- **Suction Power Adjustment:** Choose from various suction modes (e.g., Standard, Max, BoostIQ).
- **Cleaning History:** Review past cleaning reports.

# AI. Map 2.0

Memorizes Multi-floor Maps And More



Image: A visual representation of the RoboVac X8's AI. Map 2.0 technology, showing its ability to map and navigate multiple floors.

# Control The Action

 No-Go Zones

 Real-Time Mapping

 Recharge & Resume

 Zone Cleaning

 Spot Cleaning

 Tap N Go

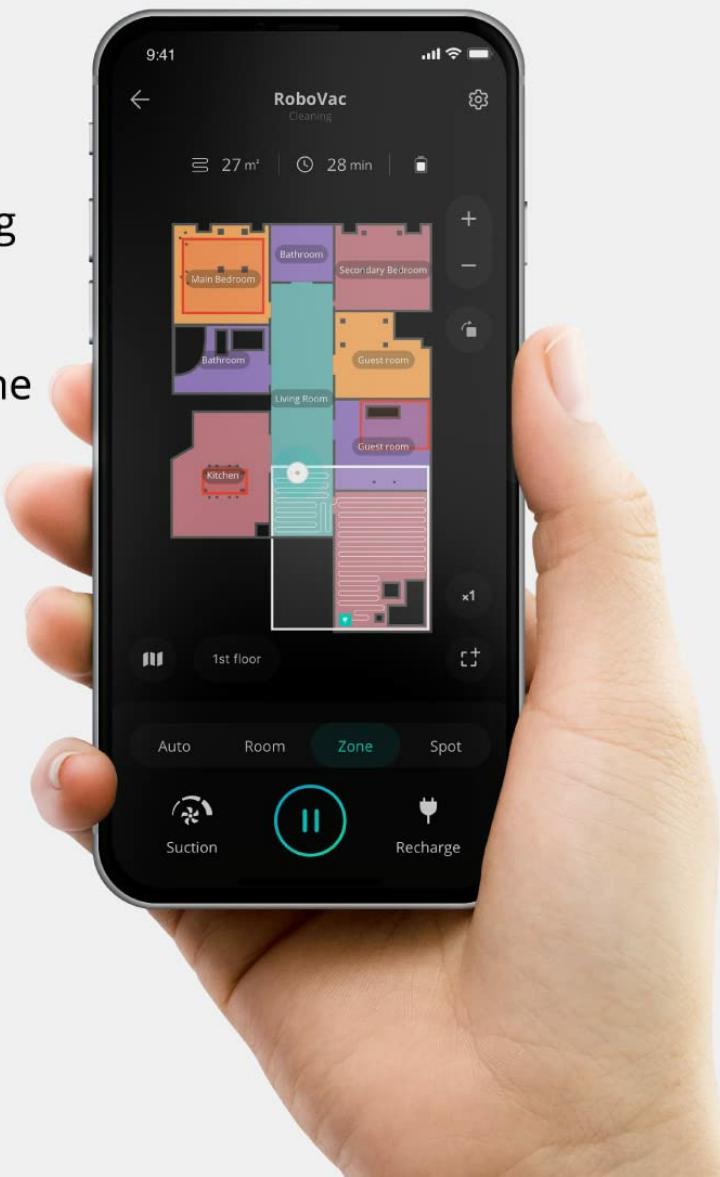


Image: A smartphone displaying the eufyHome app interface, illustrating various control options like no-go zones, real-time mapping, and zone cleaning.

## MAINTENANCE

Regular maintenance ensures optimal performance of your RoboVac X8. Always power off the RoboVac and disconnect it from the charging base before performing any maintenance.

### Emptying the Dust Collector

1. Press the release button on the top cover to open it.

2. Pull out the dust collector.
3. Open the dust collector cover and empty its contents into a trash bin.
4. Close the dust collector cover and reinsert it into the RoboVac until it clicks into place.

## Cleaning the Filter

- Remove the filter from the dust collector.
- Tap the filter to remove dust and debris.
- Rinse the filter under running water. Allow it to air dry completely before reinserting.

## Cleaning the Rolling Brush and Side Brushes

- Use the cleaning tool to cut and remove any hair or debris tangled around the rolling brush.
- Gently pull the side brushes to remove them. Clean any hair or debris from the brushes and their posts. Reattach them securely.

## TROUBLESHOOTING

| Problem                        | Possible Cause  | Solution   |
|--------------------------------|---|--|
| RoboVac does not turn on.      | Low battery or not charged.                             | Place RoboVac on the charging base and ensure it is fully charged.   |
| RoboVac gets stuck frequently. | Obstacles (cables, small objects) or tight spaces.      | Clear the cleaning area of obstacles. Use the app to set no-go zones for problematic areas.                      |
| Poor cleaning performance.     | Full dust collector, dirty filter, or tangled brushes.  | Empty the dust collector. Clean or replace the filter. Clean the rolling brush and side brushes.                 |
| Cannot connect to Wi-Fi.       | Incorrect Wi-Fi password, 5GHz network, or poor signal. | Ensure correct 2.4GHz Wi-Fi network and password. Move RoboVac closer to the router. Restart RoboVac and router. |
| RoboVac falls down stairs.     | Cliff sensors are dirty or malfunctioning.              | Clean the cliff sensors on the bottom of the RoboVac with a dry cloth.   |

## SPECIFICATIONS

- **Model Name:** X8
- **Item Model Number:** T2262121
- **Product Dimensions:** 13.58 x 13.58 x 3.85 inches
- **Item Weight:** 7.72 Pounds
- **Battery:** 1 Lithium Ion battery required
- **Surface Recommendation:** Carpet, Hard Floors
- **Special Feature:** Bagless
- **Color:** White

## WARRANTY AND SUPPORT

The eufy RoboVac X8 comes with a worry-free 12-month warranty. For technical support, warranty claims, or additional information, please refer to the contact details provided in the included owner's manual or visit the official eufy support website.

---

© 2023 eufy. All rights reserved.