

VMAI Power Charger for G700 and P700 Electric Mops

VMAI Power Charger Instruction Manual

For G700 and P700 Cordless Electric Mops

1. INTRODUCTION

Thank you for choosing the VMAI Power Charger. This charger is designed to provide efficient and reliable power to your VMAI G700 and P700 Cordless Electric Mops. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your product.

2. IMPORTANT SAFETY INFORMATION

- Always use the charger with a compatible VMAI G700 or P700 electric mop battery. Using incompatible batteries may cause damage or injury.
- Do not expose the charger to water or moisture. Use only in dry indoor environments.
- Inspect the charger cord and plug for any damage before each use. Do not use if damaged.
- Keep the charger away from heat sources and direct sunlight.
- Unplug the charger from the power outlet when not in use or during cleaning.
- Do not attempt to disassemble or repair the charger yourself. Contact VMAI customer support for assistance.
- Keep out of reach of children and pets.

3. PRODUCT OVERVIEW

The VMAI Power Charger is a dedicated accessory for charging the detachable batteries of VMAI G700 and P700 Cordless Electric Mops.



Image 3.1: VMAI Power Charger Cord. This image shows the compact design of the power charger, featuring a standard plug and a connector for the mop battery.



Image 3.2: Detachable Battery. This image displays the removable battery pack, which is charged using the VMAI Power Charger.

4. SETUP

Before charging, ensure the battery is properly removed from your VMAI G700 or P700 electric mop.

1. **Remove the Battery:** Locate the battery compartment on your VMAI electric mop. Press the release button (if applicable) and slide the battery out.
2. **Connect Charger to Battery:** Plug the charger's connector into the charging port on the detachable battery. Ensure a firm connection.
3. **Connect Charger to Power Outlet:** Plug the charger's power adapter into a standard wall outlet (100-240V AC, 50/60Hz).



Image 4.1: VMAI G700 Electric Mop Battery. This image shows the specific battery model for the G700 mop, ready for charging.



Image 4.2: VMAI P700 Electric Mop Battery. This image shows the specific battery model for the P700 mop, ready for charging.

5. OPERATING INSTRUCTIONS (CHARGING)

Once the charger is connected to both the battery and a power outlet, the charging process will begin automatically.

- **Charging Indicator:** The battery pack typically features an LED indicator that will illuminate or change color to show the charging status. Refer to your specific mop's manual for detailed indicator behavior (e.g., red for charging, green for fully charged).
- **Charging Time:** A full charge usually takes approximately 3-5 hours, depending on the battery's remaining capacity.
- **Disconnection:** Once the battery is fully charged, disconnect the charger from the power outlet first, then disconnect it from the battery.
- **Reinsert Battery:** Reinsert the fully charged battery into your VMAI electric mop until it clicks securely into place.

6. MAINTENANCE

- **Cleaning:** Wipe the charger's exterior with a soft, dry cloth. Do not use liquid cleaners or immerse the charger in water.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Cord Care:** Avoid bending or kinking the power cord excessively. Do not wrap the cord tightly around the charger.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Battery not charging	Charger not plugged in correctly Damaged charger or battery Power outlet not working	Ensure charger is securely plugged into both the battery and the wall outlet. Check if the power outlet is functional by plugging in another device. Inspect charger and battery for visible damage. If damaged, discontinue use and contact support.

Problem	Possible Cause	Solution
Charger feels hot during charging	Normal operation Poor ventilation	It is normal for the charger to feel slightly warm. Ensure it is placed in a well-ventilated area. If it becomes excessively hot or emits smoke/odor, unplug immediately and contact support.

8. SPECIFICATIONS

- **Model:** Power Charger for G700 and P700 Electric Mops
- **Input Voltage:** 100-240V AC, 50/60Hz (Standard)
- **Output:** (Specific output voltage/current not provided, refer to charger label)
- **Package Dimensions:** 3.58 x 2.4 x 1.61 inches
- **Item Weight:** 2.39 ounces
- **Manufacturer:** VMAI
- **Batteries Required:** No (for the charger itself)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your VMAI electric mop or visit the official VMAI website. You may also contact VMAI customer service directly for assistance with your power charger.

VMAI Customer Service: Please refer to your product packaging or the VMAI official website for current contact details.