

BaBylissPRO BP331SUC

BaBylissPRO Porcelain Ceramic Triple Barrel Waver (Model BP331SUC) Instruction Manual

1. INTRODUCTION AND PRODUCT OVERVIEW

The BaBylissPRO Porcelain Ceramic Triple Barrel Waver (Model BP331SUC) is designed to create natural-looking waves in hair. This manual provides essential information for safe and effective use, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Image 1.1: The BaBylissPRO Porcelain Ceramic Triple Barrel Waver.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Do not pull, twist, or wrap line cord around appliance.
 - This appliance should not be used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not

recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the appliance on any surface while it is operating.
- Do not touch hot surfaces of the appliance. Use handles or knobs.
- Before plugging in, read the information about dual voltage contained in the “OPERATING INSTRUCTIONS” section of this manual.

3. PRODUCT FEATURES

The BaBylissPRO Porcelain Ceramic Triple Barrel Waver is engineered with advanced technology for superior styling results.

- **Porcelain Ceramic Technology:** Creates a shiny, smooth finish and ensures even heat distribution to reduce hot spots, protecting hair from damage.
- **Triple-Barrel Design:** Unique design for creating perfect, natural-looking waves.
- **Adjustable Heat Settings:** Features 30 heat settings, reaching up to 430°F, suitable for all hair types.
- **LED Indicator:** An LED light indicates when the iron is ready for use.
- **Swivel Cord:** Equipped with an 8 ft swivel cord for flexible and tangle-free styling.



Image 3.1: Key features of the BaBylissPRO Triple Barrel Waver, including barrel sizes, LED indicator, heat settings, and swivel cord.

4. SETUP

Before first use, ensure the appliance is properly set up.

1. **Unpack:** Carefully remove the waver from its packaging and discard all packing materials.
2. **Inspect:** Check the appliance and cord for any signs of damage. Do not use if damaged.

3. **Power Connection:** Ensure the power cord is untangled and plug the waver into a suitable electrical outlet. This appliance is designed for 120V AC.

5. OPERATING INSTRUCTIONS

Follow these steps to achieve desired waves with your BaBylissPRO Triple Barrel Waver.

1. **Prepare Hair:** Ensure your hair is clean, completely dry, and free of tangles. For best results and protection, apply a heat protectant spray.
2. **Select Temperature:** Turn the waver ON and select the desired heat setting using the temperature dial. Refer to the 'Temperature Styling Gauge' below for guidance based on your hair type.
3. **Heat Up:** Allow the waver to heat up. The LED indicator light will signal when the appliance has reached the selected temperature and is ready for use.
4. **Section Hair:** Divide your hair into manageable sections, typically 1-2 inches wide.
5. **Create Waves:** Starting from the root or mid-shaft, place a section of hair between the barrels and gently clamp down for a few seconds (3-5 seconds, depending on hair type and desired wave intensity).
6. **Continue Styling:** Release the clamp and move the waver down the same section of hair, overlapping the last wave to create a continuous pattern. Repeat this process for all sections of hair.
7. **Cool Down:** Allow the waves to cool completely before touching or styling further to set the shape.
8. **Finish:** Once cooled, gently separate waves with your fingers or a wide-tooth comb for a softer look, or leave as is for more defined waves.

BaBylissPRO®

Unique **triple-barrel** design
for perfect beach waves.



Image 5.1: A user demonstrating the application of the triple barrel waver to create waves.

Temperature Styling Gauge

Temperature Settings	Hair Type
230°F – 280°F	Very fine hair
281°F – 310°F	Easy-to-curl hair
311°F – 365°F	Textured hair
366°F – 400°F	Curly hair
401°F – 430°F	Very thick hair

TEMPERATURE STYLING GAUGE	TEMPERATURE SETTINGS	HAIR TYPE
	230° F – 280° F	Very fine hair
	281° F – 310° F	Easy-to-curl hair
	311° F – 365° F	Textured hair
	366° F – 400° F	Curly hair
	401° F – 430° F	Very thick hair

Image 5.2: Recommended temperature settings for various hair types.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your waver.

- **Cleaning:** Always unplug the waver and allow it to cool completely before cleaning. Wipe the barrels and exterior with a damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the waver in a dry, safe place, away from moisture and out of reach of children. Do not wrap the power cord around the appliance, as this can damage the cord.
- **Cord Care:** Regularly inspect the power cord for any damage. If the cord becomes twisted, untwist it before use.

7. TROUBLESHOOTING

If you encounter issues with your waver, refer to the following common problems and solutions.

- **Waver Not Heating:**
 - Ensure the waver is securely plugged into a functional electrical outlet.
 - Check if the power switch is in the 'ON' position.
 - If the issue persists, contact customer support.
- **Hair Not Waving Effectively:**
 - Ensure your hair is completely dry before styling.
 - Verify that you are using an appropriate heat setting for your hair type (refer to the Temperature Styling Gauge).
 - Hold the waver in place for a sufficient amount of time (3-5 seconds).
- **Waver Turning Off During Use:**
 - Check the power connection to ensure it is not loose.
 - Ensure you are not accidentally pressing the power button during styling, especially if holding the handle close to the controls.

8. SPECIFICATIONS

Model Number	BP331SUC
---------------------	----------

Product Dimensions	3.63 x 15.25 x 7 inches
Weight	1.79 Pounds
Material	Porcelain Ceramic
Maximum Heat	430°F
Cord Length	8 ft swivel cord
UPC	074108451712

9. WARRANTY AND SUPPORT

This BaBylissPRO product is backed by a **3-year warranty**, reflecting our commitment to quality and durability. For warranty claims, technical assistance, or any product-related inquiries, please refer to the contact information provided with your purchase or visit the official BaBylissPRO website.



The definitive professional brand

At BaBylissPRO, we're committed to creating innovative, high-performance, professional styling tools and have spent the last 50 years doing just that. We pride ourselves on versatile tools that are crafted with care and built to last. Chosen and preferred by hairdressers, barbers, and their clients again and again, BaBylissPRO tools deliver the results you want and the professional standard you can depend on.

3 YEAR WARRANTY

Image 9.1: BaBylissPRO brand commitment and 3-year warranty information.