

[manuals.plus](#) /› [YAOHUIMI](#) /› [YAOHUIMI Replacement Remote Control User Manual for AKPH10CR61 and Compatible Window Air Conditioners](#)**YAOHUIMI A420210720-49**

# YAOHUIMI Replacement Remote Control User Manual

Model: A420210720-49

## 1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your YAOHUIMI replacement remote control. This remote is designed to be compatible with various window air conditioner models, including AKPH10CR61, WPPH10CR5, AKPH08CR61, AKPH12CR61, AKPH08CR81, AKPH10CR81, WPPH08CR8N, and KPPH10CR71N. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

## 2. PRODUCT OVERVIEW

The remote control features an ergonomic design for comfortable handling and a clear LCD display for easy viewing of settings. It operates on two AAA batteries (not included).



Image 1: YAOHUIMI Replacement Remote Control and two AAA batteries. The remote features a green LCD screen displaying "CLOCK 12:02" and "SET TEMP. 75°F", along with a "FAN SPEED" indicator. Below the screen are various control buttons.

### Button Functions:

- **Power Button ( )**: Turns the air conditioner ON or OFF.
- **MODE**: Cycles through operating modes (e.g., Cool, Dry, Fan, Auto).
- **FAN**: Adjusts fan speed (e.g., Low, Medium, High, Auto).
- **ENERGY SAVER**: Activates or deactivates energy-saving mode.
- **TIMER**: Sets the ON/OFF timer for the air conditioner.
- **Temperature Adjustment (+ / -)**: Increases or decreases the set temperature.
- **CANCEL**: Cancels timer settings or other active functions.
- **FOLLOW ME**: Activates the Follow Me function, which senses the temperature at the remote's location.
- **RESET**: Resets certain settings or functions.

- **LOCK:** Locks the remote control buttons to prevent accidental changes.
- **CLOCK:** Sets the current time on the remote's display.
- **SLEEP:** Activates or deactivates sleep mode for comfortable night operation.
- **LED:** Controls the display light on the air conditioner unit.

### 3. SETUP

---

#### Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.
5. *Note: If the remote does not respond, check battery orientation or replace with fresh batteries.*

### 4. OPERATING INSTRUCTIONS

---

#### Basic Operation:

- **Turning On/Off:** Press the **Power** button once to turn the unit on, and again to turn it off.
- **Setting Temperature:** Use the **+** and **-** buttons to adjust the desired room temperature. The temperature range is typically between 62°F (17°C) and 86°F (30°C).
- **Changing Mode:** Press the **MODE** button repeatedly to cycle through available operating modes: Auto, Cool, Dry, Fan.
- **Adjusting Fan Speed:** Press the **FAN** button repeatedly to select desired fan speed: Auto, Low, Medium, High.

#### Advanced Functions:

- **TIMER Function:** Press **TIMER** to set the auto-on or auto-off time. Use **+** / **-** to adjust the time, then press **TIMER** again to confirm. Press **CANCEL** to clear the timer.
- **SLEEP Mode:** Press **SLEEP** to activate a quiet, energy-efficient mode that gradually adjusts temperature for comfortable sleep. Press again to deactivate.
- **ENERGY SAVER Mode:** Press **ENERGY SAVER** to enable a function that cycles the compressor on and off to save energy once the desired temperature is reached.
- **FOLLOW ME Function:** Press **FOLLOW ME** to activate. The remote will then act as a thermostat, sensing the temperature at its location and adjusting the air conditioner accordingly. Press again to deactivate.
- **CLOCK Setting:** Press **CLOCK**, then use **+** / **-** to set the current time. Press **CLOCK** again to confirm.
- **LOCK Function:** Press **LOCK** to disable all buttons on the remote, preventing accidental changes. Press again to unlock.
- **LED Control:** Press **LED** to turn the air conditioner's display light ON or OFF.
- **RESET Function:** In case of unusual operation or to clear all settings, press the **RESET** button (often a small recessed button requiring a pointed object like a paperclip).

### 5. MAINTENANCE

---

#### Cleaning the Remote Control:

- Wipe the remote control with a soft, dry cloth.

- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the remote's surface or internal components.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit.
Display is dim or blank	Low battery power.	Replace batteries.
AC unit not responding to specific commands	Remote in LOCK mode. AC unit not compatible with all functions.	Press the <b>LOCK</b> button to unlock the remote. Refer to your AC unit's manual for supported functions.

## 7. SPECIFICATIONS

- Model Number:** A420210720-49
- Brand:** YAOHUIMI
- Compatible Devices:** AKPH08CR61, AKPH08CR81, AKPH10CR61, AKPH10CR81, AKPH12CR61, KPPH10CR71N, WPPH08CR8N, WPPH10CR5 Window Air Conditioners
- Power Source:** 2 x AAA Batteries (not included)
- Special Feature:** Ergonomic design

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.