

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher T11/1 Classic Dry Vacuum Cleaner User Manual

Kärcher T11/1 Classic (1.527-197.0)

Kärcher T11/1 Classic Dry Vacuum Cleaner User Manual

Model: T11/1 Classic (1.527-197.0)

1. INTRODUCTION

Thank you for choosing the Kärcher T11/1 Classic Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

2. PRODUCT OVERVIEW AND COMPONENTS

The Kärcher T11/1 Classic is a powerful and quiet dry vacuum cleaner designed for professional use in noise-sensitive areas. It features a robust design and efficient filtration, including a HEPA filter option.

2.1 Included Components

- Vacuum Cleaner T 11/1 Classic unit
- Suction Hose
- Suction Pipe
- Motor Protective Filter
- Filter Bag
- Floor Nozzle
- Permanent Filter Basket

2.2 Product Views



Figure 2.1: Kärcher T11/1 Classic Dry Vacuum Cleaner, showing the main unit, suction hose, and floor nozzle.



Figure 2.2: Top-down view of the vacuum cleaner with the lid open, revealing the filter bag compartment.



Figure 2.3: Close-up view of the vacuum cleaner with the HEPA filter assembly visible at the top.

3. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner to pick up liquids, flammable or combustible materials, or hot ashes. This is a dry vacuum cleaner only.
- Ensure the power cord is not damaged before use. Do not operate the appliance with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug from outlet when not in use and before servicing.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

4. SETUP AND INITIAL ASSEMBLY

Follow these steps to assemble your Kärcher T11/1 Classic vacuum cleaner:

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all listed components in Section 2.1 are present.
2. **Attach Suction Hose:** Insert the end of the suction hose into the inlet port on the front of the vacuum cleaner until it clicks securely into place.
3. **Assemble Suction Pipe:** Connect the two sections of the suction pipe together. Then, attach the assembled suction pipe to the handle end of the suction hose.
4. **Attach Floor Nozzle:** Securely attach the floor nozzle to the end of the suction pipe. Ensure it is firmly seated.
5. **Install Filter Bag:** Open the lid of the vacuum cleaner. Place a new filter bag into the designated compartment, ensuring it is properly seated around the inlet. Close the lid securely.
6. **Check Filters:** Verify that the motor protective filter and permanent filter basket are correctly installed before operation.

5. OPERATING INSTRUCTIONS

The Kärcher T11/1 Classic is designed for efficient dry vacuuming with low noise levels (61 dB), making it suitable for prolonged use and work in noise-sensitive environments.

5.1 Powering On/Off

- **Connect to Power:** Plug the power cord into a suitable electrical outlet. The long yellow power cord provides a wide range of action.
- **Turn On:** Press the power button (Controller Type: Push Button) located on the unit to start the vacuum cleaner.
- **Turn Off:** Press the power button again to switch off the vacuum cleaner.

5.2 Using the Vacuum Cleaner

- Guide the floor nozzle over the surface to be cleaned. The floor nozzle is suitable for both hard floors and carpets.
- For optimal performance, move the nozzle slowly and steadily.
- The vacuum operates at a single speed, optimized for effective cleaning.

5.3 Application Examples



Figure 5.1: The Kärcher T11/1 Classic in use, demonstrating its suitability for cleaning large areas such as classrooms or event spaces.

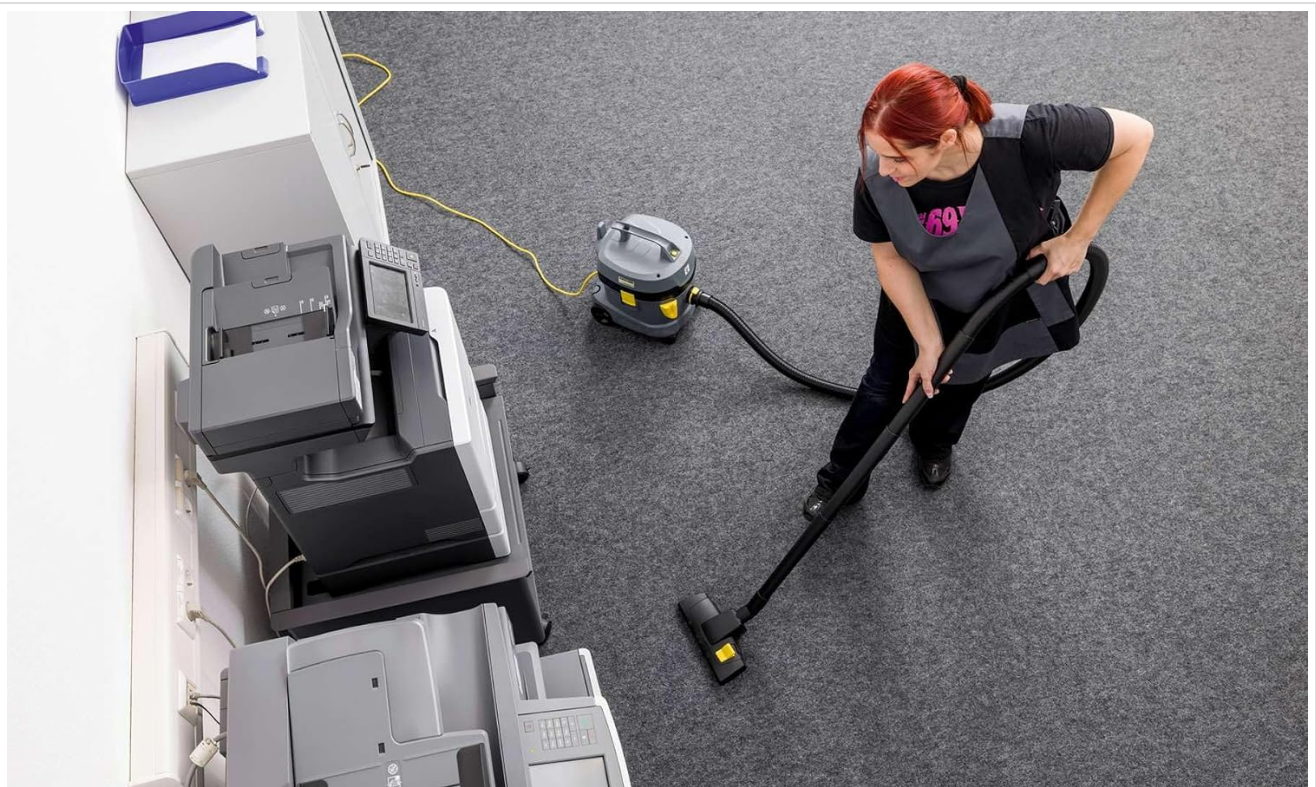


Figure 5.2: The vacuum cleaner being used to clean office carpeted areas, highlighting its maneuverability and compact design.



Figure 5.3: An operator using the Kärcher T11/1 Classic in an office environment, showcasing its quiet operation for minimal disruption.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

6.1 Replacing the Filter Bag

The filter bag should be replaced when it is full or when suction power noticeably decreases.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the lid of the vacuum cleaner.
3. Carefully remove the full filter bag and dispose of it according to local regulations.
4. Insert a new Kärcher original filter bag, ensuring it fits correctly into the holder.
5. Close the lid securely.

6.2 Cleaning Filters

The motor protective filter and the HEPA filter (if installed) should be checked regularly and cleaned or replaced as needed.

- **Motor Protective Filter:** Remove and gently tap out dust. If heavily soiled, replace it.
- **HEPA Filter:** The HEPA filter is designed for high-efficiency particulate air filtration. It is generally not washable and should be replaced when visibly dirty or when suction performance is affected. Refer to the filter's specific instructions for replacement intervals.

6.3 Cleaning the Appliance

- Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
- Ensure all parts are dry before storing the appliance.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Kärcher T11/1 Classic.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet. Check the circuit breaker.
Low or no suction power.	Filter bag is full.	Replace the filter bag (see Section 6.1).
	Hose or nozzle is blocked.	Check the hose, suction pipe, and floor nozzle for obstructions and remove them.
	Filters are dirty or clogged.	Clean or replace the motor protective filter and HEPA filter (see Section 6.2).
Unusual noise during operation.	Foreign object in the fan or motor.	Immediately turn off and unplug the unit. Inspect for foreign objects. If the noise persists, contact Kärcher service.
	Lid not properly closed.	Ensure the lid is securely latched.

If the problem persists after attempting these solutions, please contact Kärcher customer support.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	Kärcher
Model Name	T 11/1 Classic
Item Model Number	1.527-197.0
Special Feature	HEPA (filter option)
Filter Type	Cartridge
Is Cordless?	No
Capacity	11 Liters
Wattage	850 watts
Maximum Suction	7.58 Inches
Recommended Uses For Product	Prolonged use, work in noise-sensitive areas and at night
Form Factor	Upright
Color	Anthracite

Specification	Value
Product Dimensions	15.43"L x 14.96"W x 14.84"H
Noise Level	61 dB
Amperage	35 Amps
Manufacturer	ACER
Number of Items	1
Controller Type	Push Button
Motor Horsepower	2 Horsepower
Control Method	Touch
Style	Modern
Connectivity Technology	HEPA
Portable	Yes
Number of Handles	1
Number of Power Levels	2
Number of Wheels	4
Indoor/Outdoor Usage	Indoor
Finish Type	Matte
Global Trade Identification Number	04054278731131
Item Weight	11.33 pounds
Language	German (Product documentation may vary by region)
ASIN	B099X2NQQS

9. WARRANTY AND SUPPORT

Kärcher products are built to high-quality standards and come with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Kärcher website.

9.1 Customer Support

If you have any questions, require technical assistance, or need to order spare parts, please contact Kärcher customer support. You can find contact information on the official Kärcher website or through your local Kärcher dealer.

For online resources, visit the [Kärcher Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099X2NQQS>

More documents and user manuals: <https://manuals.plus/>