



[Manuals.plus](#) /

> [Ninja](#) /

> Ninja Foodi 8-in-1 XL Pro Air Fry Oven DT200 Instruction Manual

Ninja DT200

Ninja Foodi 8-in-1 XL Pro Air Fry Oven DT200 Instruction Manual

Model: DT200 | Brand: Ninja

INTRODUCTION

Welcome to the instruction manual for your Ninja Foodi 8-in-1 XL Pro Air Fry Oven, Model DT200. This versatile countertop convection oven is designed to provide a wide range of cooking functions, including air frying, roasting, baking, and more, with advanced features for efficient and even cooking. Please read this manual thoroughly before operating your appliance to ensure safe and optimal performance.



Figure 1: Ninja Foodi 8-in-1 XL Pro Air Fry Oven DT200, showing a whole roasted chicken and air-fried vegetables inside.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury, or damage. This includes:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the appliance is placed on a stable, level, heat-resistant surface.

WHAT'S INCLUDED

Your Ninja Foodi 8-in-1 XL Pro Air Fry Oven DT200 comes with the following components:

- Main Oven Unit
- Air Fry Basket
- Roast Tray
- Wire Rack (2)
- Crumb Tray
- 15 Inspiration Recipe Guide

NINJA FOODI 8-IN-1 XL PRO AIR OVEN DT200

DT200

NINJA
Foodi
XL PRO AIR
OVEN

- ✓ Fits a 5-lb chicken and a sheet pan of vegetables
- ✓ 8 functions
- ✓ Stainless steel finish
- ✓ 5 accessories included
- ✓ 15 Inspiration Recipe Guide included



Figure 2: The Ninja Foodi 8-in-1 XL Pro Air Fry Oven DT200 and its five included accessories: air fry basket, two wire racks, roast tray, and crumb tray.

SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories from the oven.
2. **Clean:** Wash all accessories (air fry basket, roast tray, wire racks, crumb tray) in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
3. **Placement:** Place the oven on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of space on all sides of the oven for proper air circulation.
4. **Power:** Plug the power cord into a grounded electrical outlet.
5. **First Use (Burn-in):** Before first use, run the oven on "Air Roast" at 400°F (200°C) for 20 minutes without any food inside. This helps to burn off any manufacturing residues and odors. A slight odor is normal during this process.

OPERATING INSTRUCTIONS

The Ninja Foodi 8-in-1 XL Pro Air Fry Oven offers 8 versatile cooking functions and features designed for optimal performance.

Cooking Functions

Select your desired cooking function using the control panel. The available functions are:

- **Whole Roast:** Ideal for large cuts of meat, ensuring even cooking.
- **Air Roast:** For quick and crispy roasting.
- **Air Fry:** Achieve crispy results with up to 75% less fat than traditional frying methods.
- **Bake:** Perfect for cakes, cookies, and other baked goods.
- **Broil:** For quick browning and melting.
- **Toast:** For perfectly toasted bread and bagels.
- **Bagel:** Optimized for toasting bagels.
- **Pizza:** Specifically designed for cooking pizzas.

8 functions to elevate your cooking

- **Whole Roast**
- **Air Fry**
- **Air Roast**
- **Bake**
- **Broil**
- **Toast**
- **Bagel**
- **Pizza**



Figure 3: Visual representation of the 8 cooking functions available on the Ninja Foodi XL Pro Air Fry Oven.

Key Features for Enhanced Cooking

- **True Surround Convection:** Up to 10X the convection power compared to a traditional full-size convection oven, leading to faster, crispier, and juicier results. This is achieved through a high-velocity fan, a rear heat source, and surround airflow.

True Surround

CONVECTION™

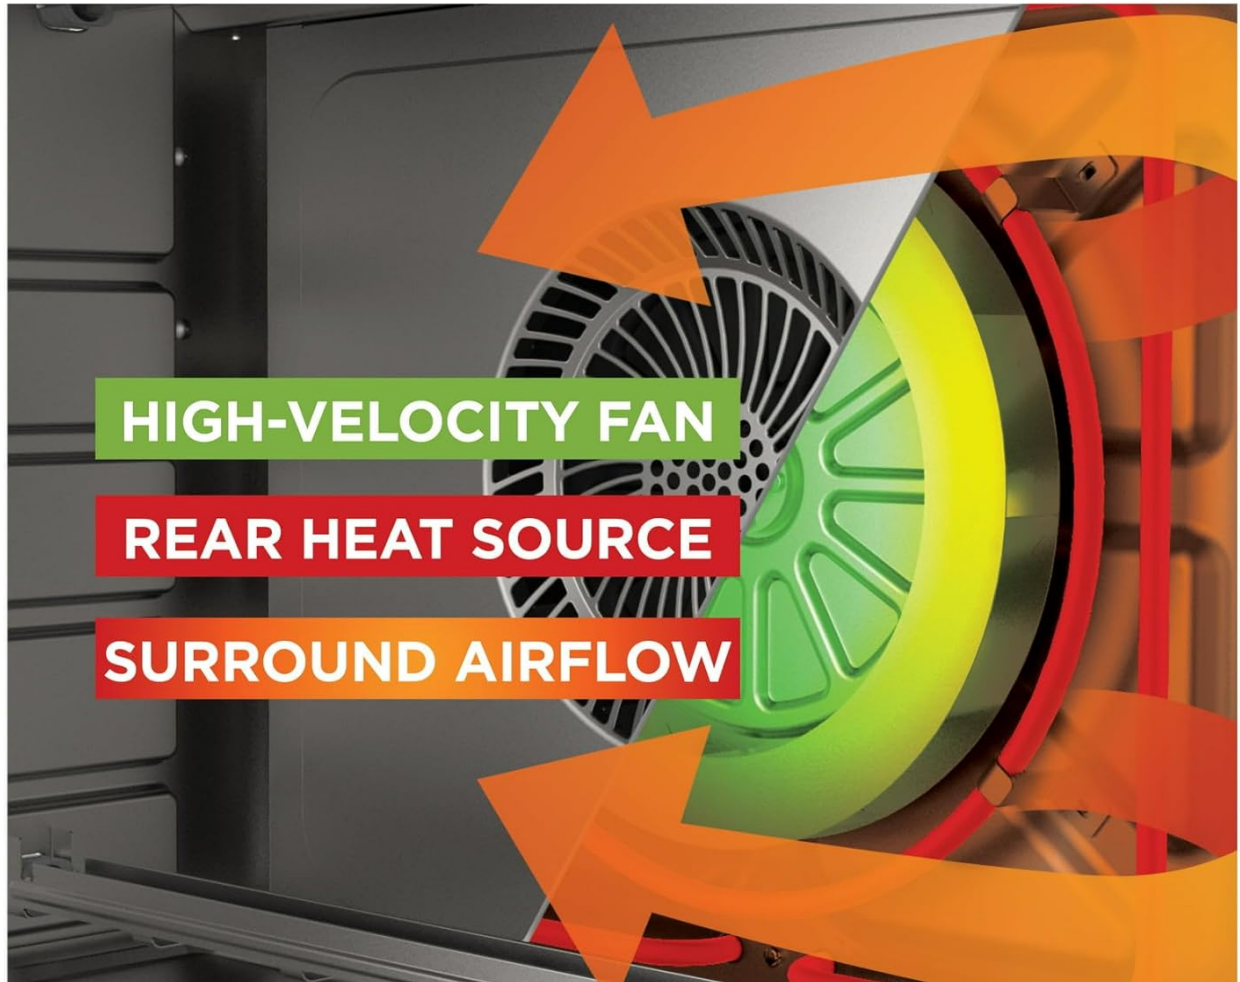


Figure 4: Diagram illustrating the True Surround Convection technology with high-velocity fan, rear heat source, and surround airflow.

- **360° Whole Roast:** Evenly roasts all sides of food like chicken or beef without the need to rotate your pan.
- **Digital Display Handle:** The optimal oven rack positions will illuminate based on the selected function. When the door is open, display settings freeze to prevent accidental changes.
- **2-Level Even Cooking:** Cook on two rack levels simultaneously without sacrificing even results. This allows for preparing family-sized meals, such as a 5-lb chicken and a sheet pan of vegetables, or two 12-inch pizzas. No swapping or rotating of pans is required.



2-LEVEL EVEN COOKING
No swapping or rotating of pans required.

Figure 5: The oven demonstrating 2-level cooking with two 12-inch pizzas baking simultaneously.



FAMILY-SIZED MEALS

Fit a 5-lb chicken and an air fry basket of vegetables on separate rack levels, or cook two 12" pizzas.

Figure 6: The oven accommodating a 5-lb chicken and an air fry basket of vegetables on separate rack levels.

- **Faster Cooking:** Achieve up to 30% faster cook times compared to a full-sized, traditional convection oven.



FASTER COOKING

Achieve up to 30% faster cook times than a full-sized, traditional convection oven.

Figure 7: French fries and chicken wings being cooked simultaneously, illustrating the faster cooking capability.

Control Panel Overview

The control panel features intuitive buttons and a digital display for easy operation.

Get to know this Ninja® Foodi™ XL Pro Air Oven



DT200

Figure 8: Detailed diagram of the Ninja Foodi XL Pro Air Oven's control panel, highlighting features like the Digital Display Handle, 8 Cooking Functions, Toast Darkness Selector, Digital Rack Guide, Surround Airflow, Rear Heat Source, Infrared Heating Elements, and Removable Crumb Tray.

- **Power Button:** Turns the oven on/off.
- **Function Selector:** Cycles through the 8 cooking functions.
- **Time/Slices Buttons:** Adjust cooking time or toast slices.
- **Temperature/Shade Buttons:** Adjust cooking temperature or toast shade.
- **Rack Level Indicator:** Illuminates optimal rack positions for selected function.
- **Start/Stop Button:** Begins or ends a cooking cycle.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your Ninja Foodi Oven.

1. **Always Unplug:** Ensure the oven is unplugged from the power outlet and completely cooled before cleaning.

2. **Crumb Tray:** The removable crumb tray slides out for easy cleaning of crumbs and small spills. Empty and clean the crumb tray after each use to prevent buildup.
3. **Interior:** Wipe the interior walls with a damp cloth and mild dish soap. For stubborn stains, use a non-abrasive cleaner. Do not use harsh abrasives or metal scouring pads.
4. **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the oven in water.
5. **Accessories:** Wash the air fry basket, roast tray, and wire racks in warm, soapy water. They are also dishwasher safe.

TROUBLESHOOTING

If you encounter any issues with your Ninja Foodi Oven, please refer to the following common problems and solutions:

- **Oven not turning on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check your household circuit breaker.
- **Food not cooking evenly:**
 - Ensure proper rack placement as indicated by the Digital Rack Guide.
 - Do not overcrowd the oven; cook in smaller batches if necessary.
 - Preheat the oven fully before adding food.
- **Excessive smoke:**
 - Ensure the crumb tray is clean and free of food debris.
 - Excess oil or grease on accessories can cause smoke; clean thoroughly.
- **Digital display not working:**
 - Unplug the unit, wait a few minutes, and plug it back in to reset.

For issues not covered here, please contact Ninja Customer Support.

SPECIFICATIONS

Feature	Detail
Brand	Ninja
Model Name	DT200
Product Dimensions	17.09"D x 20.22"W x 13.34"H
Oven Cavity Dimensions	14.47"W x 12.72"D x 11.08"H

Item Weight	34.2 pounds
Control Type	Knob
Door Style	Dropdown Door
Door Material Type	Tempered Glass
Power Source	Corded Electric
Number of Shelves	2
Special Features	Nonslip Base, Digital Control and Display, Tempered Glass Door, Extra-Large Countertop Oven Capacity, Cool Touch Handle



XL CAPACITY

Oven cavity that measures 14.47" W x 12.72" D x 11.08" H allows for easy, 2-level meal making.

Figure 9: The XL capacity of the oven, measuring 14.47" W x 12.72" D x 11.08" H, designed for easy 2-level meal making.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Ninja website. If you require technical support or have questions about your Ninja Foodi 8-in-1 XL Pro Air Fry Oven, please contact Ninja Customer Service through their official channels.