Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech POP Keys Mechanical Wireless Keyboard User Manual Model 920-010707

Logitech 920-010707

Logitech POP Keys Mechanical Wireless Keyboard User Manual - Model 920-010707

Comprehensive instructions for setup, operation, and maintenance of your Logitech POP Keys keyboard.

Introduction

This manual provides detailed instructions for the Logitech POP Keys Mechanical Wireless Keyboard, Model 920-010707. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience. The keyboard features mechanical keys, customizable emoji keys, and multi-device connectivity via Bluetooth or the Logi Bolt USB receiver.

PRODUCT OVERVIEW

The Logitech POP Keys keyboard is designed for a satisfying typing experience with its mechanical keys. It offers a compact form factor, making it suitable for various workspaces. Key features include:

- Mechanical Keys: Provides tactile feedback and a distinct "click, clack, pop" sound.
- Customizable Emoji Keys: Includes 8 swappable emoji keycaps (4 pre-installed, 4 extra) and 1 emoji menu key, customizable via Logitech Options software.
- Multi-Device Connectivity: Connects to up to 3 devices simultaneously using Bluetooth or the Logi Bolt USB receiver.
- Compact Design: Saves desktop space and promotes better body posture.
- Long Battery Life: Up to 3 years with 2 AAA batteries.



Figure 1: Logitech POP Keys Mechanical Wireless Keyboard (Blast Yellow). This image displays the full keyboard layout, highlighting the round keycaps, function keys, and the dedicated emoji keys on the right side.

SETUP

1. Battery Installation

The keyboard requires two AAA batteries. The battery compartment is located on the underside of the keyboard. Ensure correct polarity when inserting the batteries.

2. Connectivity Options

The POP Keys keyboard offers two ways to connect to your devices:

a. Bluetooth Connection

- 1. Turn on the keyboard using the power switch located on the side.
- 2. Press and hold one of the Easy-Switch keys (F1, F2, or F3) for 3 seconds until the LED light above the key starts blinking rapidly. This indicates pairing mode.
- 3. On your device (computer, laptop, tablet, or phone), navigate to Bluetooth settings and select "Logi POP Keys" from the list of available devices.
- 4. Follow any on-screen prompts to complete the pairing process. The LED light will turn solid for 5 seconds to confirm a successful connection.

b. Logi Bolt USB Receiver Connection

The Logi Bolt USB receiver provides a secure, high-performance wireless connection.

- 1. Locate the Logi Bolt USB receiver, typically stored in the battery compartment or included separately.
- 2. Plug the Logi Bolt USB receiver into an available USB port on your computer.
- 3. Turn on the keyboard using the power switch. The keyboard should automatically connect to the receiver.

3. Software Installation (Logitech Options)

To unlock full customization options for your emoji keys and other shortcuts, download and install the Logitech Options software from the official Logitech website. This software is available for Windows and macOS.

OPERATING INSTRUCTIONS

1. Basic Typing

The keyboard functions like a standard QWERTY keyboard. The round, scooped keycaps are designed for

comfortable typing.

2. Function Keys (F1-F12)

The top row of keys (F1-F12) serves dual purposes. By default, they perform special functions. To use them as standard F-keys, press the **Fn** key simultaneously with the desired F-key.

- F1-F3: Easy-Switch keys for connecting to multiple devices.
- F4: Screen Snip (screenshot).
- F5: Mic Mute.
- F6-F12: Media Keys (play/pause, volume up/down, etc.) and Voice-to-Text (dictation).

3. Customizable Emoji Keys

The dedicated emoji keys on the right side of the keyboard can be customized using the Logitech Options software. You can assign different emojis or even other shortcuts to these keys.

To change emoji keycaps:

- 1. Gently pull the existing emoji keycap upwards to remove it.
- 2. Align the desired new emoji keycap with the switch and press down firmly until it clicks into place.

Your browser does not support the video tag.

Video 1: Logitech POP Keys and POP Mouse in Blast Yellow. This short video provides a visual overview of the Logitech POP Keys keyboard and matching POP Mouse, showcasing their design and color.

Your browser does not support the video tag.

Video 2: Logitech POP Mouse + POP Keys Combo. This video demonstrates the Logitech POP Keys keyboard and POP Mouse working together, highlighting their aesthetic and functional synergy.

MAINTENANCE

1. Cleaning the Keyboard

To clean your POP Keys keyboard:

- · Turn off the keyboard before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- For deeper cleaning, keycaps can be carefully removed. Use a keycap puller (not included) or gently pry them off. Clean the keycaps and the keyboard base, then reattach the keycaps.
- · Avoid excessive moisture or harsh chemicals.

2. Battery Replacement

When the battery indicator light signals low power, replace the two AAA batteries. Open the battery compartment on the underside of the keyboard, remove the old batteries, and insert new ones, ensuring correct polarity.

TROUBLESHOOTING

Keyboard not connecting:

- Ensure the keyboard is powered on and batteries are correctly installed.
- Verify Bluetooth is enabled on your device and the keyboard is in pairing mode (blinking LED on F1/F2/F3).
- If using the Logi Bolt receiver, ensure it is securely plugged into a USB port.

• Try restarting your device and the keyboard.

· Keys not responding:

- Check battery level and replace if necessary.
- Ensure the keyboard is connected to the correct device (check Easy-Switch key LED).
- Clean under the keycaps if debris is suspected.

· Customization issues:

- Ensure Logitech Options software is installed and up-to-date.
- Verify the keyboard is recognized by the software.

SPECIFICATIONS

Brand	Logitech
Model Number	920-010707
Connectivity	Bluetooth, Logi Bolt USB receiver
Keyboard Type	Mechanical
Switches	Brown, tactile
Battery	2 x AAA batteries (up to 3 years life)
Wireless Range	32.81 ft (10 m)
Dimensions (LxWxH)	12.65 x 5.45 x 1.4 inches (321.2 x 138.47 x 35.4 mm)
Weight (incl. batteries)	1.72 pounds (779 g)
Material	Plastic
Operating System Compatibility	Windows 10+, macOS 10.15+, iPadOS 14+, iOS 14+, Chrome OS, Android 8+
Special Features	Hotkeys, Media Keys, Customizable Emoji Keys

WARRANTY AND SUPPORT

For warranty information, technical support, and additional resources, please visit the official Logitech support website. You can find FAQs, driver downloads, and contact information for customer service.

Logitech Support Website: support.logi.com

Related Documents - 920-010707



Logitech POP Keys and POP Mouse Setup and Customization Guide

A comprehensive guide to setting up, pairing, and customizing your Logitech POP Keys keyboard and POP Mouse, including multi-device setup and emoji key customization.

