

## Manuals+


[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sapphire](#) /

› [Sapphire Nitro+ AMD Radeon RX 6600 XT 8GB GDDR6 Graphics Card User Manual \(Model 11309-01-20G\)](#)

## Sapphire 11309-01-20G

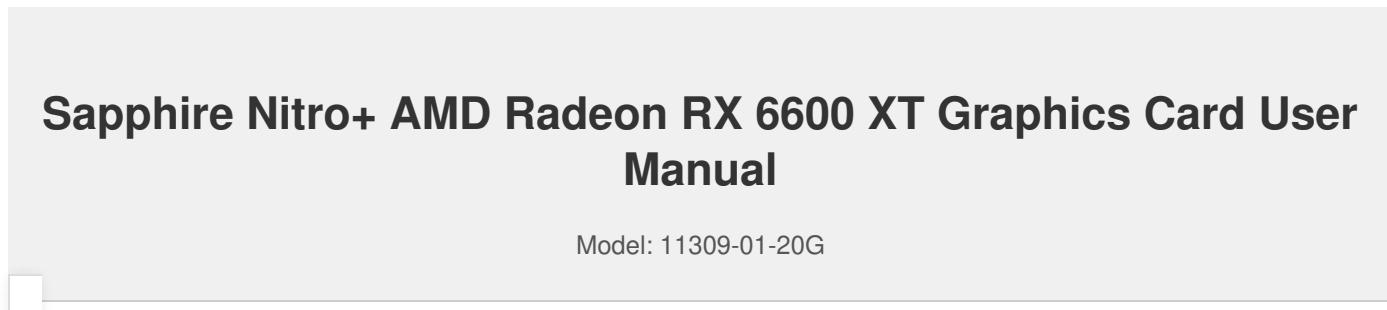

## INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Sapphire Nitro+ AMD Radeon RX 6600 XT 8GB GDDR6 Graphics Card. Please read this manual thoroughly before installing and using the product to ensure proper functionality and longevity.



Image: Front view of the Sapphire Nitro+ AMD Radeon RX 6600 XT Graphics Card, showcasing its dual-fan cooling system and sleek design.

## SETUP AND INSTALLATION

### 1. System Requirements

- **PCI Express Compatible Motherboard:** A motherboard with at least one PCI Express x16 slot.
- **Power Supply Unit (PSU):** A minimum 500W power supply is recommended. Ensure your PSU has at least one 8-pin PCIe power connector.
- **Operating System:** Windows 10 64-bit or later, or Linux 64-bit.
- **RAM:** 8GB system memory (16GB recommended).
- **CPU:** Compatible AMD or Intel processor.

## 2. Physical Installation

1. **Prepare Your System:** Power off your computer and unplug all cables. Open the computer case.
2. **Locate PCIe Slot:** Identify an available PCI Express x16 slot on your motherboard.
3. **Remove Slot Covers:** Remove the necessary expansion slot covers from the back of your computer case.
4. **Insert Graphics Card:** Carefully align the graphics card with the PCIe x16 slot and press it firmly until it is securely seated. Ensure the retention clip on the motherboard clicks into place.



Image: Angled view of the graphics card, illustrating its form factor for proper slot alignment during installation.

5. **Secure the Card:** Use screws to secure the graphics card to the computer case.
6. **Connect Power:** Connect the 8-pin PCIe power connector from your power supply to the corresponding port on the graphics card.



Image: Side view of the graphics card, highlighting the 8-pin power connector for proper power supply connection.

7. **Close Case and Reconnect:** Close your computer case, reconnect all cables, and power on your system.

### 3. Driver Installation

After booting into your operating system, you will need to install the latest AMD Radeon drivers. Visit the official AMD website ([www.amd.com/support](http://www.amd.com/support)) and download the drivers appropriate for your operating system and the Radeon RX 6600 XT. Follow the on-screen instructions to complete the installation.

## OPERATING INSTRUCTIONS

---

### 1. Connecting Displays

Connect your display(s) to the available video output ports on the graphics card (HDMI or DisplayPort). The card supports multiple displays. Ensure your display cables are securely connected.

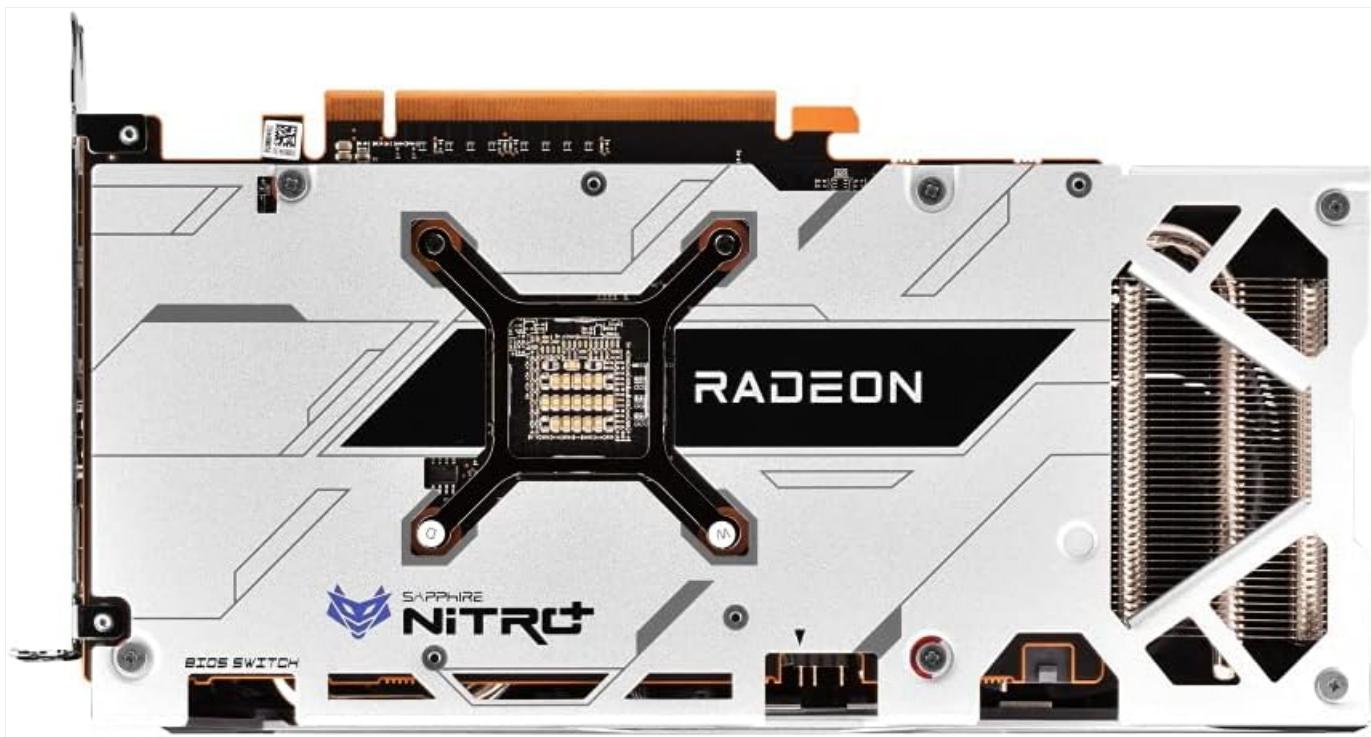


Image: Back view of the graphics card, illustrating the various display output ports (HDMI, DisplayPort) for connecting monitors.

## 2. Software Utilities

Sapphire provides the **Sapphire Nitro Trixx** software utility. This application allows you to monitor hardware health, adjust fan speeds, and customize the RGB lighting effects (Nitro Glow) on your graphics card. It can be downloaded from the official Sapphire website.

- **Fan Control:** Adjust fan curves for optimal cooling and noise levels.
- **Nitro Glow:** Customize LED lighting effects or turn them off.
- **Hardware Monitoring:** View real-time statistics for GPU temperature, clock speeds, and usage.

## MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your graphics card.

- **Cleaning:** Periodically clean dust from the fans and heatsink using compressed air. Ensure the system is powered off and unplugged before cleaning.
- **Driver Updates:** Keep your graphics drivers updated by regularly checking the AMD website for the latest versions. Driver updates often include performance improvements and bug fixes.
- **Thermal Management:** Monitor GPU temperatures using software like Sapphire Nitro Trixx. Ensure adequate airflow within your computer case to prevent overheating.

## TROUBLESHOOTING

If you encounter issues with your graphics card, refer to the following common troubleshooting steps:

- **No Display Output:**
  - Ensure the graphics card is fully seated in the PCIe slot.
  - Verify that the PCIe power connector is securely attached.
  - Check that the display cable is connected to the graphics card and the monitor.
  - Test with a different display cable or monitor if possible.

- **Driver Issues:**

- Perform a clean installation of the latest AMD drivers. Use a driver uninstaller utility (like DDU) to remove old drivers before installing new ones.
- Ensure your operating system is up to date.

- **Overheating:**

- Check for dust buildup on the fans and heatsink and clean if necessary.
- Ensure case fans are properly configured for optimal airflow.
- Monitor temperatures using Sapphire Nitro Trixx or other monitoring software.

- **System Instability/Crashes:**

- Verify your power supply meets the recommended wattage.
- Ensure all components are properly seated and connected.
- Run system stability tests to identify potential conflicts.

## SPECIFICATIONS

---

Key technical specifications for the Sapphire Nitro+ AMD Radeon RX 6600 XT Graphics Card (Model: 11309-01-20G):

Feature	Detail
Graphics Coprocessor	AMD Radeon RX 6600 XT
Brand	Sapphire
Graphics RAM Size	8 GB GDDR6
Video Output Interface	HDMI, DisplayPort
Item Model Number	11309-01-20G
Product Dimensions	11.22 x 6.5 x 3.31 inches
Item Weight	2 pounds
Manufacturer	SAPPHIRE

## WARRANTY AND SUPPORT

---

For information regarding product warranty, please refer to the warranty card included with your product or visit the official Sapphire website. For technical support, driver downloads, and further assistance, please visit the Sapphire support page:

**Sapphire Official Website:** [www.sapphiretech.com](http://www.sapphiretech.com)

**AMD Driver Support:** [www.amd.com/support](http://www.amd.com/support)

