

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Furologee](#) /

> [Furologee Vertical 4-Drawer Dresser Organizer with 3-Tier Wood Shelf Instruction Manual](#)

Furologee Vertical 4-Drawer Dresser Organizer

Furologee Vertical 4-Drawer Dresser Organizer with 3-Tier Wood Shelf

Model: Vertical 4-Drawer Dresser Organizer

INTRODUCTION

Thank you for choosing the Furologee Vertical 4-Drawer Dresser Organizer. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new storage unit. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: Two Furologee Vertical 4-Drawer Dresser Organizers with 3-tier wood shelves.

Your browser does not support the video tag.

Video: An overview of the Furologee Vertical 4-Drawer Dresser Organizer, showcasing its features and potential uses in various rooms.

SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity for shelves (40 lbs per shelf) and drawers. Overloading can cause instability and damage.
- **Anti-Tip Kit:** Always install the included anti-tip kit to prevent accidental tipping, especially in households with children or pets. Securely fasten the unit to a wall stud.
- **Stable Placement:** Place the dresser on a flat, level, and stable surface. Uneven surfaces can compromise stability.
- **Assembly:** Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as needed.
- **Children Safety:** Do not allow children to climb on or play with the dresser. Keep small parts away from children during assembly.



Image: Detailed view of the anti-tip kit, demonstrating how it secures the dresser to the wall for safety.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components (A, B, C, etc.)
- Wood Shelf Panels (Top, Middle, Bottom)
- Fabric Drawers (4 units)
- Drawer Handles (4 units)
- Adjustable Feet (4 units)
- Anti-Tip Kit
- Assembly Hardware (Screws, Allen Wrench)
- Instruction Manual

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your dresser organizer. It is recommended to assemble on a soft, clean surface to prevent scratches.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against the parts list in the package contents section to ensure everything is present.
2. **Assemble the Metal Frame:** Connect the vertical and horizontal metal frame components using the provided screws and Allen wrench. Ensure all connections are snug but do not overtighten initially.
3. **Install Wood Shelves:** Insert the wood shelf panels into the designated slots on the metal frame. Secure them with the appropriate fasteners. The top shelf and the two middle shelves should be installed as shown in the diagram.
4. **Prepare Fabric Drawers:** Unfold each fabric drawer and insert the bottom support panel to create a rigid structure. Attach the drawer handles to the front of each drawer using the provided screws.
5. **Insert Drawers:** Slide the assembled fabric drawers into their respective compartments within the metal frame. The two smaller drawers fit into the top section, and the two larger drawers fit into the lower sections.
6. **Attach Anti-Tip Kit:** Position the dresser in its desired location. Using the anti-tip kit, secure the unit to a wall stud following the instructions provided with the kit. This is a critical safety step.

7. **Adjust Leveling Feet:** Turn the adjustable feet at the bottom of the dresser to level the unit on uneven floors. This enhances stability and prevents wobbling.



Image: Step-by-step assembly diagram illustrating the construction of the metal frame and the installation of the wood shelves.



Image: Detail of the adjustable leveling feet, showing how to rotate them to achieve stability on uneven surfaces.

OPERATING INSTRUCTIONS

- **Drawer Use:** Gently pull the fabric drawers open and push them closed using the handles. Avoid forcing the drawers, as this can cause wear or damage.
- **Shelf Use:** Place items evenly on the wood shelves. Do not exceed the maximum weight capacity of 40 lbs per shelf.
- **Storage:** The fabric drawers are suitable for storing clothing, linens, toys, office supplies, and other household

items. The open shelves are ideal for displaying books, decorations, or frequently accessed items.



Image: The dresser with its fabric drawers open, demonstrating their capacity for storing different types of items.

MAINTENANCE

- **Cleaning:** Wipe the metal frame and wood shelves with a damp cloth. For the fabric drawers, spot clean with a mild detergent and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to maintain appearance.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Water Resistance:** The wood shelves feature a water-resistant surface. Promptly wipe up any spills to prevent damage.

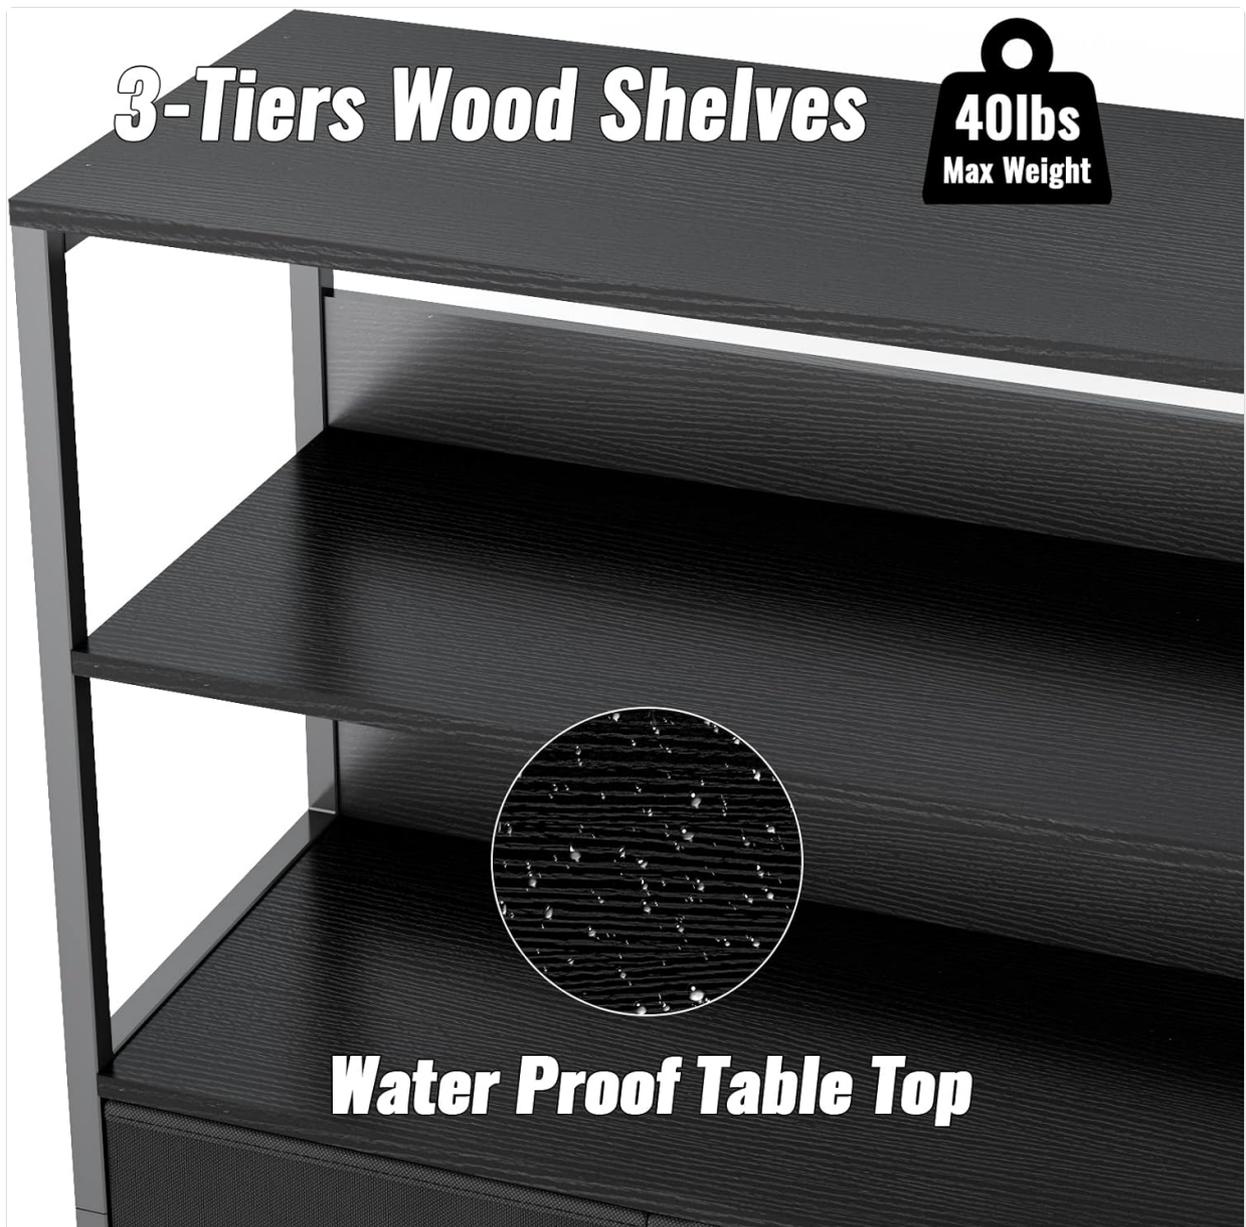


Image: A close-up view of the wood shelf, illustrating its water-resistant surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the unit. Ensure all screws are tightened securely.
Drawers do not slide smoothly or fit properly.	Drawer not fully assembled; frame misaligned; obstruction.	Ensure the bottom support panel is fully inserted into the fabric drawer. Check the metal frame for proper alignment. Remove any obstructions.
Missing parts or damaged components.	Packaging error or shipping damage.	Do not proceed with assembly. Contact customer support immediately for replacement parts.

SPECIFICATIONS

- **Brand:** Furologee
- **Model:** Vertical 4-Drawer Dresser Organizer
- **Product Dimensions:** 11.4"D x 22.8"W x 42.7"H
- **Room Type:** Bedroom, Living Room, Office, Entryway
- **Material:** Engineered Wood, Iron, Metal, Fabric
- **Finish Type:** Polished (Metal Frame)
- **Number of Drawers:** 4
- **Number of Shelves:** 3 (including top surface)
- **Item Weight:** Approximately 10 pounds
- **Assembly Required:** Yes
- **Product Care Instructions:** Wipe with Damp Cloth



Image: Dimensional drawing of the dresser organizer, indicating height, width, and depth measurements.

WARRANTY AND SUPPORT

For any questions, concerns, or to report missing/damaged parts, please contact Furologee customer support. Refer to your purchase documentation for specific warranty details and contact information. Please have your model number (Vertical 4-Drawer Dresser Organizer) and ASIN (B099YYRWL8) ready when contacting support.