

Lepro 3300007-2

Lepro LED Camping Lanterns User Manual



Model: 3300007-2

INTRODUCTION

Thank you for choosing the Lepro LED Camping Lantern. This versatile and portable lantern is designed to provide bright, reliable illumination for various outdoor activities, emergencies, and power outages. Its collapsible design makes it easy to store and carry, while its durable construction ensures long-lasting performance.



Two Lepre LED Camping Lanterns, showcasing their compact and ready-to-use form.

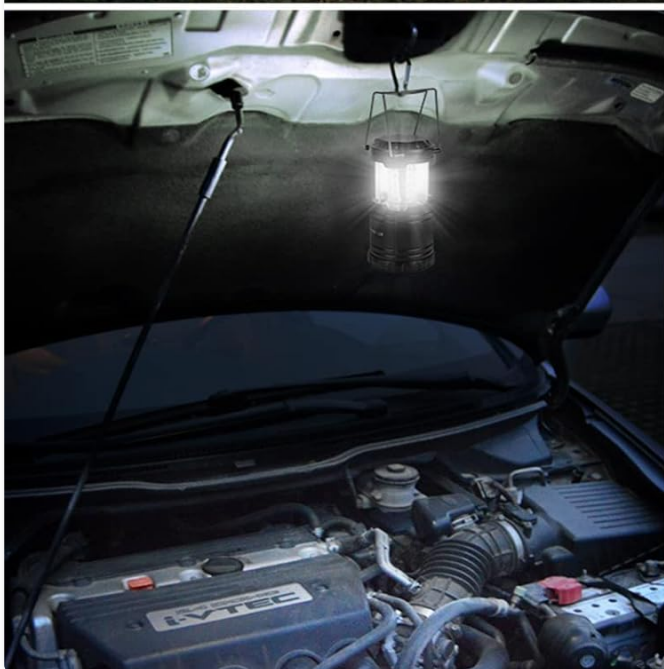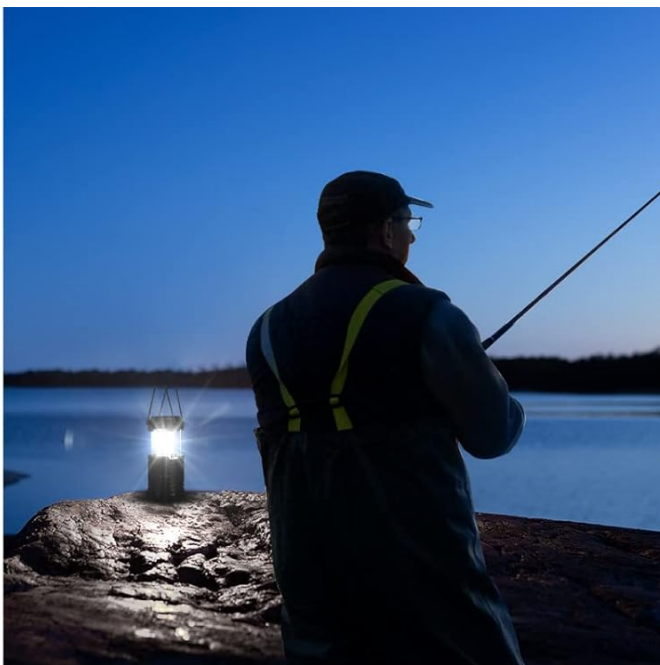

The lantern in various settings: camping, fishing, illuminating a car engine, and providing light indoors during a power outage.

SETUP

Battery Installation

Your Lepro LED Camping Lantern requires 3 AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Twist the base of the lantern counter-clockwise to open the battery compartment.
2. Insert 3 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Twist the base clockwise to securely close the battery compartment.



A close-up view of the battery compartment, showing where to insert the AA batteries.

OPERATING INSTRUCTIONS

Turning On/Off and Adjusting Brightness

The lantern features a simple pull-up mechanism for activation and brightness control:

1. To turn on the lantern, gently pull the top section upwards from the base. The light will illuminate as it extends.
2. To adjust the brightness, continue pulling the top section further upwards for brighter light, or push it downwards for dimmer light.
3. To turn off the lantern, fully collapse the top section back into the base.

SUPER BRIGHT 360° Beam Angel



The lantern fully extended and emitting a super bright 360-degree beam, illuminating the surrounding area.

COLLAPSIBLE BRIGHTNESS CONTROL



Two lanterns demonstrating the collapsible brightness control, showing a dim setting when partially extended and a bright setting when fully extended.

MAINTENANCE

Cleaning

To clean your lantern, wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the lantern in water. Ensure the lantern is completely dry before storing.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and corrosion. Store the lantern in a cool, dry place, away from direct sunlight and extreme temperatures.



The lantern is shown in a rainy outdoor environment, highlighting its IPX4 water-resistant rating, suitable for light rain or snowy conditions.

TROUBLESHOOTING

Issue	Solution
Lantern not turning on	Ensure batteries are installed correctly with proper polarity. Replace old or depleted batteries with new ones.
Light is dim or flickers	This indicates low battery power. Replace all 3 AA batteries with new ones.
Lantern does not collapse smoothly	Check for any obstructions or debris in the collapsible mechanism. Ensure the lantern is clean.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.35"L x 3.35"W x 7.2"H (extended)
Brightness	190 Lumen
Water Resistance Level	IPX4 Water Resistant
Battery Life	14 Hours
Light Source Wattage	2 Watts
Number of Batteries	3 AA batteries (per lantern, not included)
Voltage	4.5 Volts (DC)
Material	Plastic



Detailed dimensions of the Lepre LED Camping Lantern in both collapsed and extended states.

WARRANTY INFORMATION

This Lepre LED Camping Lantern comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or warranty claims, please visit the official Lepre Store or contact customer service:

- **Lepro Store:** [Visit the Lepro Store on Amazon](#)