

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 26.5V AC/DC Adapter User Manual for TOPPIN TPVC001 S1 and TPVC002 S2 Cordless Stick Vacuums

UPBRIGHT TPVC001 S1, TPVC002 S2

UpBright 26.5V AC/DC Adapter User Manual

For TOPPIN TPVC001 S1 and TPVC002 S2 Cordless Stick Vacuum Cleaners

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your UpBright 26.5V AC/DC Adapter. This power supply is designed for compatibility with TOPPIN TPVC001 S1 and TPVC002 S2 cordless stick vacuum cleaners. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: TOPPIN Cordless Vacuum Cleaner (Compatible Model)

Important Note: This adapter is designed for direct charging of the vacuum cleaner. It is **not** compatible with charging docks or stations. Ensure your vacuum cleaner model or part number matches the compatible models listed (TOPPIN TPVC001 S1, TPVC002 S2) before use.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Use only with specified TOPPIN TPVC001 S1 and TPVC002 S2 cordless stick vacuum cleaners.
- This adapter is for indoor use only. Do not expose to rain or moisture.
- Do not disassemble or modify the adapter. Refer all servicing to qualified personnel.
- Ensure the adapter is connected to a power outlet within the specified input voltage range (100-240VAC, 50/60Hz).
- The adapter features Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard your device.
- Always unplug the adapter from the wall outlet when not in use or during electrical storms.
- Keep the adapter away from heat sources and ensure adequate ventilation.
- Do not handle the adapter or its cable with wet hands.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x UpBright 26.5V AC/DC Power Adapter
- 1 x Charging Cable (integrated with adapter)

UpBright AC Adapter Power Supply Compatible with:



Figure 2: UpBright 26.5V AC/DC Power Adapter



Figure 3: Example of International Outlet Adapters (if applicable)

4. SETUP AND INSTALLATION

1. **Verify Compatibility:** Confirm that your vacuum cleaner is a TOPPIN TPVC001 S1 or TPVC002 S2 model. The charger's output voltage is 26.5V. Note that the vacuum's battery voltage is 22.2V, which is different from the charger's output voltage.
2. **Connect to Vacuum:** Locate the charging port on your TOPPIN cordless stick vacuum cleaner. Insert the barrel round connector of the UpBright adapter firmly into the vacuum's charging port.
3. **Connect to Power Outlet:** Plug the AC adapter into a standard wall power outlet (100-240VAC, 50/60Hz).
4. **Charging Indicator:** Observe the charging indicator on your vacuum cleaner (refer to your vacuum's manual for specific indicator behavior).

Important: This adapter is designed for direct charging only. Do not attempt to use it with a charging dock or station, as it is not compatible with such setups.

5. OPERATION

Once connected, the adapter will begin charging the vacuum cleaner's battery. The charging time will vary depending on the battery's current charge level and capacity. Always ensure the vacuum is turned off during charging for optimal performance and

safety.

- **Input:** 100-240VAC, 50/60Hz
- **Output:** 26.5VDC, 0.5A - 0.55A (500mA - 550mA)
- **Wattage:** 150W - 250W (compatible with vacuums requiring this range)

Disconnect the adapter from the vacuum and the wall outlet once charging is complete or if the vacuum is not in use for an extended period.

6. TROUBLESHOOTING

If you encounter issues with your UpBright AC/DC Adapter, consider the following:

- **Vacuum not charging:**
 - Ensure the adapter is securely plugged into both the wall outlet and the vacuum's charging port.
 - Verify the wall outlet is functional by testing it with another device.
 - Check for any visible damage to the adapter cable or connector.
 - *Note: Rechargeable batteries have a limited lifespan (typically 1 to 3 years). If the vacuum's battery is old or defective, it may not accept a charge, which is a battery issue, not an adapter issue.*
- **Adapter feels hot:**
 - It is normal for the adapter to feel warm during operation. However, if it becomes excessively hot or emits a burning smell, immediately unplug it and discontinue use.
 - Ensure the adapter has adequate ventilation and is not covered.
- **Sparks when plugging in:**
 - A small spark can sometimes occur when plugging in electrical devices. However, if large or consistent sparks are observed, immediately unplug the adapter and discontinue use. This may indicate a fault with the adapter or the outlet.

7. SPECIFICATIONS

Brand	UPBRIGHT
Model Number	TOPPIN TPVC001 S1 Power Supply (Compatible with TPVC002 S2)
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	26.5VDC
Output Amperage	0.5A - 0.55A (500mA - 550mA)
Wattage	150W - 250W
Connector Type	Barrel Round Connector
Special Feature	OVP, OCP, SCP Protection (Over Voltage, Over Current, Short Circuit)
Product Dimensions	3 x 2 x 1 inches
Item Weight	2.08 ounces
Included Components	Power adapter and charging cable

8. WARRANTY AND SUPPORT

UpBright products are designed for reliability and performance. This product comes with the following warranty:

- **30-Day Refund:** If you are not satisfied with your purchase, you may be eligible for a refund within 30 days of purchase.
- **24-Month Exchange:** The product is covered by a 24-month exchange policy for manufacturing defects.

For warranty claims or technical support, please contact your retailer or the UpBright customer service. Please have your purchase details and product model number ready.



Figure 4: UpBright Limited Warranty Certificate (example)

© 2024 UpBright. All rights reserved.

This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B099ZMJ1NT>

More documents and user manuals: <https://manuals.plus/>