

Elegant Designs LT2100

Elegant Designs LT2100 Stacked Stone Double Gourd Ceramic Lamp

MODEL: LT2100

Introduction

This manual provides instructions for the safe and proper assembly, operation, and maintenance of your Elegant Designs LT2100 Stacked Stone Double Gourd Ceramic Lamp. Please read all instructions carefully before use and retain this manual for future reference.

Safety Information

- **Indoor Use Only:** This lamp is designed for indoor use in dry locations. Do not expose to water or excessive humidity.
- **Electrical Safety:** Ensure the power outlet matches the lamp's voltage (120 Volts). Do not use with damaged cords or plugs.
- **Bulb Type:** Use only one 60W equivalent Type A bulb with an E26 Medium base. Exceeding the recommended wattage may cause overheating.
- **Placement:** Place the lamp on a stable, flat surface to prevent tipping. Keep away from flammable materials.
- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry cloth. Do not use liquid or abrasive cleaners.

Package Contents

Verify that all components are present before assembly:

- Ceramic Lamp Base (1)
- Fabric White Shade (1)
- Harp (1)
- Finial (1)
- Socket Nut (1)

Setup and Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a clean, flat surface.
2. **Attach Harp:** Locate the two U-shaped prongs on the lamp base. Squeeze the two ends of the harp together and insert them into the prongs until they click into place. Ensure the harp is securely attached.



Image: Lamp socket with harp assembly.

3. **Install Bulb:** Screw one 60W equivalent Type A bulb (not included) into the lamp socket. Do not overtighten.
4. **Place Shade:** Position the fabric white shade onto the harp, ensuring the shade rests evenly on the harp's top ring.

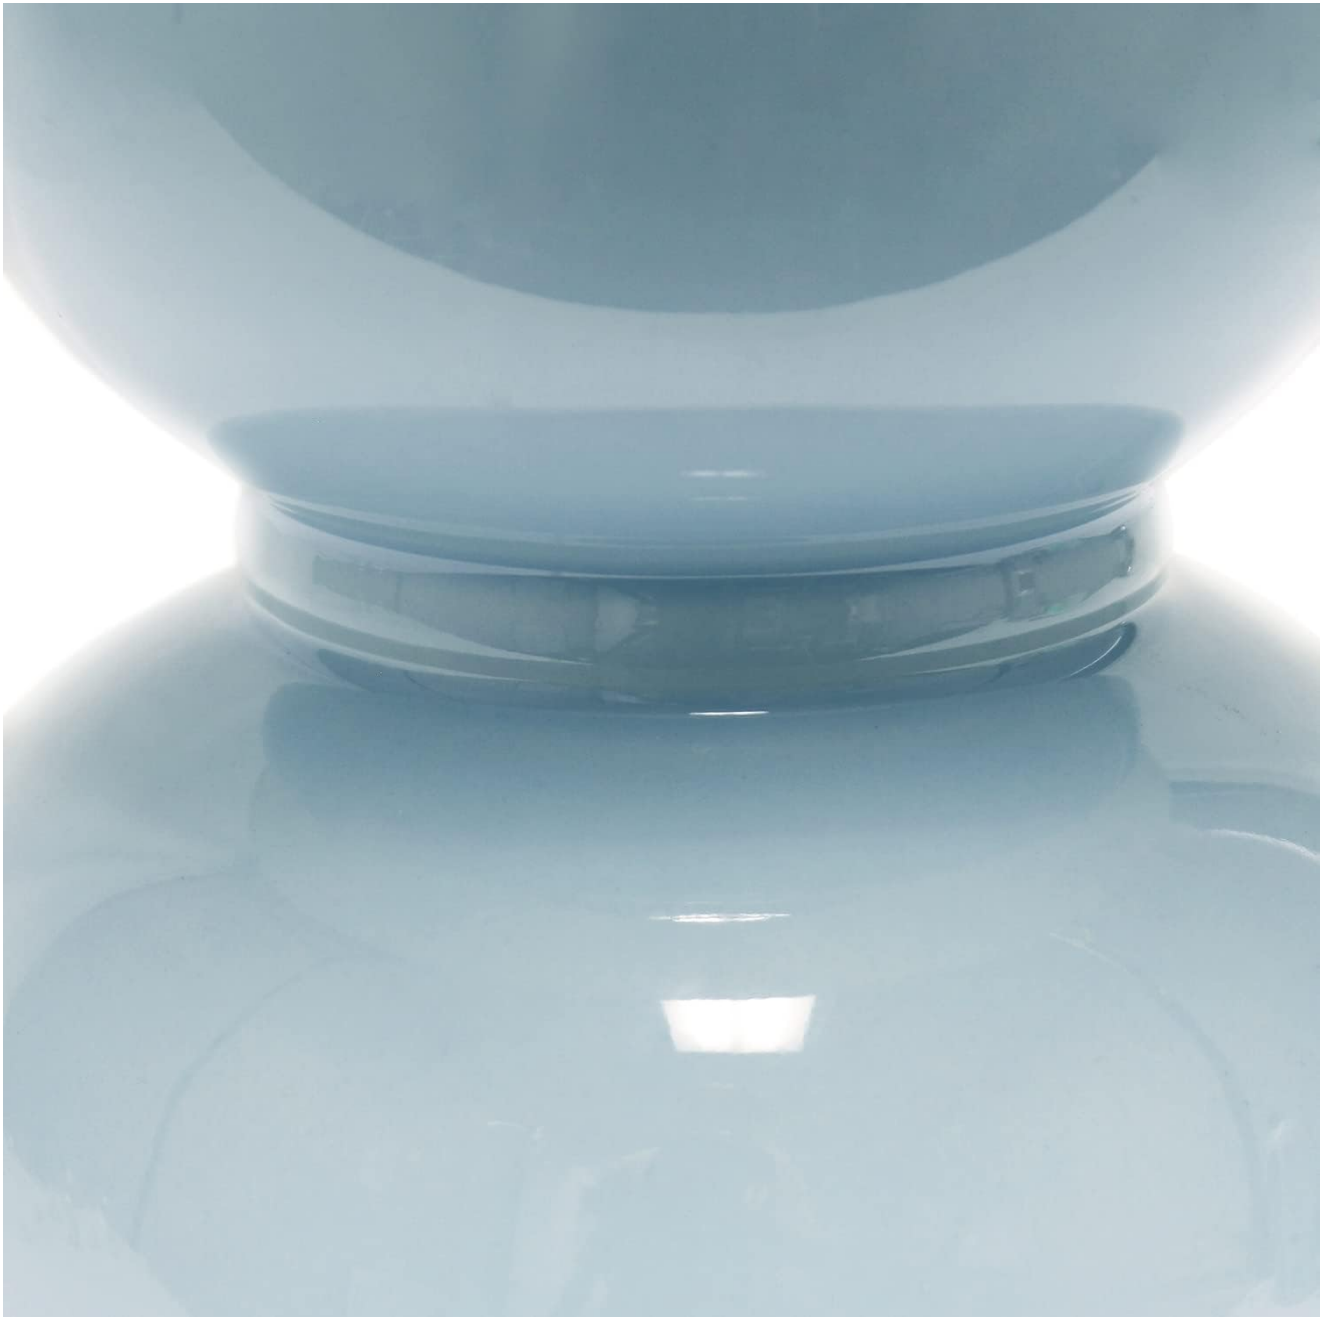


Image: Placing the lamp shade onto the harp.

5. **Secure Finial:** Screw the finial onto the threaded rod at the top of the harp to secure the shade in place.
6. **Connect Power:** Insert the power plug into a standard 120V electrical outlet. Ensure the cord is not pinched or obstructed.



Image: Power cord connection at the lamp base.

Operating Instructions

To turn the lamp **ON** or **OFF**, locate the easily accessible rotary switch on the lamp socket. Rotate the switch clockwise to turn the lamp on, and counter-clockwise to turn it off.

Maintenance

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Wipe the ceramic base and shade with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.

- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled completely before attempting to replace it. Unscrew the old bulb and replace it with a new 60W equivalent Type A bulb with an E26 Medium base.

Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	1. Lamp is unplugged. 2. Bulb is loose or burnt out. 3. Power outlet is not working.	1. Ensure the lamp is securely plugged into a working outlet. 2. Tighten or replace the bulb. 3. Test the outlet with another appliance.
Lamp flickers.	1. Loose bulb. 2. Incorrect bulb wattage.	1. Tighten the bulb. 2. Ensure the bulb is 60W equivalent Type A.
Shade is wobbly.	Finial is not tightened.	Tighten the finial securely onto the harp.

Specifications



Image: Product dimensions.

Feature	Detail
Model Number	LT2100
Product Dimensions (D x W x H)	13" x 13" x 21.25"
Item Weight	4.5 Pounds
Base Material	Ceramic
Shade Material	Fabric
Shade Color	White
Finish Type	Ceramic
Bulb Base	E26 Medium
Bulb Shape Size	A19
Wattage	60 watts (equivalent)
Voltage	120 Volts

Feature	Detail
Switch Type	Standard (Rotary)
Indoor/Outdoor Usage	Indoor

Warranty and Support

This Elegant Designs lamp comes with a **1-year limited warranty** against manufacturer defects. For warranty claims or technical support, please contact the manufacturer, All the Rages, Inc., directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question